



177CPO16TSGL

Countertop Snack Oven

Base Models: _____

#177CPO16TS

#177CPO16TSGL

Note:

Please read the manual thoroughly prior to equipment set-up, operation, and maintenance.

Table of Contents

Safety	3
Assembly	4
Before Using Your Oven.....	4
Usage	5
Cleaning.....	5



Intertek
4010483



NEMA 5-15P

Safety

This manual contains important information regarding safe operation of your Avantco snack oven. Please read thoroughly before equipment setup, operation, or maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty!

- Do not come in direct contact with hot surfaces.
- Avoid cooking oversized foods.
- Keep the top of the unit clear. Do not store items on top of the unit.
- Do not stack ovens on top of each other.
- Do not cook greasy foods; grease may damage the heating coils.
- Only plug into a NEMA 5-15P, 3-prong grounded outlet. Forcing the unit into another plug may cause an electrical hazard.
- Do not plug in, unplug, or operate the unit with wet hands due to the risk of electrical shock.
- Keep the unit, plug, and cord clear of liquid and do not immerse any part in liquid.
- When idle or cleaning, unplug the unit from outlet.
- Never leave the oven unattended during operation.
- This unit is not to be used for anything other than its intended use.
- Do not operate this oven outdoors.
- Keep unit and surrounding area clean and dry. Operate only on firm, level surfaces with 12" of clearance on the top and all sides.
- Do not use the unit if it is damaged, if the cord and plug are damaged, or if there is a malfunction at any time.
- Children and animals should be kept away from this unit.
- Only allow certified and insured food service equipment technicians to conduct repairs. Incorrect installation, alterations, adjustments, and maintenance can lead to property loss and injury. Always consult a professional.
- Ensure the unit has a designated power supply of correct voltage and is adequate for continued usage.
- Opening or removing the cover of this unit will void the warranty.

Assembly

1. Ensure that there is at least 12" of clearance on all sides, including the top and back of the unit.
2. The oven should be installed on a flat, sturdy surface.
3. Line up the unit handle and panel together, being sure that the handle will flip upwards.
4. To insert the grill, insert the hook into the oval opening on the panel. The hook will be facing upwards when installing.
5. Place the washer on the bolt and insert into the top round hole through the handle and panel.
6. Secure tightly with the included screw from behind the panel.
7. Be sure that the unit is only plugged into a NEMA 5-15P outlet to minimize shock or fire hazard.

NOTE: Improper assembly of the flip up handle to the grill could cause the grill to turn or fall off when moving product, possibly causing injury or burns.

Before Using Your Oven

Using a small amount of detergent, wash the rack with soapy water. (NOTE: Do not use a spray or abrasive polishing agent). Gently wipe down interior walls with a damp cloth. While washing this unit, do not touch the electric heating element. Do not soak the inside of the oven with water.

After cleaning as noted above, close the door and set timer for 5 minutes.

After the timer has reset to zero, open the oven door in order to remove any smoky residue from inside the oven. The heating elements are well lubricated and this initial use will help burn off the extra grease. A light amount of smoke is normal during this process.

Usage

1. Preheat oven to desired temperature. Preheating generally takes around 10 minutes.
2. Set the desired temperature using the thermostatic controls (150 degrees Fahrenheit – 570 degrees Fahrenheit).

IMPORTANT: MAINTAIN CONSTANT SUPERVISION OF THE OVEN WHILE IN USE!

3. Caution should be used when removing food from the oven. Oven mitts or other protective gear should be used to avoid skin contact with the hot panel.
4. Unplug when storing for extended periods.

Cleaning

NOTE: To maintain cleanliness and increase life of the unit, the oven should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical components of the unit, it may cause a short circuit or electrical shock.

WARNING: Use caution while cleaning as there may be sharp edges on or inside of the unit.

WARNING: Unplug and allow unit to cool completely before cleaning.

1. Slide out the crumb tray and remove any food debris or other soil.
2. Wipe the crumb tray with a damp cloth.
3. Return the crumb tray to its proper position.
4. Wipe the outside of the unit with a damp cloth, then wipe dry. To avoid damage, do not use abrasive cleaners or scouring pads. If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleaning. Chemical residue could damage or corrode the surface of the unit.