



90 Cup Electric Rice Warmer



CONFORMS TO UL STD. 197

Items: 177RWGB90

05/2024

Please read and keep these instructions. Indoor use only.

This manual provides the installation, safety, and operating instructions for Electric Rice Warmers. Galaxy recommends all installation, operating, and safety instructions appearing in this manual to be read prior to installation or operation of the unit.

Safety Warnings

Galaxy Rice Warmers are designed, built, and sold for commercial use and should be operated by trained personnel only. Clearly post all cautions, warnings, and operating instructions near each unit to ensure proper operation and to reduce the chance of personal injury and/or equipment damage.

WARNING **Potential hazard or unsafe practice, which could result in serious injury or death.**


- DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Keep the area free and clear of combustible materials.
- DO NOT immerse unit in water.
- DO NOT remove or open the BOTTOM cover to reduce chance of electric shock. No user-serviceable parts inside. Refer servicing to qualified personnel.
- Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death.

CAUTION **Potential hazard or unsafe practice, which could result in minor or moderate injury or product/property damage.**

- Read all instructions carefully before using the appliance for the first time.
- These models are designed, built, and sold for commercial use only. If these models are positioned so the general public can use the equipment, make sure all cautions, warnings, and operating instructions are clearly posted near each unit so that anyone using the equipment can use it correctly and not injure themselves or damage the equipment.
- DO NOT use outdoors.
- DO NOT share an outlet with another appliance while the Rice Warmer is operating.
- CAUTION: HOT SURFACES.
- CAUTION: To reduce the risk of electric shock, warm only in removable container.
- CAUTION: Risk of fire or electric shock. Only operate this appliance with the removable container in place.
- Rice warmer should be stored and operated away from high temperatures.
- DO NOT block the steam vent on the top of the lid.
- Before plugging in power cord, ensure voltage rating of outlet is suitable for the equipment.
- DO NOT plug in the unit without a pot in the rice warmer.
- DO NOT heat inner pot on any other stove.
- ONLY use the inner pot provided. Using other brands may cause damage and void the warranty.
- ALWAYS make sure the cover is properly locked when warming.
- DO NOT use abrasive sponges and scrubbers that could scratch surface.
- Damage to power lines should be repaired by a certified technician.
- Keep out of reach of children.
- This product is not prepared for people with certain limitations (including children).
- Locate unit in an area that is convenient for use. The location should be level and strong enough to support the weight of the unit and contents.

Specifications & Parts Identification

Capacity	90 Cups
Voltage	120V
Wattage	105W
Phase	1
Frequency	60 Hz
Plug Type	NEMA 5-15P

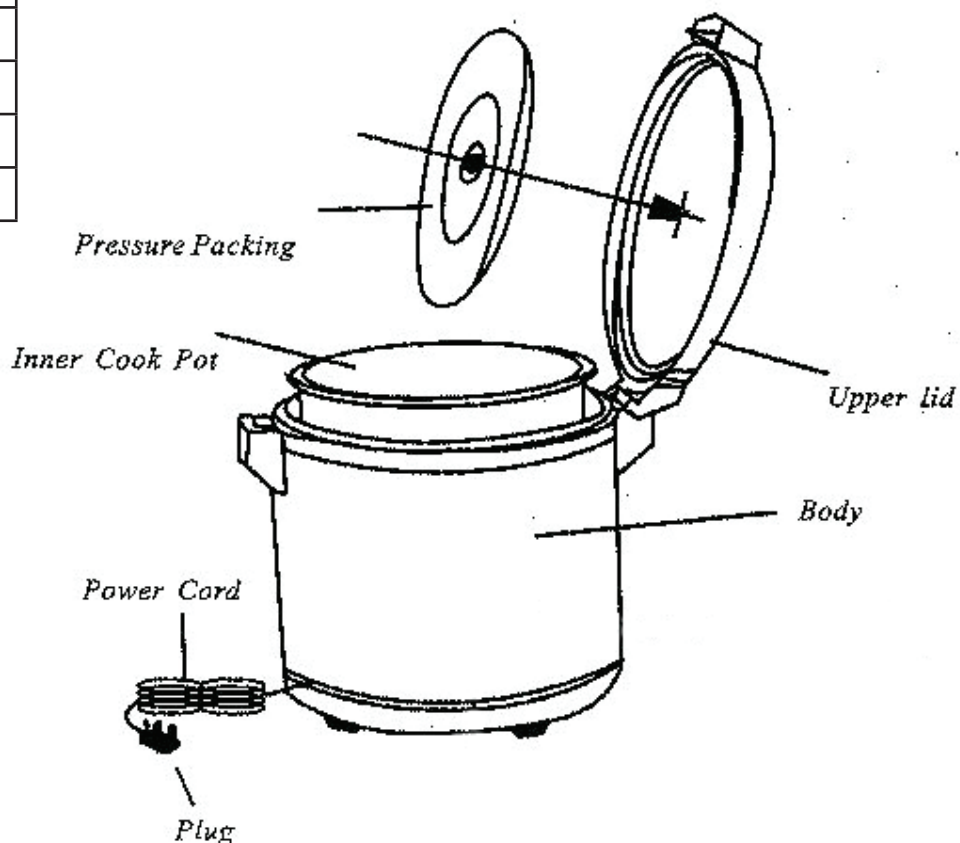

Operation

- This unit is NOT for cooking rice from a raw state. It is only to be used to keep fully cooked product warm.
 - This rice warmer will automatically keep rice warm provided the power cord remains plugged in.
 - For safety reasons, always disconnect the power cord from the wall outlet when the warmer is not being used, or when removing the inner pot from the outer pot.
 - For best results, do not exceed a warming period of 12 hours.
 - Store leftover rice in the refrigerator and re-heat in the warmer with water to prevent the rice from drying out.
1. Add fully cooked rice to the inner pot.
 2. Close the cover and lock in place.
 3. Plug the cord into the power outlet.
 4. Stir rice before serving.
Note: ONLY use plastic or rubber utensils (such as the supplied paddle), as metal utensils may damage the coating.
 5. Clean the unit after each use (see cleaning instructions on page 4).

Cleaning

1. Unplug the power cord from the outlet and allow to fully cool before cleaning.
2. Remove the inner pot from the rice warmer.
3. DO NOT immerse any part of the outer body in water.
4. Clean the outside of the rice warmer with a damp cloth. Use a clean cloth to dry.
5. To clean the inner pot, soak in hot, soapy water then scrub using a rubber or foam sponge.
Note: DO NOT press down too hard or drop anything on the bottom of the inner pot, as this can cause warping and inhibit the proper functioning of the rice warmer.
Note: DO NOT use rough or metal utensils to clean the inner pot, as this may damage the non-stick coating.
6. Use a clean cloth to dry or allow to air dry.
7. Clean the heater pieces with a damp cloth, then immediately use a clean cloth to dry.
8. Ensure all pieces are fully dry before re-assembly and storage.

Troubleshooting

Issue	Solution
Unit does not turn on	Check multiple outlets for a power connection. Ensure your outlet is properly wired for the electrical specifications of this unit.
Air leaks from the lid during warming	Ensure the top cover is properly secured.
	Replace the inner pot.
Dead upon arrival	Trying plugging into multiple outlets. If this does not resolve the issue and your unit is under warranty, reach out to customer service.
Power is on, but unit will not get hot	Make sure the outer bottom of the pot and the inner plate of the drum are cleaned. All of these areas must be clear from all liquid, dirt, or rice to fit flush together and work properly.