



1000W Stackable 1.2 Cu. Ft. Commercial Microwave



Model: 180MW112D

10/2024

Please read and keep these instructions. Indoor use only.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical equipment, basic safety precautions should be followed to reduce the risk of burns, electrical shock, fire, or injury to persons.

READ all of the instructions before using this equipment.

1. This equipment **MUST BE GROUNDED**. Connect only to properly **GROUNDED** outlet. See "GROUNDING INSTRUCTIONS" on page 3 for further details.
2. Use this equipment **ONLY** for its intended use as described in this manual. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
3. **DO NOT** heat items able to explode in this microwave, such as eggs, sealed containers, glass jars, etc.
4. **DO NOT** operate this equipment if the cord, plug, and/or door is damaged, it is not working properly, or if it has been damaged or dropped.
5. This equipment, including power cord, must be serviced **ONLY** by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
6. **DO NOT** cover or block filter or other openings on equipment.
7. **DO NOT** store this equipment outdoors.
8. **DO NOT** use this product near water or immerse the cord and/or plug in water.
9. Keep cord **AWAY** from **HEATED** surfaces.
10. **DO NOT** let cord hang over edge of table or counter.
11. **DO NOT** overcook food as to avoid fire in oven cavity.
12. If materials inside the oven ignite, keep oven door **CLOSED**, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
13. **DO NOT** use the cavity for storage.
14. Do not overheat liquids.
15. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
16. **DO NOT** operate equipment without load or food in oven cavity.
17. **DO NOT** use metal utensils in oven.
18. **NEVER** use paper, plastic, or combustible materials that are not intended for cooking.
19. Clean oven regularly and remove any food deposits.
20. For commercial use only.
21. **WARNING:** This microwave must be installed at or above countertop level. The bottom of the door opening must be at least 36" (91.4cm/914mm) off the ground.
22. **HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE.** Use caution when removing hot items.

 
WARNING

This device complies with part 18 of the FCC Rules. FCC RF Exposure Requirements:
This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

To avoid risk of electrical shock or death, this oven must be grounded.
To avoid risk of electrical shock or death, do not alter the plug.
Hot contents can cause severe burns. Do not allow children to use this product.
Use caution when removing hot items.

Countertop Installation

1. Remove all packing material and accessories.
2. Examine the oven for any damage such as dents or a broken door. Do not install if oven is damaged.
3. Remove any protective film on the oven's cabinet surface.

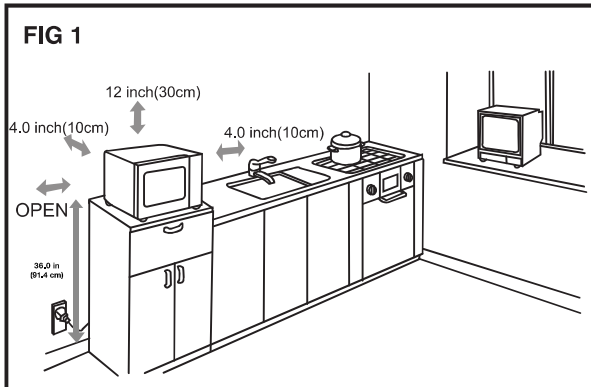


Installation

1. Select a level surface that provides enough open space for the intake and/or outlet vents (FIG 1).

A 4" (10 cm) spacing should be kept between the appliance and right and back walls, and a 12" (30 cm) spacing kept on the top. Never dismantle the appliance's feet, and do not block the air intake and exhaust opening. The left side must be open.

  - A.) Blocking the intake and/or outlet openings can damage the oven.
 - B.) Place the oven as far away from radios and TVs as possible. Operation of microwave oven may cause interference to your radio or TV reception.
 - C.) Plug your oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.
 - D.) **WARNING:** The plug socket, electric appliances, or the appliance which can be effected by heat and moisture should be kept away from any vents on the oven.
2. Stacking installation instructions below. Never stack more than two units.
 - A.) Loosen screws and remove mounting plates as shown (FIG 2). Retighten the screws after the mounting plates have been removed.
 - B.) Remove the corner screws as shown in FIG 2. This is where the units will mount together.
 - C.) Mount the mounting plates removed in Step A in the position where the screws were removed in Step B (FIG 2). Retighten the screws that were removed from the corners to secure the mounting plates.

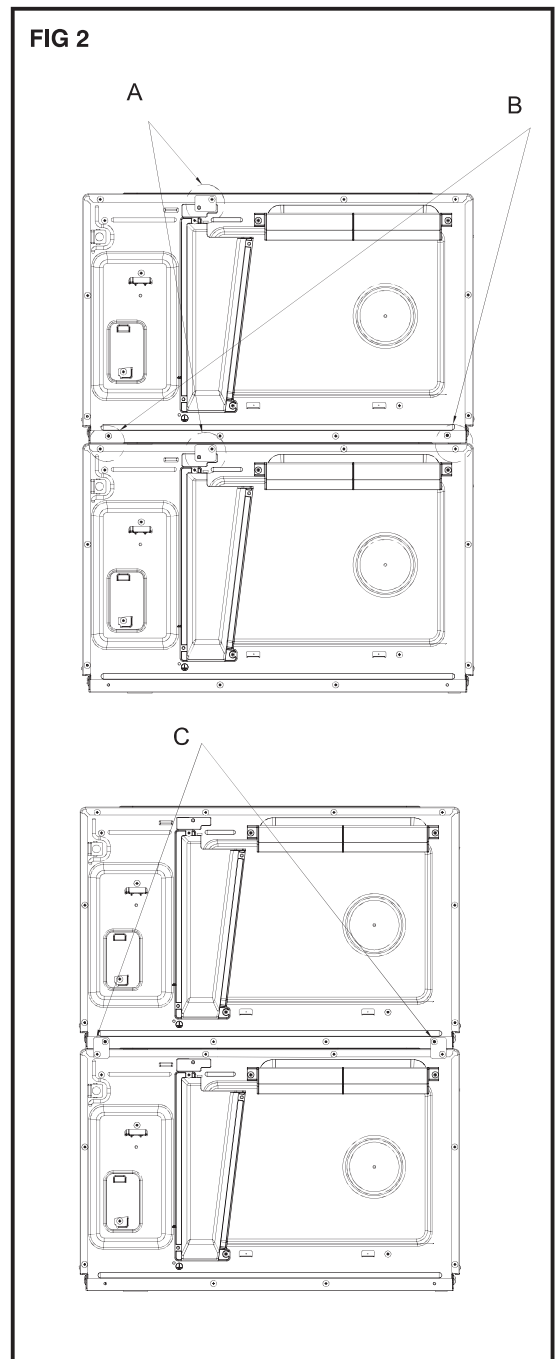

DIAL OPERATION

Instructions

1. In waiting state, turn the dial left to choose the microwave power from 100% to 20% (100%, 70%, 50%, 20%).
2. Turn the dial right to adjust the cooking time (the range of time is from 15 seconds to 6 minutes).
3. The cooking begins.
4. The buzzer will sound (5) five times when cooking finishes, then return to waiting state.

Interrupting Operation

 
Open oven door to interrupt operation or turn time entry knob counterclockwise to "0."

When cooking is interrupted by opening door, oven automatically resets to zero time.

To resume microwave oven operation, close door and re-enter desired time by turning knob clockwise.

Changing Time and Canceling Mistakes

Heating time can be changed at any time while the oven is operating. Turn knob to desired new setting. To set cooking time to zero, turn knob counterclockwise to "0." Setting the time to zero cancels the set cooking time and turns the oven off.

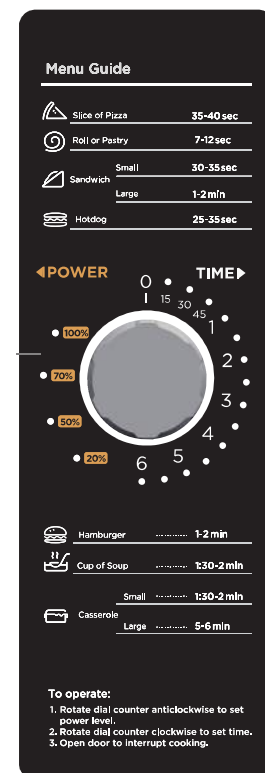

CARE AND CLEANING

To avoid electrical shock that can cause severe personal injury or death, unplug power cord or open circuit breaker to oven before cleaning or removing lightbulb.

- Cleaning the interior and exterior will require a mild detergent, water, and a soft sponge or cloth.
- Do not use water pressure cleaning systems on your microwave.
- Do not use cleaners that include ammonia or citrus.
- Inspect air vents monthly and clean using a damp cloth.

TROUBLESHOOTING

COMPLAINT	POSSIBLE CAUSE	REMEDY
Dim oven light.	Cooking at low power level.	This is normal.
Steam forms on oven door.	When cooking foods in a microwave, steam is generated.	This is normal.
Hot air expelled from vents.	Foods cooking in a microwave may release heat.	This is normal.
Oven does not start.	Power cord not plugged in correctly.	Plug cord into outlet correctly.
	Fuse blown or circuit breaker open.	Replace fuse (should be repaired by authorized servicer) or reset breaker.
	Malfunctioning outlet.	Test outlet with other electrical appliances.
	Door not closed.	Close door.