

VACPAK-IT

ULTIMA

EXTERNAL VACUUM PACKAGING MACHINES



#186UVME12SS

12" Seal Bar

120V • 460W

#186UVME16SS

16" Seal Bar

120V • 550W

09/2020

TABLE OF CONTENTS

Safety Tips	1
Food Storage and Safety	2
Control Panel & Specifications	3
Features	4
Cleaning & Care	5
Operating Instructions	6
Troubleshooting	7
Warranty	8


SAFETY TIPS

- Read this manual carefully before use
- DO NOT use on or near a heat source
- DO NOT immerse any part of the unit in water
- Unplug unit when not in use
- DO NOT pull the cord when unplugging the unit
- DO NOT operate if plug or cord is damaged
- DO NOT operate if unit is damaged or malfunctions
- Only use unit for intended use
- DO NOT allow children to use unit
- Only use a grounded outlet
- DO NOT modify the plug in any way
- DO NOT allow cord to drape over counter or tabletop
- DO NOT use near burner or oven
- Use caution when sealing hot items
- DO NOT use outdoors

FOOD STORAGE & SAFETY

Vacuum packaging with any model in the VACPAK-IT line will yield unbelievable results. These machines remove up to 90% of the air from the package. This will help keep food fresher up to 5 times longer than under normal storage methods. You can store dry foods like pasta, cereal and flour, fresh meats like pork, chicken and beef, vegetables like carrots, potatoes and squash, or even frozen liquids like soups and drink mixes. The possibilities are endless.

Once packaged, there are a variety of unique methods to cook your stored food. You can cook the food traditionally or sous vide it for a tender and lush flavor. Vegetables should always be blanched – cook until crispy and then submerge in cold water to stop the cooking process – to kill any enzymes that may cause out-gassing when vacuumed.

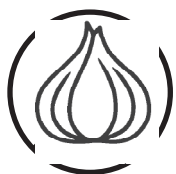

IMPORTANT


NEVER vacuum pack garlic, fungi (like mushrooms), or soft cheese (like Brie, Camembert, and Ricotta).

A dangerous chemical reaction takes place when air is removed, causing them to be extremely dangerous if ingested.




FOOD	TYPICAL STORAGE	VACUUM FRIDGE STORAGE	VACUUM FREEZER STORAGE
Fresh Beef & Veal	1-2 Weeks	1 Month	1-3 Years
Ground Meat	1-2 Weeks	1 Month	1 Year
Fresh Pork	1 Week	2-4 Weeks	2-3 Years
Fresh Fish	3-4 Days	2 Weeks	2 Years
Fresh Poultry	1 Week	2-4 Weeks	2-3 Years
Smoked Meats	2-4 Weeks	6-12 Weeks	3 Years
Fresh Produce (Blanched)	1-2 Weeks	2-4 Weeks	2-3 Years
Fresh Fruits	3-4 Days	2 Weeks	2-3 Years
Hard Cheeses	2-4 Days	6-12 Weeks	6 Months
Sliced Deli Meats	1-2 Weeks	6-12 Weeks	Not Recommended
Fresh Pasta	1 Week	2-3 Weeks	6 Months

CONTROL PANEL

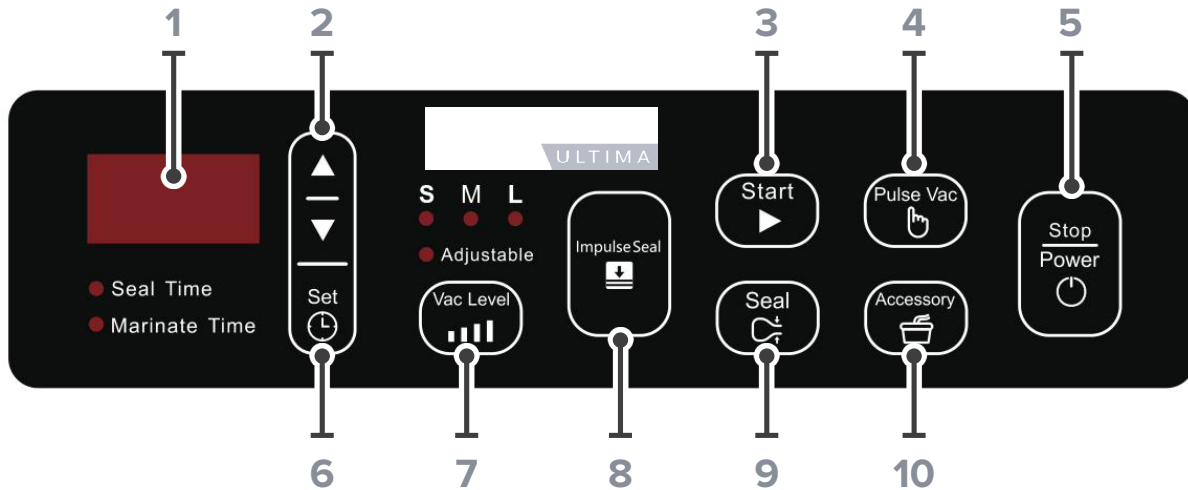

1. **LED Display** - Displays current cycle time in seconds.
2. **Up/Down Arrow Buttons** - Press to increase/decrease the sealing time.
3. **Start Button** - Press to begin the vacuum process.
4. **Pulse Button** - Press and hold for manual vacuuming.
5. **Power/Stop Button** - Press to start/stop the vacuum process.
6. **Set Button** - Press to set the vacuum time.
7. **Vac Level Button** - Press to cycle through vacuum strength levels.
8. **Impulse Seal Button** - Press for an impulse seal. This mode is mainly for bags which do not need to be vacuumed.
9. **Seal Button** - Press to begin the sealing process manually for fragile foods.
10. **Accessory Button** - Press to begin the vacuum process manually for canisters and other external accessories.
11. **Power Button** - Press to turn the machine on or off. Can also be used as an emergency stop button.

 
MODEL SPECIFICATIONS



NEMA 5-15P

Model	UVME12SS	UVME16SS
Dimensions	15"W x 12"D x 6¼"H	19"W x 12"D x 6¼"H
Material	Stainless Steel Body	Stainless Steel Body
Seal Bar	12" Wide	16" Wide
Roll Storage	up to 12" x 50'	up to 15½" x 50'
Voltage	120V	120V
Wattage	460W	550W
Seal Time	0-6 Seconds	0-6 Seconds

FEATURES

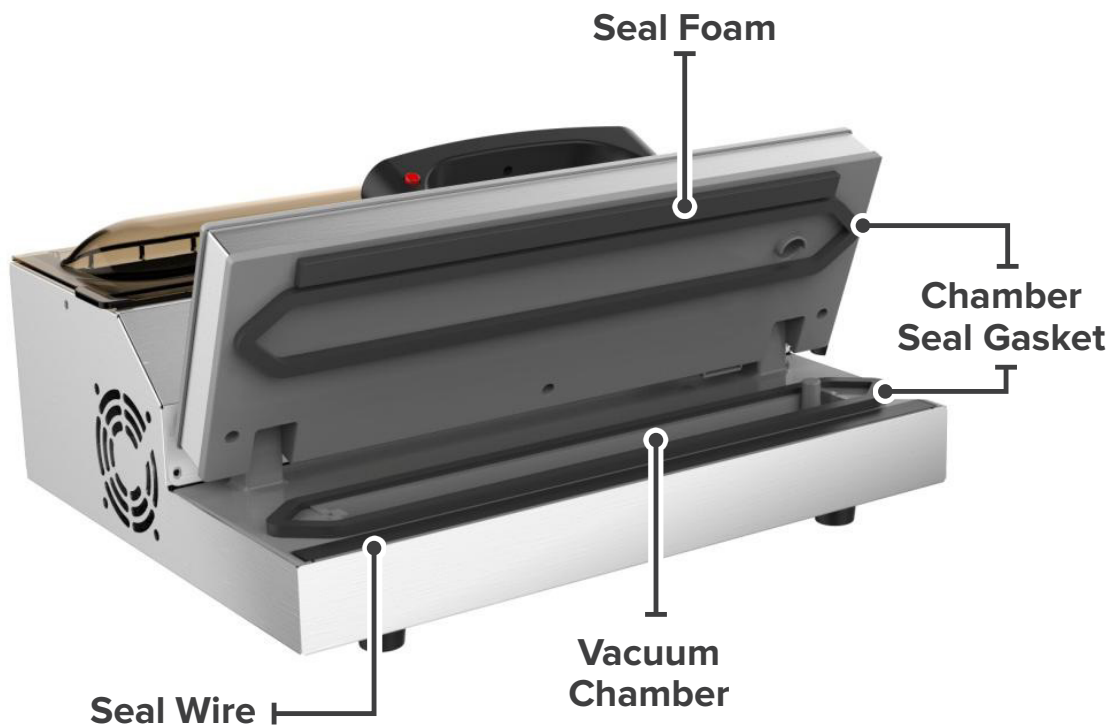

CLEANING & CARE

Note: Always power off and disconnect the power cord before cleaning.

Note: Never immerse the vacuum sealer in liquid.

Note: DO NOT spray cleaner directly on the machine or control panel.

Note: DO NOT store outside.

1. Power off and disconnect the power cord.
2. Check the sealing area and gasket to make sure it is clear of debris.
3. Wipe down with a non-abrasive cleaner like Noble Chemical's 147QUIKSAN.
4. Wipe the area dry.

OPERATING INSTRUCTIONS

How to Make a Bag from a Roll

1. Choose suitable roll no wider than 12" for VME12SSU or 15½" for VME16SSU. This vacuum sealer includes a roll storage and cutter for your convenience. Place the roll in the storage area and pull out the desired length of bag. Lay the edge over the cutter and move the cutting blade across to create a clean even cut.
2. Lay the open end of the bag across the seal bar, making sure the bags ends do not go past the edge of the seal pad.
3. Close the lid by pressing firmly by using the handle.
4. Select desired seal time by pressing set until the seal time light is illuminated. Use the arrows to set your seal time from 0-6 seconds.
5. Press the "Seal" button, the following sequence will occur:
Note: If the machine is used in a cold environment, select 6 seconds for seal time.
 - a. Vacuum cycle begins
 - b. "Seal" Light comes on, cycle starts
 - c. Vacuum cycle ends, Lid unlocks and lifts
6. Remove bag from machine and inspect seal.
Note: A good seal will be clear upon inspection. Seals that are spotty, incomplete, wrinkled, milky, or white colored are inadequate. If this occurs, cut seal portion and restart process at Step 1.
7. Use built in roll cutter to cut bag on the opposite end of seal to desired length.
8. Follow the instructions below for how to Vacuum and Seal with Bags.

OPERATING INSTRUCTIONS

How to Vacuum Seal Bags

Note: If an instant seal is needed, simply press the "Seal" button.

1. Press the "Power" button and set your desired vacuum level and seal time using the set button.
2. Choose suitable sized vacuum bag no wider than 12" for VME12SSU or 15½" for VME16SSU, and place item(s) in bag, leaving at least 3 inches from the contents to the top of the bag to ensure best vacuum sealing.
3. Lay the open end of the bag across the seal bar, making sure the bag ends do not go past the edge of the seal pad.
4. Close the lid by pressing firmly by using the handle.
5. Press the "Start" button to begin the process
Note: If vacuuming fragile or easily crushed items, use the "Pulse" button to manually control the vacuum process. Repeatedly press "Pulse" on and off a few times until you reach the desired vacuum pressure.
6. If using the "Pulse" button, press the "Seal" button to manually seal the bag. Otherwise, the machine will vacuum until it achieves proper vacuum pressure and will automatically go into seal mode.
7. After the Vacuum & Seal cycle ends, the Lid unlocks and lifts. Remove bag from machine and inspect seal.
Note: A good seal will be clear upon inspection. Seals that are spotty, incomplete, wrinkled, milky, or white colored are inadequate. If this occurs, cut seal portion and restart process at Step 1.
8. Store contents of bag normally. All perishable foods will need to be refrigerated or frozen to prevent spoilage.

How to Vacuum Seal Canisters

Note: Choose a container made for vacuum sealing. Place items in canister, making sure there is at least 1" space from the food to the lid, and that the lid is dry and free of food particles.

Note: Do not overfill container.

1. Place lid on top of container, and turn the knob to the "Vacuum" position.
2. Connect the hose from the Accessory Port on the machine to the port on the canister lid.
3. Close the lid by pressing firmly using the handle.
4. Press the "Accy" button while simultaneously pressing the canister lid for 3-5 seconds.
5. After the vacuum process completes, turn the canister lid to the "Lock" position and then remove the hose from the canister lid and machine. Wash the hose as necessary.
6. Store the canister in refrigerator or pantry, depending on item stored. Do not freeze.
7. To open the canister, twist the knob on the canister lid to the "Open" position.

TROUBLESHOOTING

ISSUE	REMEDY
Unit won't turn on	• Ensure the machine is properly plugged into a grounded outlet. • Check the power cord for tears, frays, or other damage. Do not use machine if the power cord is damaged.
Not achieving a complete vacuum	• The edge of the bag must be across the seal bar, and not extend past the chamber, ensure there are no wrinkles in the bag and that the bag is inside the chamber. • Make sure the seal is complete and that the seal is clear. If the seal is spotty, incomplete, wrinkled, milky, or white colored, it is inadequate. Cut seal portion and restart the vacuum process. • Ensure both the sealer and bag are clean, dry and free of debris for the vacuum process to be successful. Wipe the surface of the seal bar and inside of the bag and try again.
Bag loses vacuum after being sealed	• Check for sharp items such as bones, stems, cloves and others that can puncture the bags. • Some fruits and vegetables can release gases if not properly prepared before storing. Make sure to blanch or freeze food before packaging. If in doubt about the quality of the food, discard immediately.
Not vacuuming canisters properly	• Ensure the accessory hose is properly attached to the machine and canister. • Ensure the canister lid knob is turned to the "Vacuum" position. • Leave at least 1" of space between the lid and the top of the food. • Make sure there is no damage to the canister and lid. If there is a crack in either, discard and use a new one.
Buttons not working	• In rare cases, the buttons and/or programs may not work properly. If this occurs, unplug the machine and plug it back in to reset the programming.



EQUIPMENT LIMITED WARRANTY

VacPak-It Ultima warrants its equipment to be free from defects in material and workmanship for a period of 18 months. This is the sole and exclusive warranty made by VacPak-It Ultima covering your VacPak-It Ultima brand equipment. A claim under this warranty must be made within **18 months** from the **date of purchase** of the equipment. Only the equipment's original purchaser may make a claim under this warranty. VacPak-It Ultima reserves the right to approve or deny the repair or replacement of any part or repair request. The warranty is not transferable. VacPak-It Ultima Equipment installed in/on a food truck or trailer will be limited to a period of 30 days from the original date of purchase.

TO MAKE A WARRANTY CLAIM:

For Warranty Inquiries contact the location where you purchased the product:

- **WebstaurantStore.com:** Contact help@webstaurantstore.com. Please have your order number ready.
- **The Restaurant Store:** If you purchased this unit from your local store, please contact your store directly.
- **TheRestaurantStore.com:** Online purchases, call 717-392-7261. Please have your order number ready.

Failure to contact the designated location prior to obtaining equipment service may void your warranty.

VacPak-It Ultima makes no other warranties, express or implied, statutory or otherwise, and **HEREBY DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.**

This Limited Warranty does not cover:

- Equipment sold or used outside the Continental United States
- Use of unfiltered water (if applicable)
- VacPak-It Ultima has the sole discretion on wearable parts not covered under warranty
- Equipment not purchased directly from an authorized dealer
- Equipment used for residential or other non-commercial purposes
- Equipment that has been altered, modified, or repaired by anyone other than an authorized service agency
- Equipment where the serial number plate has been removed or altered.
- Damage or failure due to improper installation, improper utility connection or supply, and issues resulting from improper ventilation or airflow.
- Defects and damage due to improper maintenance, wear and tear, misuse, abuse, vandalism, or Act of God.

Any action for breach of this warranty must be commenced within 18 months of the date on which the breach occurred. No modification of this warranty, or waiver of its terms, shall be effective unless approved in a writing signed by the parties. The laws of the Commonwealth of Pennsylvania shall govern this warranty and the parties' rights and duties under it. VacPak-It Ultima shall not under any circumstances be liable for incidental or consequential damages of any kind, including but not limited to loss of profits.