

Digital Portion Control Scales



334PCOS10

10 lb.

334PCOS20

20 lb.

Specifications

Model		334PCOS10	334PCOS20
Capacity / Division	lb.	11 lb. x 0.001 lb.	22 lb. x 0.001 lb.
	oz.	176 oz. x 0.001 oz.	352 oz. x 0.01 oz.
	lb.:oz.	11 lb. x 0.1 oz.	22 lb. x 0.1 oz.
	kg	5 kg x 0.001 kg	10 kg x 0.001 kg
	g	5000 g x 0.5 g	10000 g x 0.5 g
Weighing Units		lb.: oz., lb., oz., kg, g	
Display		76 x 28mm LCD display with green backlight	
Operating Temp.		41 - 104°F (5 - 40°C)	
Power		Alkaline Batteries: (2) "AA" (not included) Adapter: 6V adapter (included)	
Functions		Weighing, Tare, Unit Switching, Hold, Low Battery & Overload Indication, Auto-Off Function	
Auto-Off Time		5 minutes with battery, none with adapter	
Tare Range		Up to full capacity	
Platform Size		8.6" x 7.5" / 218 x 190mm (L x W)	
Base Dimensions		8.6" x 10.6" x 2.2" / 218 x 270 x 55mm (L x W x H)	

Control Panel



Function Keys

Keys	Definition
POWER	Turn the unit On or Off.
UNIT	Select weight unit of measure.
TARE	Tare the weight.
HOLD	Keep the current weight on the scale.

Setup

Battery Installation and Power Supply

- The scale can be powered with (2) “AAA” batteries or an external power supply.
NOTE: Batteries and power supply can be used at the same time. If used simultaneously, the external power supply will be prioritized. The power supply will not charge the batteries.

Operation

Power On

- Place the scale on a hard, flat, and level surface.
- Press the **POWER** key to power it on. It will display “-188888”, then “0.000lb.”

Normal Weighing

- Place the object on the center of the platform. The scale will display the weight of the object when reading is stable.
- Press the **UNIT** key to switch between metric and imperial units.

Tare Function

- Place an item on the scale and wait for a stable weight.
- Press the **TARE** key to zero out the weight of the item.

Hold Function

- Press the **HOLD** key to keep the current weight of the object on the scale. The weight will remain displayed for 10 seconds or press the **HOLD** key again to stop holding.
- To turn the hold function off: Press and hold the **TARE** and **HOLD** keys until “H-ON” displays, then press the **HOLD** key to toggle between “H-ON” & “H-OFF”. Press the **TARE** key to confirm your selection.

Power Off

- When the scale is powered by batteries, it turns off automatically after (5) minutes of inactivity.
- When the scale is powered by an adapter, press the **POWER** key to power it off.

Cleaning & Storage

- Dampen a cloth with a mild soap solution to clean the scale
- Do not use any harsh chemical cleaners.
- Do not wash down or immerse the scale. Any liquid inside the scale can cause permanent damage.
- Remove batteries from the scale when it will not be used for an extended period of time.

NOTE: Save these instructions for future reference.