


Replacement Parts for Backsplash Faucets

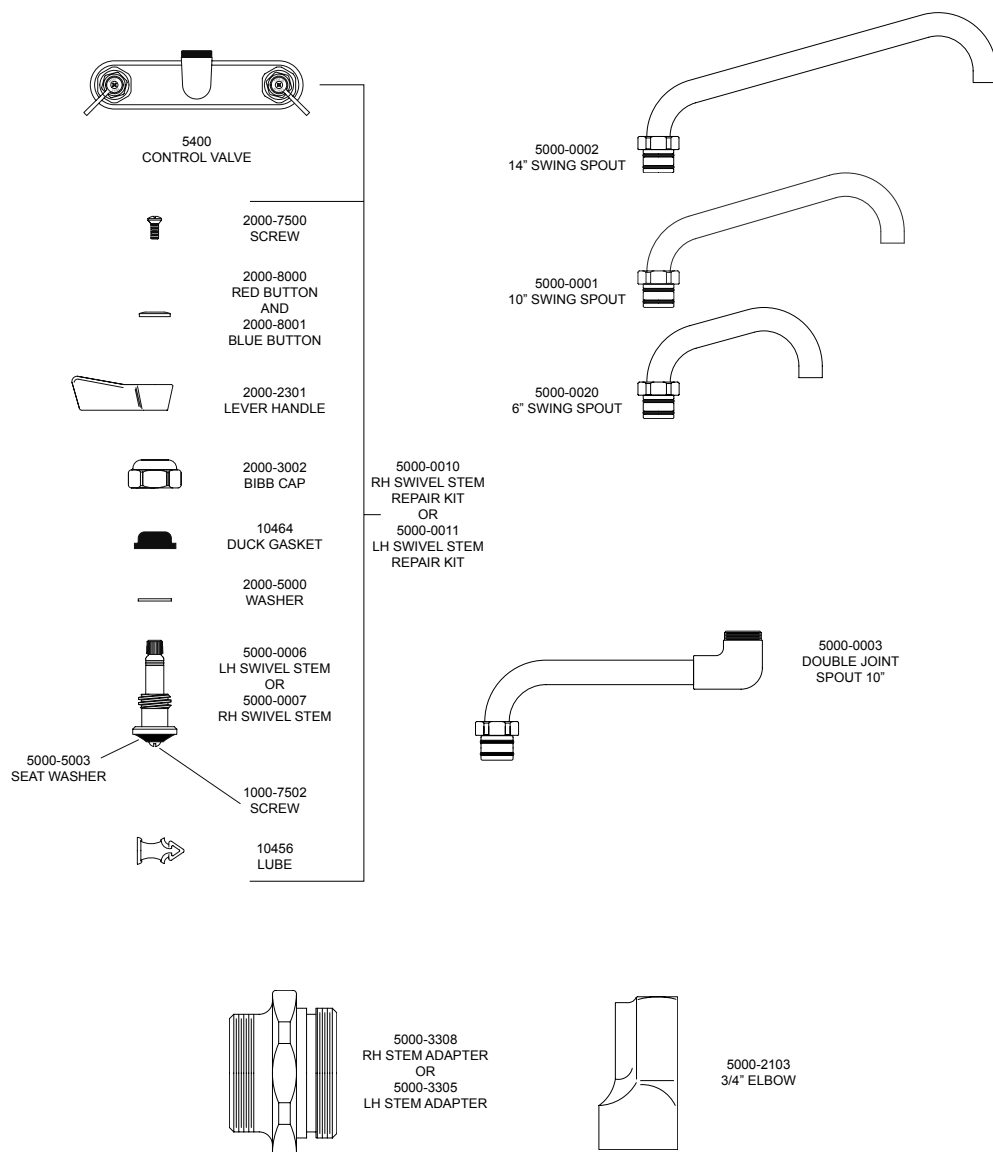

FISHER
FISHER MANUFACTURING COMPANY

3/4" Backsplash Faucet Product Installation Guide



#5412 - 3/4" Backsplash Faucet with 10" Swing Spout

#5414 - 3/4" Backsplash Faucet with 14" Swing Spout

KEEP THIS MANUAL FOR FUTURE REFERENCE



ANSI/A112.18.1M, ANSI/NSF 61.9

FISHER MANUFACTURING COMPANY • TOLL FREE: 800-421-6162 FAX: 800-832-8238

Installation Instructions for Backsplash Faucets

BE SURE TO CHECK WITH YOUR LOCAL DEPARTMENT HAVING JURISDICTION REGARDING BACKFLOW PREVENTION

Installation Notes:

- Be sure to shut off water supply before beginning.
- Use pipe thread sealant such as PST on all threaded joints.
- Check the packaging for missing items BEFORE beginning installation. If items are missing, contact your supplier.


Tools Required for Installation

- Medium Sized Crescent Wrench
- Pipe Thread Sealant



Package Contents


The box should contain the following:

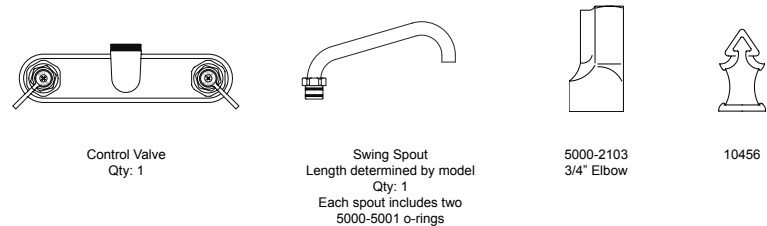

Installation Instructions


1. Mount control valve body to the backsplash by inserting the nipples through the backsplash and attaching washers and locknuts. Tighten the locknuts until the control valve is secure. Be sure to use pipe thread sealant on the nipple threads. Attach elbows and make sure that there are no leaks from back of sink.
2. If installing a double joint spout, apply lube to the o-rings on the spout. Mount the double joint spout and tighten the nut onto the faucet spout outlet.
3. Apply lube to the o-rings on the swing spout. Mount the swing spout and tighten the swing spout nut onto the faucet spout outlet.
4. Turn on water supply and check for leaks.

Step 1

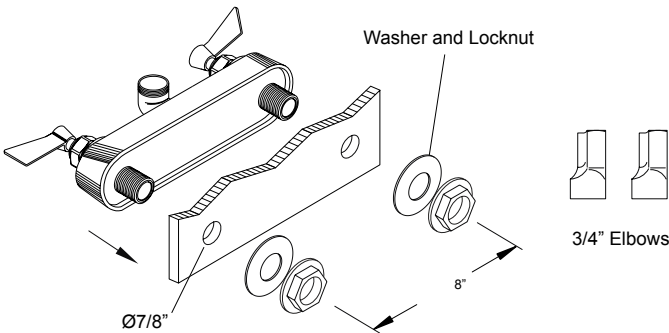


Installation Instructions Continued

Step 2

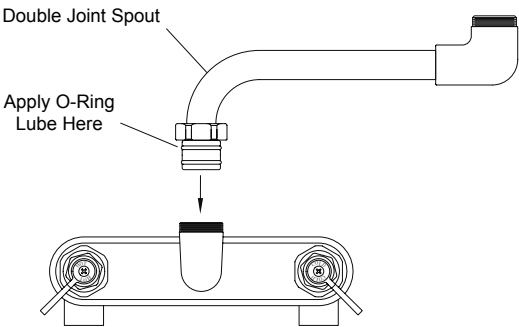

Step 3

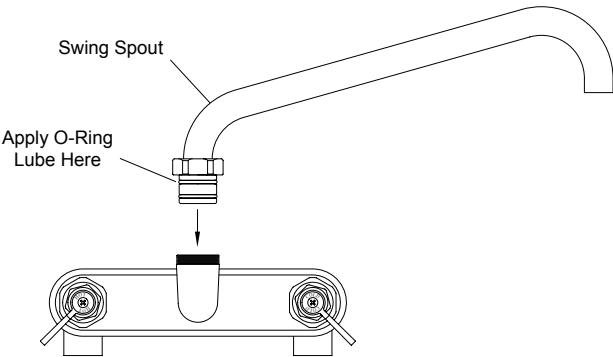

Step 4

