



Plastic Handheld Mandoline with 3 Settings Use and Care Guide

06/2026

Hazard Statements



WARNING
To prevent personal injury.



WARNING
Cut hazards.



WARNING
Wear cut-resistant gloves.

Do Not Use if Damaged: Product should not be used if damage is found. Contact an authorized service center.

Warning: Mandoline blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing the mandoline.

Caution: Store mandoline indoors and away from moisture when not in use to maintain sharpness and prevent rust.

Caution: Dispose of blades and sharp accessories immediately, in a puncture-resistant container, if damaged or broken.

Protect Hands: Keep fingers away from the blades at all times.

Handle Mandoline With Care: Avoid direct contact with razor-sharp edges during attachment changes or cleaning.

Safety Lock: Use the safety lock when not in use.

Store Safely: Store mandoline indoors and keep it dry to prevent rust.

Initial Setup

Unboxing: Carefully remove packaging. Avoid using sharp tools that could damage the product.

- Do not force a box cutter or knife through packaging, as it may damage the product or accessories.
- Ensure you do not damage the product or its components when removing it from the packaging.
- If any damage is present, contact customer service immediately.

Cleaning

Warning: Mandoline blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing the mandoline.

Initial Cleaning

- Clean Before First Use: Wash assembly with warm, soapy water. Rinse thoroughly to remove protective films and oils.
- Dry Components: Air dry or towel dry all parts completely.

Cleaning after Use

- Prepare for Cleaning: Food acids will make the blade dull and corrode the metal. Always clean before and after use.
- Clean Components: Wipe or scrub all removed parts with detergent and sanitizer.
- Wash and Rinse Parts: Wash components thoroughly. Rinse with clean water.
- Dry Components: Air dry or towel dry all parts completely.

NOTE: *Do not place the frame in the dishwasher. The guards are dishwasher safe.*

Plastic Handheld Mandoline with 3 Settings

Assembly

Warning: Mandoline blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing the mandoline.

Adjustment Knob: Use the adjustment knob to set slice thickness to 1 mm, 2 mm, or 3.5 mm.


Safety Lock: Use the adjustment knob to lock the blade in place when not in use.

Slicer Blade: Performs the cutting operation.

Small Hand Guard: Use the small hand guard with the medium and large hand guards to guide small-sized food items over the slicer.

Medium Hand Guard: Use the medium hand guard with the large hand guard to guide medium-sized food items over the slicer.

Food Holder / Large Hand Guard: Use the food holder / large hand guard to guide larger food items over the slicer. Attach the food holder to the frame when slicing small or medium items to protect your hands from the blade.

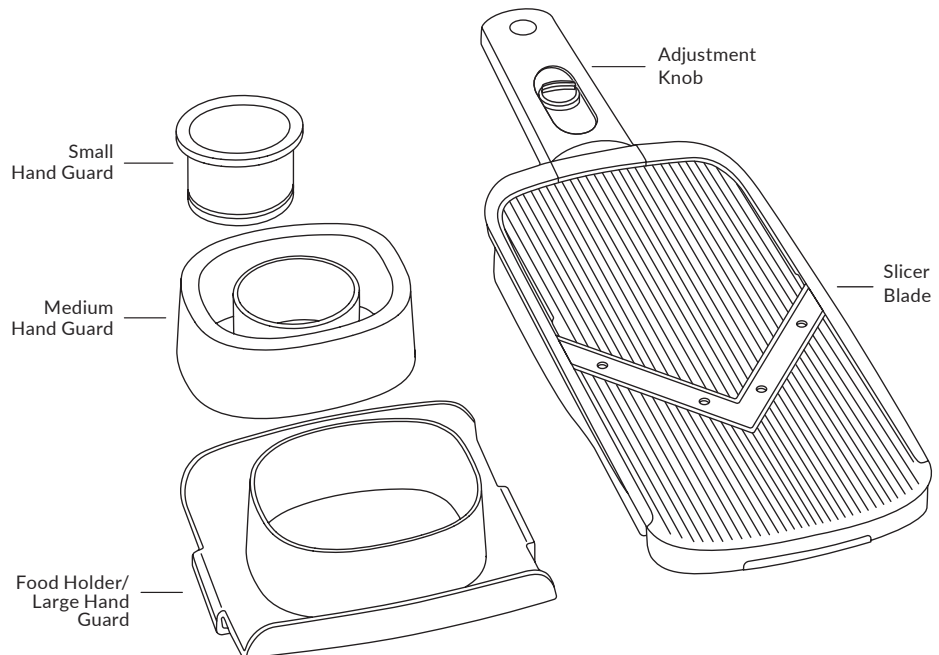

Operation

Warning: Mandoline blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing the mandoline.

Intended Use: Intended for slicing food products.

Inspect Before Use: Verify the mandoline is clean. Check that the mandoline is not damaged (broken attachments, cracked frame, or missing components). Do not use if damage is found.

Set Thickness: Adjust the mandoline to the desired thickness using the sliding adjustable knob.

Select Hand Guard: Choose the appropriate hand guard based on the size of the food being sliced.

Secure Food: Secure the food with the guard.

Slicing Food: Add guards to help secure food as the food becomes closer to the slicer.

NOTE: When slicing small to medium-sized food items, position the large hand guard onto the mandoline track.

Maintenance

Warning: The cutting assembly is sharp. Always wear cut-resistant gloves when changing, removing, and storing the cutting assembly.

Clean After Use: Clean the mandoline immediately after use. Refer to the Cleaning section for details.

Stack for Storage: Stack guard pieces together for safe storage.

Safety Lock: Use the safety lock when not in use.