 


SoundSorb Hanging Kit

Canopy Assembly Instructions



 
Hardware included:



Button
Hangers




Hanging
Wires



Wire Clamps
with Screws


Locate and prepare ceiling surface where you plan to hang your SoundSorb Canopy Panel. Due to various ceiling surfaces, ceiling attachments are not provided in this kit. Loop is available at one end of hanging wires for use with a ceiling hooks. Do not use looped end in Steps 1-5 while making your hanging button adjustments.

1.

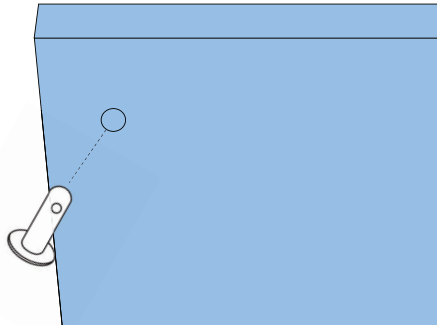


Push first button hanger into a pre-drilled hole of your SoundSorb Hanging shape.

2.

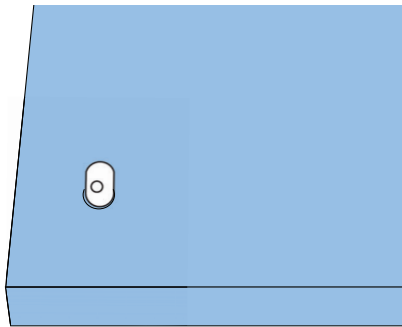

Turn over so top of button hanger is showing.

3.

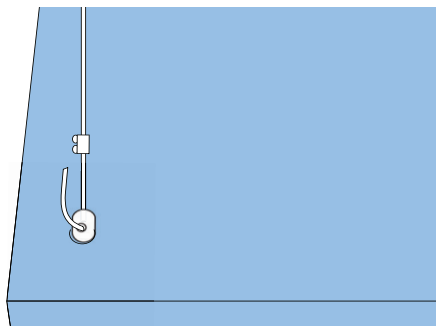


First thread wire through wire clamp and then through hole in the top of the button hanger.



VERSARE


Versare Solutions, LLC
3236 California St. NE • Minneapolis, MN 55418
1-855-457-1473 • customerservice@versare.com

4.

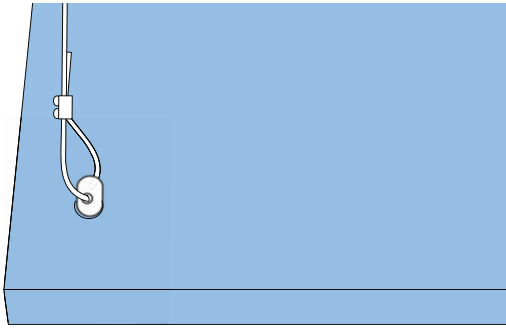

Thread wire back up through the wire clamp to create a loop.

5.

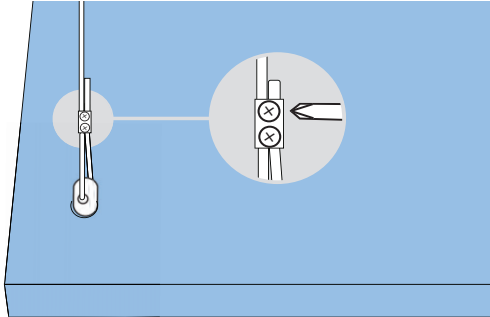

Pull wire taut and adjust length as needed. Use screw driver to tighten screws and pinch wires in place.

6. Repeat steps 1-5 for each of the pre-drilled holes. Hang in accordance with prepared ceiling surface. Once Hanging Canopy Panel is in desired position, use wire cutters to trim excess wire.

Wires are now added! We hope you enjoy your SoundSorb Acoustic Canopy Panel!

For questions regarding your SoundSorb Wall shapes please contact us at
1-855-457-1473 or
customerservice@versare.com