

How to Install Casters


Assembly Instructions

PARTS:

- (A) (4) Casters
- (B) (4) Legs


TOOLS REQUIRED:

- (C) Allen Wrench (not included)
- (D) Broomstick (not included)

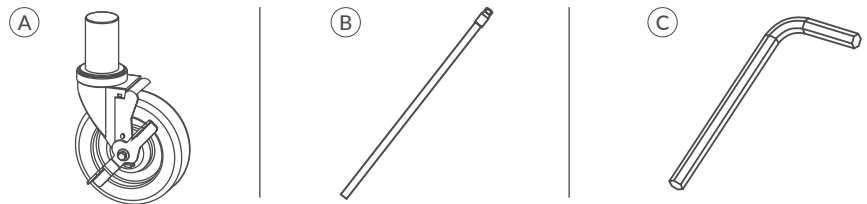


Assembly Instructions


1. Begin by using an Allen Wrench (C) to remove the legs from the top of the unit by loosening the screws in the gussets.

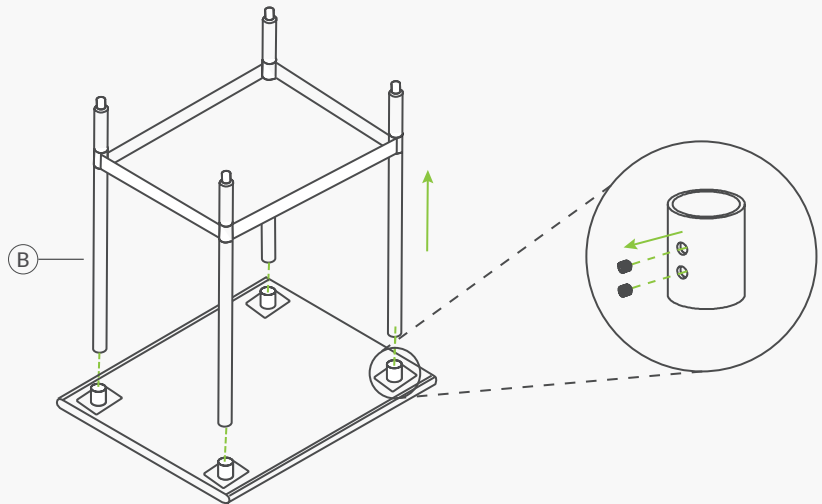


2. Push a broom handle all the way through the leg, pushing the bullet feet out of the legs.

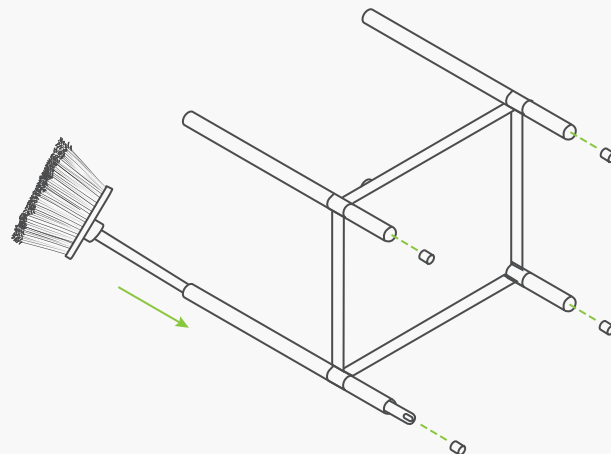

3. Flip the unit face down on a rug, towel, or other protected surface. Locate the casters (A).
4. Screw the top of each caster clockwise to adjust the width of the rubber stem. Twist the rubber stem clockwise until each caster fits snug into each leg.

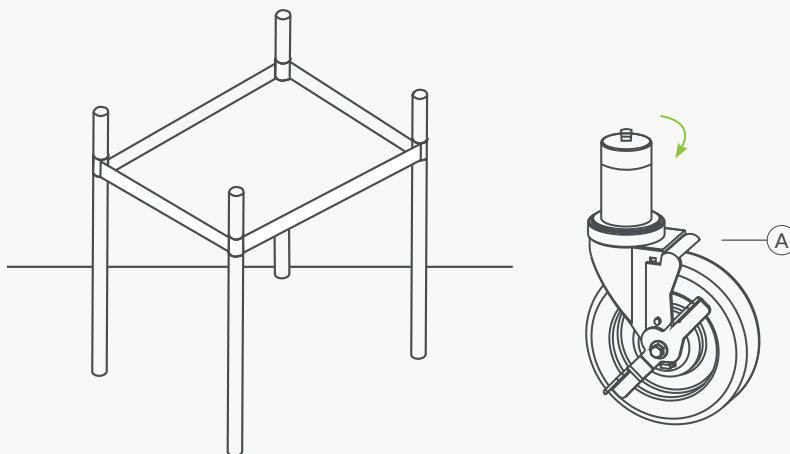

5. Once the casters are inserted into the legs, tighten each caster by turning it clockwise.

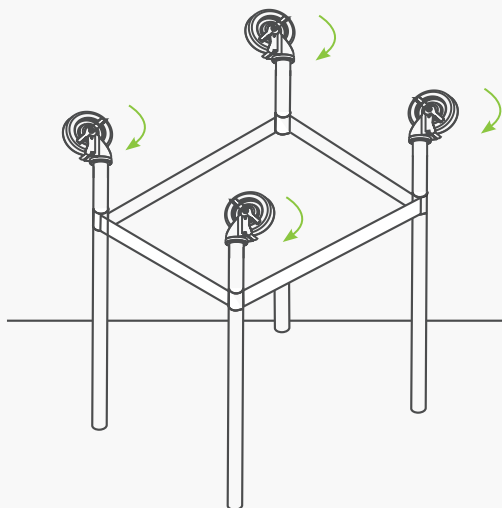

6. Reattach the legs to the top of the unit. With assistance, turn the unit over and test that the casters are installed correctly. Assembly complete.

