



Wedger

Use and Care Guide

08/2026

Hazard Statement



WARNING
To prevent personal injury.



WARNING
Cut hazards.



WARNING
Wear cut-resistant gloves.

Do Not Use if Damaged: Product should not be used if damage is found. Contact an authorized service center.

Warning: Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.

Caution: Store blade attachments indoors and away from moisture when not in use to maintain sharpness and prevent rust.

Caution: Dispose of blade accessories immediately, in a puncture-resistant container, if damaged or broken.

Protect Hands: Keep fingers away from the blade edge at all times.

Handle Blades With Care: Avoid direct contact with razor-sharp edges during attachment changes or cleaning.

Store Safely: Place used blades in the dedicated disposal container.

Initial Setup

Unboxing: Carefully remove packaging. Avoid using sharp tools that could damage the unit.

- Do not force a box cutter or knife through packaging, as it may damage the product or accessories.
- Ensure you do not damage the product or its components when removing it from the packaging.
- If any damage is present, contact customer service immediately.

Cleaning

Warning: Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.

Initial Cleaning

Clean Before First Use: Wash blades with warm, soapy water. Rinse thoroughly to remove the protective oil film.

Dry Components: Air dry or towel dry all parts completely.

Cleaning After Use

Prepare for Cleaning: Gather a Phillips head screwdriver, detergent, disinfectant, and sanitizing solution.

Remove Pusher Block: Use a screwdriver to remove the pusher block.

Remove Blade Assembly: Remove the screw from the blade assembly.

Clean Components: Wipe all removed parts with detergent and sanitizer.

Wash and Rinse Parts: Wash components thoroughly. Rinse with clean water.

Sanitize Parts: Place components in a sanitizing solution.

Dry Components: Air dry or towel dry all parts completely.

Clean Frame: Wipe the frame with a detergent solution and sanitizer.

Reinstall Pusher Block: Use a screwdriver to install the blade assembly.

Reinstall Cutter Assembly: Insert the cutter assembly. Secure by tightening the screws.


Wedge

Use and Care Guide



Assembly

Warning: Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.

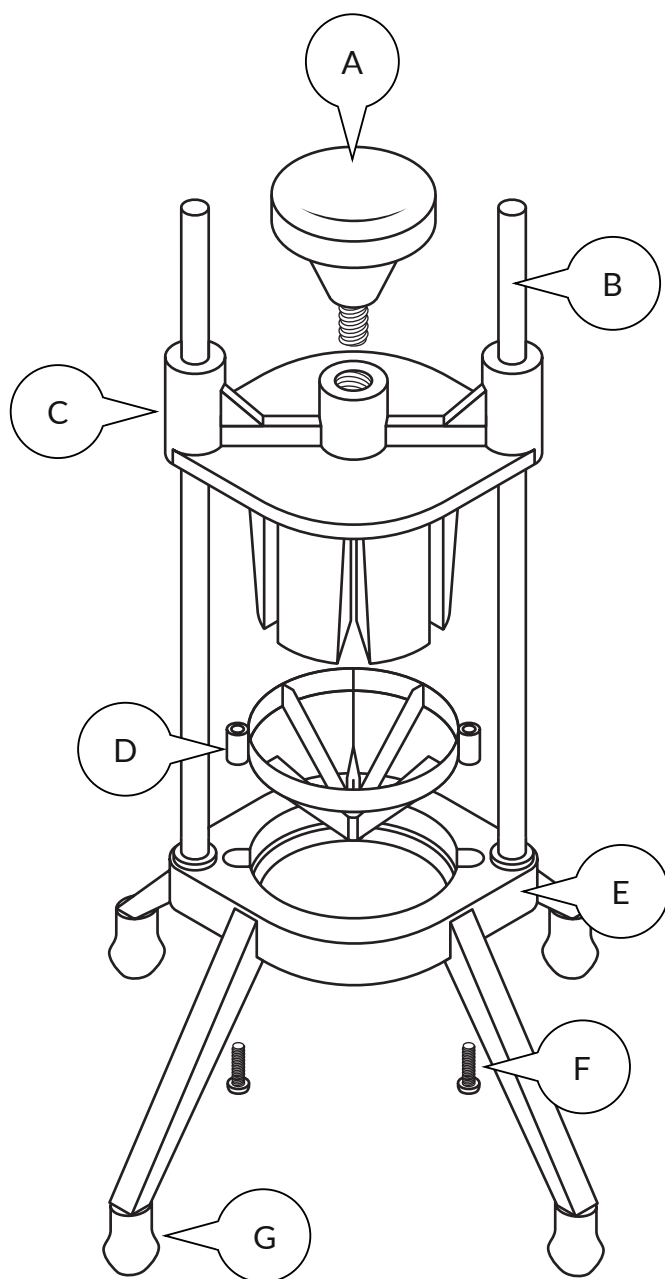

Parts

Included:

- (A) Handle
- (B) Guide Rods
- (C) Pusher Block
- (D) Blade Assembly
- (E) Base
- (F) Screw(s)
- (G) Feet

Handle: Used to operate the tool.

Guide Rods: Guides the handle and the pusher block in a straight line.

Screws: The screws will secure the blade to the base.

Pusher Block: Helps keep your hands safely away from the cutting area.

Blade Assembly: The blade assembly is placed on the guide rods and cuts product.

Feet: Helps to stabilize the base.

Base: Keeps unit secure during use.

Wedge

Use and Care Guide



Operation

Warning: Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.

Intended Use: Equipment for wedging food into slices. This unit is not meant for use with potatoes.

Inspect Before Use: Verify the equipment is clean. Check that blades are in good condition and components are in place.

Check Blade Alignment: Slowly lower the handle until the pusher block is aligned with the blade assembly.

Verify Component Size: Ensure the blade assembly and pusher block are the desired size.

Load Food Product: Lift the handle. Place food on the blade assembly with the flat side down.

Position Hands Safely: Remove hands from the blade area. Place one hand on the frame leg and one on the handle.

Cut Food Product: Use a firm, quick downward motion to force food through the blade assembly.

Repeat Cutting Process: Continue until the required amount of food is prepared.

Clean After Use: Continue until the required amount of food is prepared.

Maintenance

Warning: Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.

Caution: Always clean the frame, pusher block, and blade assembly by hand. Never put components in the dishwasher.

Remove Components: Slide the handle and push block assembly off the guide rods.

Clean All Parts: Thoroughly clean the guide rods, push block, blade assembly, and frame.

Disassemble Blade Assembly: Remove the screws and blade assembly for cleaning.

Reassemble Unit: Reinstall the blade assembly with screws. Install the handle and push block onto the guides.

Lubricate Guide Rods: Apply mineral oil, food-grade grease, or paraffin as needed. Do not use cooking oil.

Replacement Parts

NOTE: Blades are not covered under warranty. Blades are expected to wear down and be replaced by the customer on a consistent basis, dependent upon frequency of usage.

Sold Separately:

