

Dynamic


Installation Guide

Item	Qty	Description
H1	4	Locking Caster 
H2	4	Hex Bolts M8x64mm 
H3	12	Washer 
H4	6	Hex Bolts M8x40mm 

Item	Qty	Description
H5	6	End Cap 
H6	2	Self-tapping Screw 
H7	1	Wrench 
H8	1	Screwdriver 

1. Screw four locking casters (H1) into two bottom posts by hand.

2. Connect two vertical posts to two bottom posts by Hex Bolts (H2)

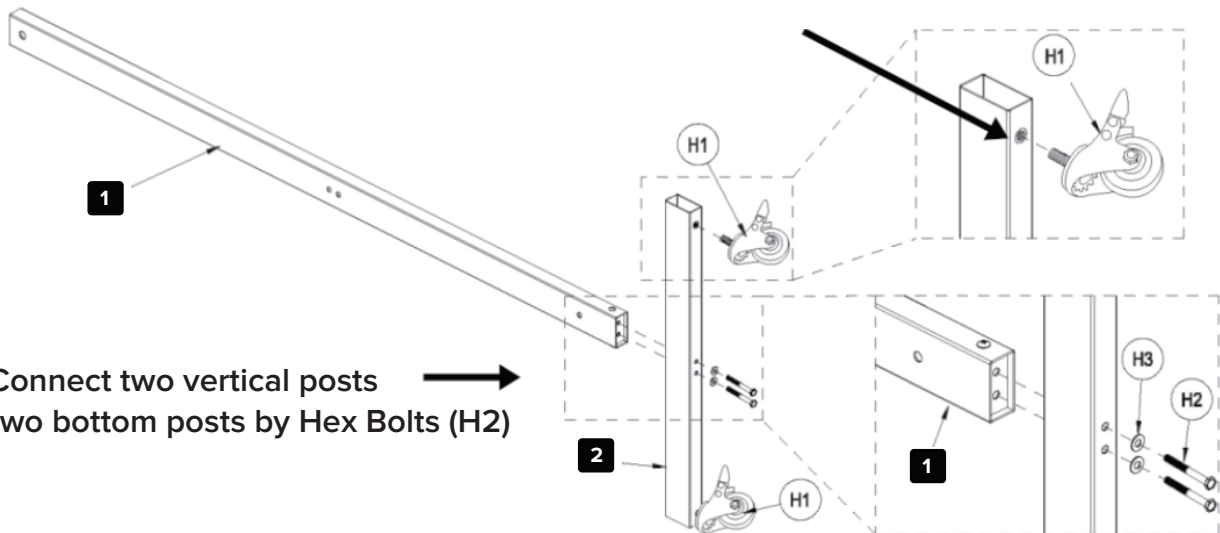


Dynamic

Installation Guide


Item	Qty	Description
H1	4	Locking Caster 
H2	4	Hex Bolts M8x64mm 
H3	12	Washer 
H4	6	Hex Bolts M8x40mm 

Item	Qty	Description
H5	6	End Cap 
H6	2	Self-tapping Screw 
H7	1	Wrench 
H8	1	Screwdriver 


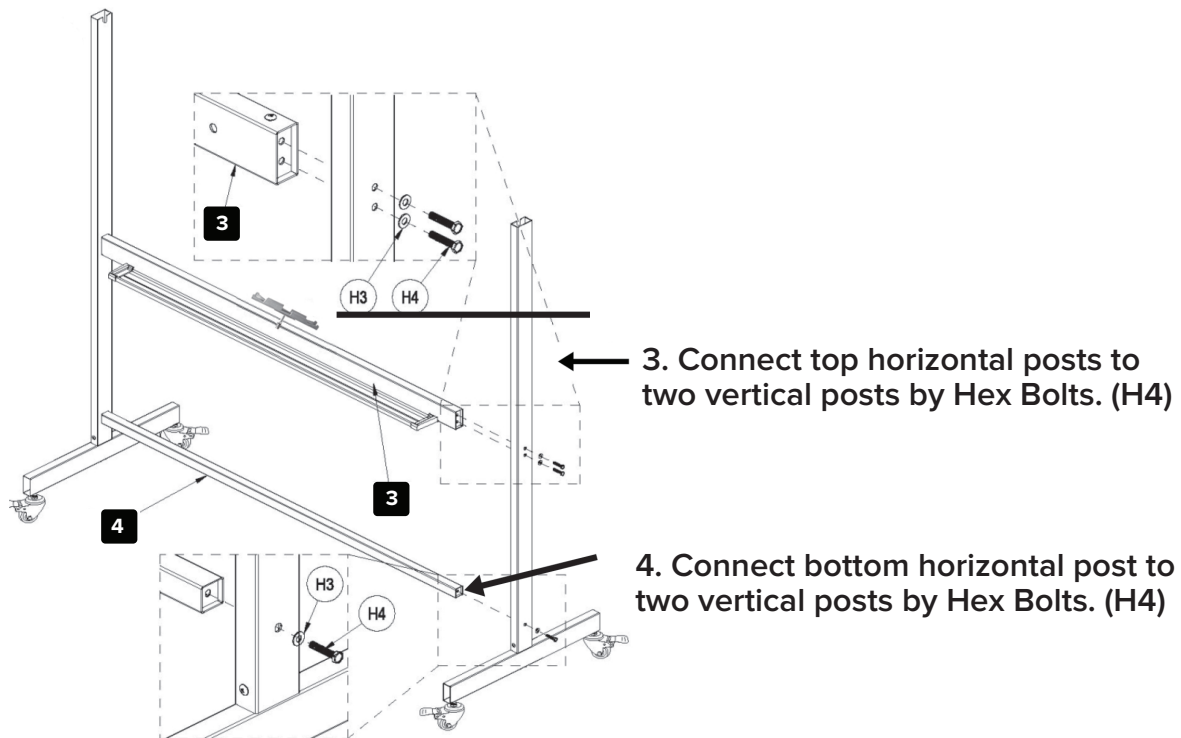


Dynamic

5. Slide the board downward until the board rests on the vertical post's designated notch.

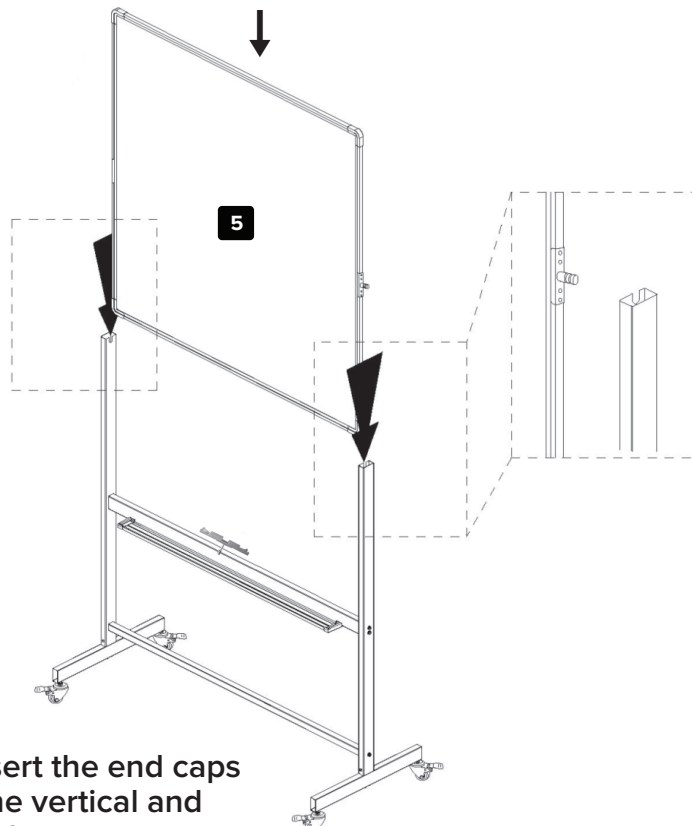

 6. Then insert the end caps (H5) into the vertical and bottom posts

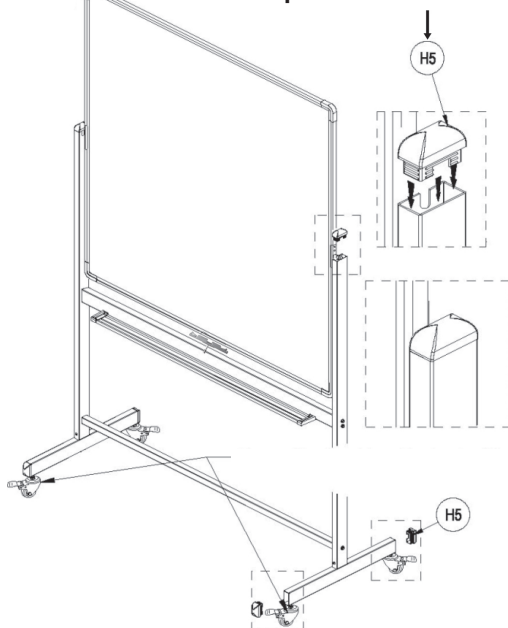

TO FLIP BOARD:

To flip board, rotate knob below the horizontal bar until it disconnects from board. Then once the board is flipped rotate the knob until it connects to board.

