



# Stainless Steel Foil and Film Dispenser / Cutter

## Use and Care Guide

### Hazard Statements



Warning - To prevent personal injury.




Warning - Cut hazards.



Warning - Wear cut-resistant gloves.

- **Do Not Use if Damaged:** Product should not be used if damage is found. Contact an authorized service center.
- **Warning:** Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.
- **Caution:** Store blade attachments indoors and away from moisture when not in use to maintain sharpness and prevent rust.
- **Caution:** Dispose of blade accessories immediately, in a puncture-resistant container, if damaged or broken.
- **Protect Hands:** Keep fingers away from the blade edge at all times.
- **Handle Blades With Care:** Avoid direct contact with razor-sharp edges during attachment changes or cleaning.
- **Store Safely:** Place used blades in the dedicated disposal container.

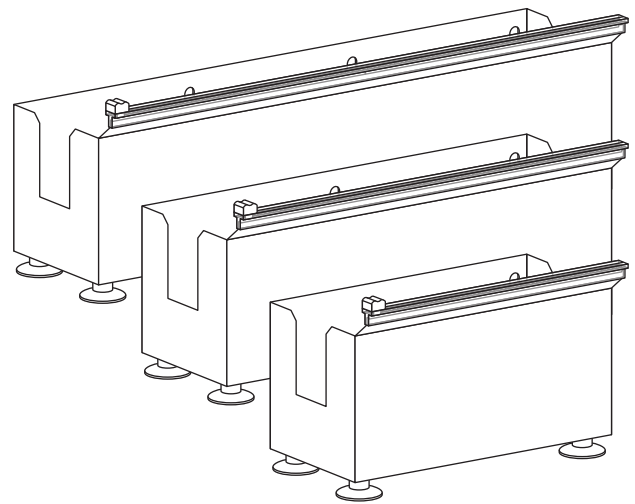


### Initial Setup

- **Unboxing:** Carefully remove packaging. Avoid using sharp tools that could damage the product.
  - Do not force a box cutter or knife through packaging, as it may damage the product or accessories.
  - Ensure you do not damage the product or its components when removing it from the packaging.
  - If any damage is present, contact customer service immediately.

### Safety Slide Cutter Installation

- **Warning:** Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.
- **Align the Cutter:** Position the safety slide cutter over the top of the serrated edge with the slide tab facing upward.
- **Attach the Cutter:** Press down on one side at a time, working the safety slide cutter onto the serrated blade until it is fully seated (Fig. 1). Keep hands free of the sharp edge throughout this process.
- **Position the Slide Tab:** Push the slide tab to one side of the cutter before use.

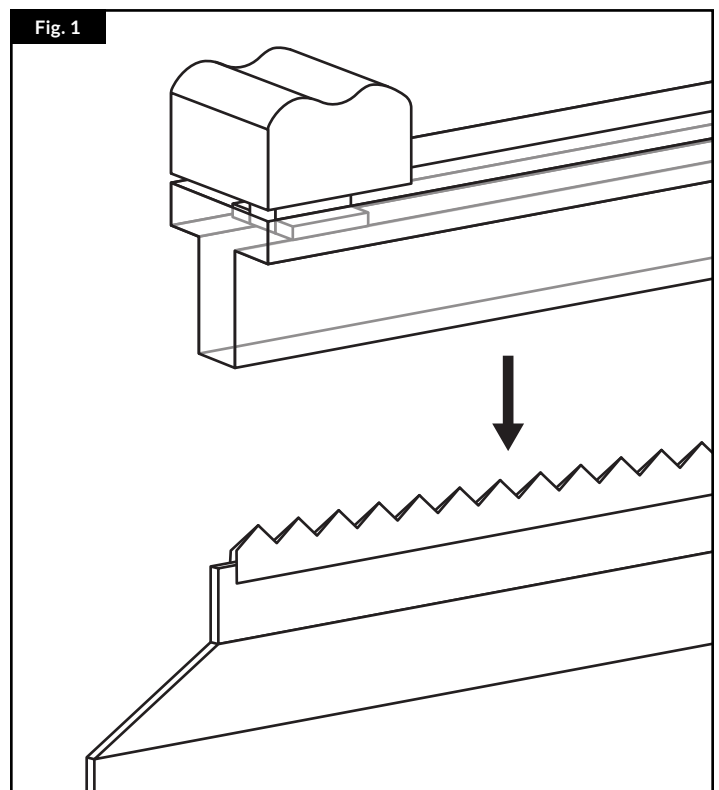

# Wall Mount Installation

- **Keep Clear of Blade:** Keep hands away from the sharp blade when transporting and mounting the dispenser.
- **Find Desired Location:** Hold the product against the wall where it will be mounted. Use the pre-drilled holes on the back of the dispenser to mark holes for installation (Fig. 2).
- **Drill Pilot Holes:** Use a drill bit to drill pilot holes in each of the previously marked locations (Fig. 3).
- **Install Mounting Hardware:** Using hardware rated for the mounting surface, attach 2 screws to the wall, leaving a 1/4" gap from the wall (Fig. 4).  
**NOTE:** If mounting on drywall, use drywall anchors as shown (Fig. 5).
- **Hang the Dispenser:** Hang the unit by lining up the pre-drilled holes on the back of the dispenser with the installed mounting hardware (Fig. 6).

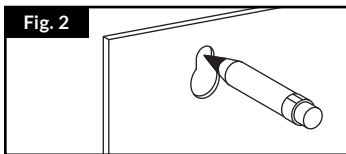


Fig. 2

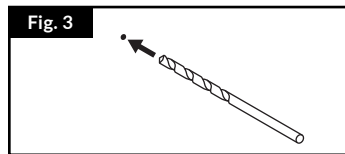


Fig. 3


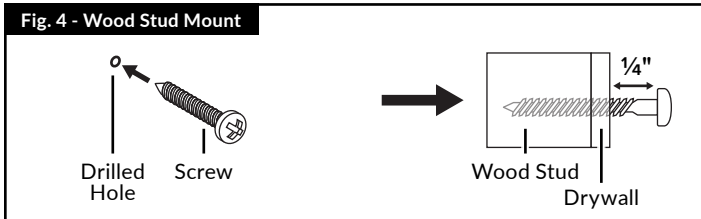


Fig. 4 - Wood Stud Mount

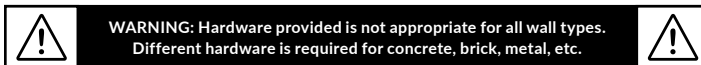

**WARNING:** Hardware provided is not appropriate for all wall types. Different hardware is required for concrete, brick, metal, etc.

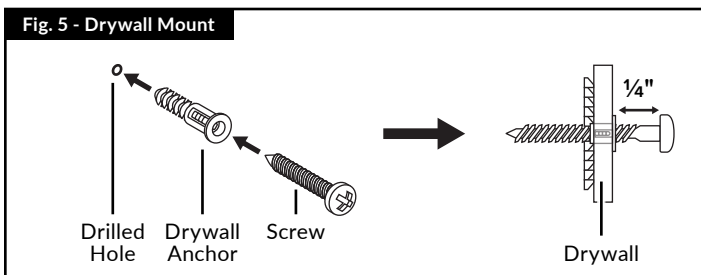


Fig. 5 - Drywall Mount

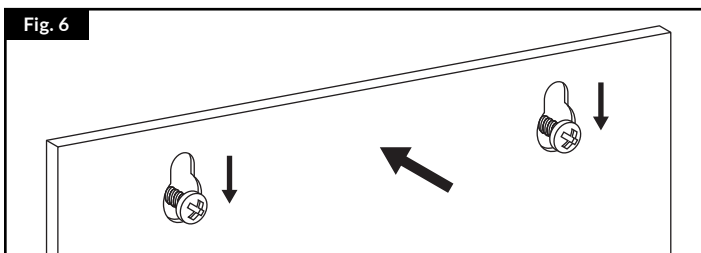


Fig. 6

# Operation

- **Warning:** Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.
- **Intended Use:** Dispensing and cutting food service film or foil.
- **Inspect Before Use:** Verify the equipment is clean. Check that blades are in good condition and components are in place.

## Cutting Film with the PVC Safety Slide Cutter

- **Confirm Cutter is Installed:** Ensure the safety slide cutter is attached over the serrated blade before proceeding.
- **Position Item:** Place the item you wish to wrap directly in front of the dispenser, closest to the blade side.
- **Pull Film:** Pull a section of film straight up and out of the box, holding each corner.
- **Cut Film:** Applying gentle but steady pressure, move the slide tab from one side of the cutter to the other to cut.

## Cutting Foil or Film with the Serrated Blade

- **Remove Slide Cutter:** Ensure the safety slide cutter is off before using the serrated blade.
- **Position Item:** Place the item you wish to wrap directly in front of the dispenser, closest to the blade side.
- **Pull Material:** Pull a section of foil or film straight up and out of the box, holding each corner. Keep hands and arms away from the sharp blade.
- **Angle Material:** Angle the foil or film upward as you pull to keep it free of the serrated edge.
- **Cut Material:** Holding onto either side of the foil or film, pull toward one side and apply downward pressure, pushing the material into the sharp edge to cut.

# Cleaning

- **Warning:** Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.
- **Daily Cleaning:** Remove loose debris and wipe down with a damp cloth or mild soap solution to prevent buildup.
- **Deep Cleaning:** Use a degreaser safe for stainless steel to remove residue and grease buildup.
- **Dry Completely:** Dry all components thoroughly after cleaning to prevent corrosion.
- **Blade Inspection:** Inspect the serrated blade for wear or damage. Replace if cutting performance is reduced or blade is damaged.
- **Assembly Inspection:** Regularly inspect parts and ensure structural integrity.
- **Store Indoors:** When not in use, store indoors away from moisture.

# Maintenance

- **Warning:** Blades are sharp. Always wear cut-resistant gloves when changing, removing, and storing blade attachments.
- **Inspect Blade:** Inspect for damaged or dull serrated blade. Replace the blade assembly if damaged.
- **Check Slide Cutter:** Inspect the safety slide cutter for cracks or wear. Replace if damaged.
- **Check Suction Cups:** Inspect suction cups for wear or loss of adhesion. Replace if the unit does not remain stable on the work surface.