


Combination Lock

Operating Instructions

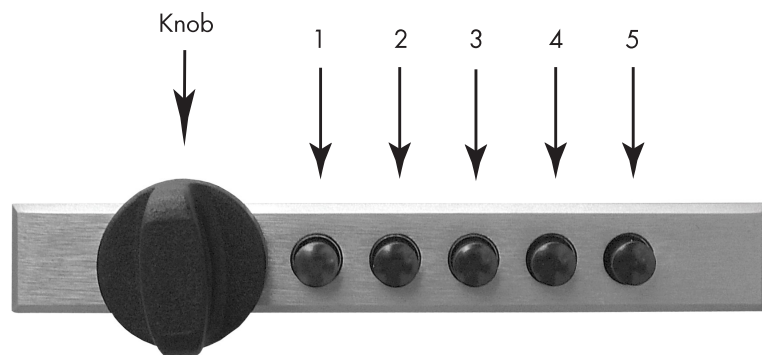

RECORD NEW COMBINATIONS HERE:

- 1) _____
- 2) _____
- 3) _____
- 4) _____
- 5) _____
- 6) _____
- 7) _____
- 8) _____
- 9) _____
- 10) _____

Your cabinet is presently set with a combination of: First push #2 and #4 together and then #3. Make a habit of turning the knob LEFT (counter-clockwise) before pushing the combination. Should anyone have attempted an improper combination, this action clears off such an attempt and reactivates the buttons.

TO OPEN:

1. Turn knob LEFT (counter-clockwise) to activate all buttons.
2. Push proper buttons in present order for the combination.
3. Turn knob right to open.

TO LOCK:

1. Turn knob full LEFT (counter-clockwise) until it stops.

TO CHANGE YOUR COMBINATION:

You may easily change to a new combination using one, all five, or any number of buttons you wish in any order. Two or more buttons may be pushed at one time as part of your new combination. Simple two and three button combinations are easy to remember and still provide top security. Note: A particular button can be pushed only once in establishing a new combination. RECORD YOUR NEW COMBINATION ON THIS SHEET AND KEEP IN A SAFE PLACE.

1. Open the door and relock your cabinet.
2. Press the correct buttons in the proper order for your EXISTING combination.
3. On the back end of the lock there is a spring loaded cylinder plate (at the opposite end from the bolt assembly). With a pencil eraser, pen or other solid object, push the slide into the lock as far as it will go. (in Models SM and RM this slide is completely exposed.)
4. Turn the knob full LEFT (counter-clockwise) to "clear-out" the existing combination.
5. Press the buttons firmly and deliberately in the desired sequence for your new combination.
6. Turn the knob to the RIGHT (clockwise) to set your new combination into the mechanism. Turn the knob full LEFT to activate lock.

At some time you may wish to keep your cabinet unlocked, with the knob always free to open or close the lock. Follow the combination change procedure but SKIP STEP #5. Should any buttons be pressed when the cabinet is in this condition, merely turn knob LEFT (counter-clockwise) and then to the RIGHT to continually open and close the lock. To put a combination back in, follow the combination change procedure, but SKIP STEP #2.



✉ 800 Glen Avenue, Moorestown, New Jersey 08057

☎ 1.800.257.BEAM (2326) • Local: 1.856.359.2231

☎ Fax: 1.856.359.2249 • E-mail: info@omnimedbeam.com

Visit our web page on the internet: www.omnimedbeam.com

Products to Help People...Help People