

Wand Options



Standard Wand:

This standard gooseneck wand is controlled purely by the operator. The steam can be locked on by pulling the lever down or feathered by pushing it up. This wand comes standard with Cool Touch technology which prevents skin burns and milk from burning onto the wand.



Smart Wand:

This modification replaces the manual steam handles with a button. The barista can simply place the wand in the pitcher of milk and the Smart Wand will heat up to, and shut off at, the preset temperature. We recommend that the barista moves the pitcher to texture the milk. This Smart Wand is a straight wand and has the ability to be modified with a Steam Selector.



Smart Wand w/ Steam Selector:

In addition to the features of the Smart Wand, this modification comes with a Steam Selector. The Steam Selector allows the user to change the aeration of the Smart Wand by moving the grip up or down. In the lower position, the wand will steam with very little foam which is ideal for lattes. In the upper position, the wand will steam with more foam which is ideal for cappuccinos.



Gooseneck Autosteam:

This modification replaces the manual steam handles with a button. The barista can simply place the curved wand in the pitcher of milk and the Gooseneck Autosteam will heat up to, and shut off at, the correct temperature. We recommend that the barista moves the pitcher to texture the milk. This wand includes the Cool Touch technology which prevents skin burns and milk from burning onto the wand.



Easy Cream Gooseneck Wand:

A useful device that replaces one of your manual steam handles with one or multiple buttons. These wands heat up and texture the milk, eliminating possible errors from the barista. We recommend programming one button to coincide with latte (micro) foam and one to coincide with cappuccino (macro) foam.