


SSS#3670 INSTRUCTIONS


1. Insert all the metal pipe into the wood boards.



2. Install the 16 pieces the rubber stopper rings.

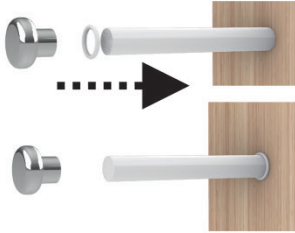

3. Knock the lid with a hammer or screwdriver.

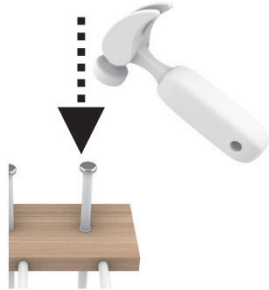

4. Fix the wood boards on the bottom with screw.