




ASSEMBLY INSTRUCTIONS FOR #CD3111
 (ADIRODACK CHAIR W/BUILD-IN OTTOMAN)

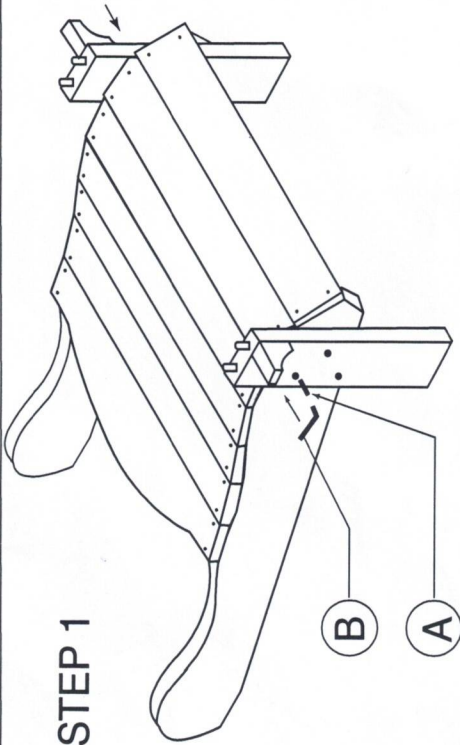


STEP 1

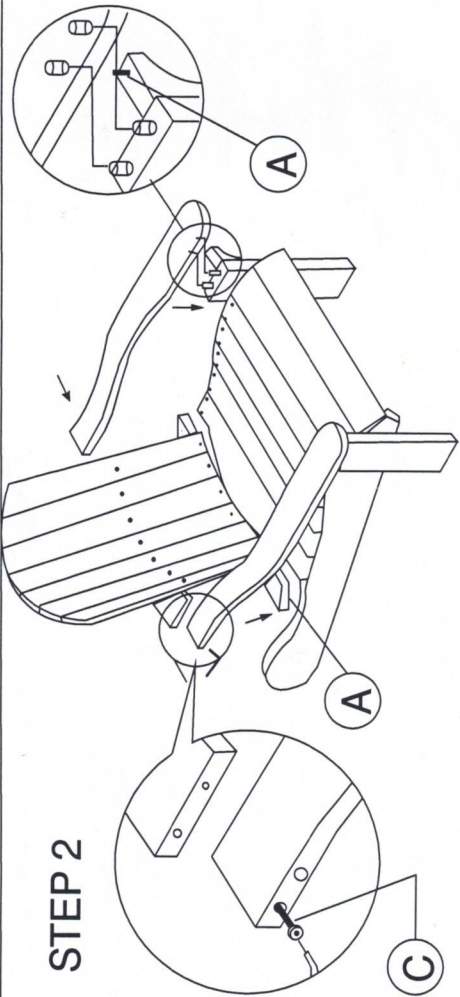

STEP 2

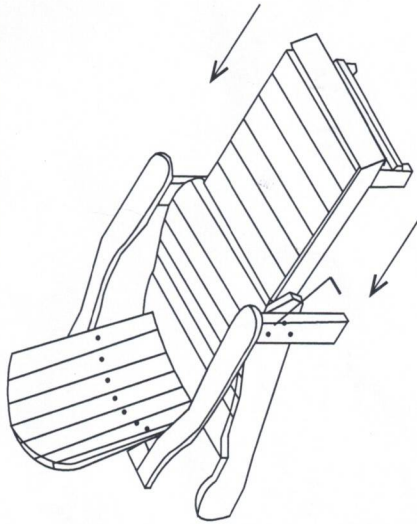

STEP 3

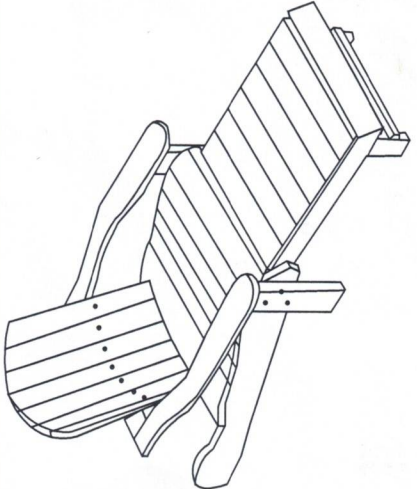

TIPS/Steps for Easy Set-Up:

Assemble Chairs on their Sides

on a soft surface area to protect.

Step # 1. Attach upright Arm units with
(3 screws) on each side.

Step # 2. Set seat unit upright and then
attach the back unit, but do NOT tighten
the screws all the way until after next step

Step # 2A. Attach arm units and align first
with back unit before tightening screws.

Step # 2B. Do not miss the last screws under
each arm unit...

Never Over-Tighten any screws with key wrench.

Use care in pulling the Ottoman unit and out.

Tighten legs to ottoman if it too loose

Finally, Please Oil your new Adirondack Chair

With a Linseed Oil or Hardwood oil. Do not oil in

Direct Sunlight and allow to dry for 24 hours in the

Shade. Enjoy!

PART LIST	A	B	C	D
				
	Screw M7 x 40 [1.5"] 12 pcs	Key Wrench (1 pcs)	Screw M7 x 90 [3.5"] 4 pcs	Portable Drill Bit