

INCLUDED PARTS

1 pc. bed base (Twin, Twin XL)

2 pcs. bed base (Full, Queen, King, Cal-King)

2 pcs. U pin & clip

2 pcs. wing nut (Full, Queen, King, Cal-King only)


2 pcs. bolt (Full, Queen, King, Cal-King only)

2 pcs. black spacer (Full, Queen, King, Cal-King only)

TWIN / TWIN XL




Remove all pieces from the carton and place them flat on the floor.

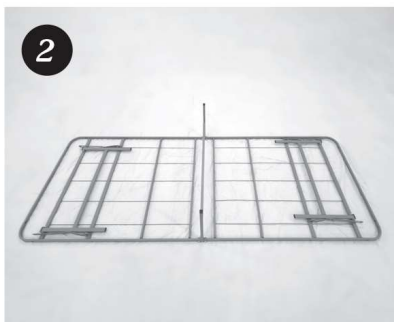

Unfold bed base so that the top of the base is against the floor and the center legs are facing up.



Pull the legs upwards until locked in place. Repeat at other end.

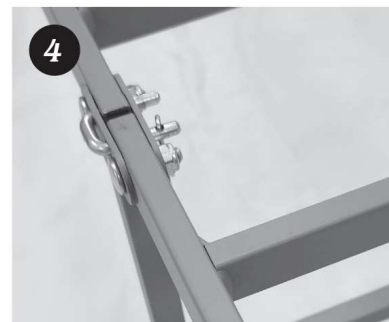


Turn the base(s) over.

Insert provided U pins into the holes above the center leg hinge area and secure by inserting the clip into the pin. Repeat on other side.




FULL / QUEEN / KING / CAL-KING

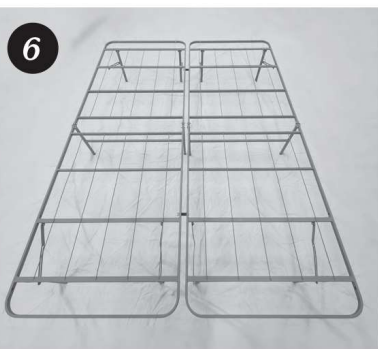

Repeat steps 1 through 4 on both bases.

Align long sides of each base.

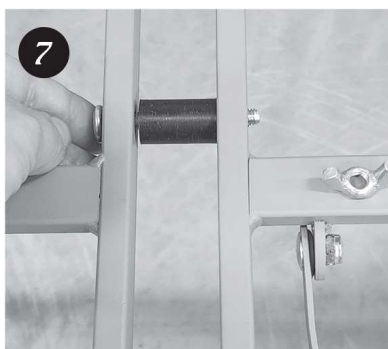

Connect the two halves by inserting provided bolt and spacer in between each base at the head and the foot sections. Tighten wing nut to secure.

