

Vector™ Multi-Cook Oven

Deluxe Control

VMC-H2	VMC-H2H
VMC-H3	VMC-H3H
VMC-H4	VMC-H4H



Structured Air Technology™

Manufacturer's Information

Copyright

© Copyright 12/19 by Alto-Shaam, Inc.
All rights reserved.
This manual or any portion thereof may not be reproduced or used in any manner whatsoever without the express written permission of Alto-Shaam, Inc.

Trademarks

All trademarks referenced in this documentation are the property of their respective owners.

Manufacturer

Alto-Shaam, Inc.
P.O. Box 450
W164 N9221 Water Street
Menomonee Falls, WI 53052

Original instructions

The content in this manual is written in American English.

Models Covered

Half-Size Sheet Pan Models VMC-H2 VMC-H3 VMC-H4 Hotel Pan Models VMC-H2H VMC-H3H VMC-H4H	RH - Right-Hand Swing Door LH - Left-Hand Swing Door US (UL Certified) Models International (CE Certified) Models
---	--

Serial Number

The unit serial number is required for ordering the correct service parts.
Record the unit serial number in the space provided below.

Serial Number

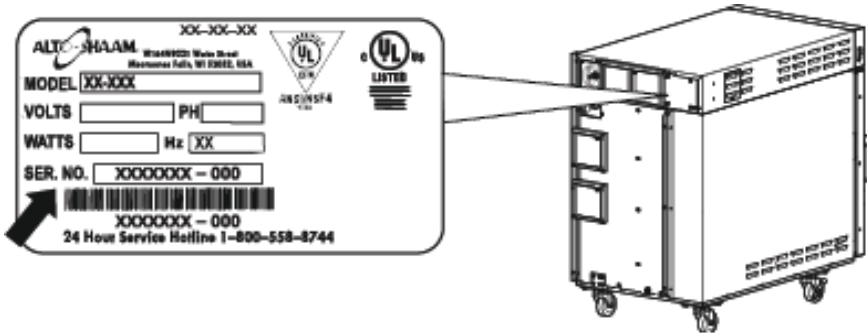


Table of Contents

Manufacturer's Information	2
Table of Contents	3
Fasteners	4
Panel Assembly, H2 (RH)	11
Panel Assembly, H2 (LH)	12
Panel Assembly, H2H (RH).	13
Panel Assembly, H2H (LH).	14
Panel Assembly, H3 (RH)	15
Panel Assembly, H3 (LH)	16
Panel Assembly, H3H (RH).	17
Panel Assembly, H3H (LH).	18
Panel Assembly, H4 (RH)	19
Panel Assembly, H4 (LH)	20
Panel Assembly, H4H (RH).	21
Panel Assembly, H4H (LH).	22
Door Assembly, Right, H2/H2H	23
Door Assembly, Left, H2/H2H	24
Door Assembly, Right, H3/H3H	25
Door Assembly, Left, H3/H3H	26
Door Assembly, Right, H4/H4H	27
Door Assembly, Left, H4/H4H	28
Control Panel, All Models	29
Electrical Chassis, H2/H2H, 208-240V, 60HZ, 1PH.	30
Electrical Chassis, H2/H2H, 220-240V, 50/60HZ, 1PH CE	31
Electrical Chassis, H2/H2H, 380-415V, 50/60HZ, 3PH CE	32
Electrical Chassis, H3/H3H, 208-240V, 60HZ, 1PH.	33
Electrical Chassis, H3/H3H, 208-240V, 60HZ, 3PH.	34
Electrical Chassis, H3/H3H, 220-240V, 50/60HZ, 1PH CE	35
Electrical Chassis, H3/H3H, 380-415V, 50/60HZ, 3PH CE	36
Electrical Chassis, H4/H4H, 208-240V, 60HZ, 3PH.	37
Electrical Chassis, H4/H4H, 380-415V, 50/60HZ, 3PH CE	38
Core Components, H2	39
Core Components, H2H.	40
Core Components, H3	41
Core Components, H3H.	42
Core Components, H4	43
Core Components, H4H.	44
Rear Filters (All Models).	45
Motor/Fan Assembly (All Models)	46
Accessories: Stands	47
Accessories: Stacking Stands	48
Accessories: Stacking Kits, Legs, and Casters	49
Accessories: Cooking	50
Accessories: Cleaning.	51

Fasteners

Panel Assembly, H2 (RH)—page 11

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1029161	Rear Panel, H2	NU-26866	NUT, HEX, INSERT, M4	7
1029161	Rear Panel, H2	SC-39147	SCREW, 8-18 X .480, HEX WASHER	15
1029172	Right side panel, H2	SC-37702	SCREW, M4 X 12MM SEMS	4
1028905	Top Panel, Standard	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1029173	Left side panel, H2	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H2 (LH)—page 12

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1029161	Rear Panel, H2	NU-26866	NUT, HEX, INSERT, M4	7
1029161	Rear Panel, H2	SC-39147	SCREW, 8-18 X .480, HEX WASHER	15
1029172	Right side panel, H2	SC-37702	SCREW, M4 X 12MM SEMS	4
1028905	Top Panel, Standard	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1029173	Left side panel, H2	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H2H (RH)—page 13

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1029161	Rear Panel, H2	NU-26866	NUT, HEX, INSERT, M4	7
1029161	Rear Panel, H2	SC-39147	SCREW, 8-18 X .480, HEX WASHER	15
1029218	Right side panel, H2H	SC-37702	SCREW, M4 X 12MM SEMS	4
1028086	Top Panel, Hotel	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1029219	Left side panel, H2H	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H2H (LH)—page 14

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1029161	Rear Panel, H2	NU-26866	NUT, HEX, INSERT, M4	7
1029161	Rear Panel, H2	SC-39147	SCREW, 8-18 X .480, HEX WASHER	15
1029218	Right side panel, H2H	SC-37702	SCREW, M4 X 12MM SEMS	4
1028086	Top Panel, Hotel	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD	2
1029219	Left side panel, H2H	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H3 (RH)—page 15

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028091	Rear Panel, H3	NU-26866	NUT, HEX, INSERT, M4	9
1028091	Rear Panel, H3	SC-39147	SCREW, 8-18 X .480, HEX WASHER	16
1028904	Right side panel, H3	SC-37702	SCREW, M4 X 12MM SEMS	4
1028905	Top Panel, Standard	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1028903	Left side panel, H3	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H3 (LH)—page 16

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028091	Rear Panel, H3	NU-26866	NUT, HEX, INSERT, M4	9
1028091	Rear Panel, H3	SC-39147	SCREW, 8-18 X .480, HEX WASHER	16
1028904	Right side panel, H3	SC-37702	SCREW, M4 X 12MM SEMS	4
1028905	Top Panel, Standard	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1028903	Left side panel, H3	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H3H (RH)—page 17

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028091	Rear Panel, H3	NU-26866	NUT, HEX, INSERT, M4	9
1028091	Rear Panel, H3	SC-39147	SCREW, 8-18 X .480, HEX WASHER	16
1028092	Right side panel, H3H	SC-37702	SCREW, M4 X 12MM SEMS	4
1028086	Top Panel, Hotel	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1028093	Left side panel, H3H	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H3H (LH)—page 18

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028091	Rear Panel, H3	NU-26866	NUT, HEX, INSERT, M4	9
1028091	Rear Panel, H3	SC-39147	SCREW, 8-18 X .480, HEX WASHER	16
1028092	Right side panel, H3H	SC-37702	SCREW, M4 X 12MM SEMS	4
1028086	Top Panel, Hotel	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1028093	Left side panel, H3H	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H4 (RH)—page 19

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028915	Rear Panel, H4	NU-26866	NUT, HEX, INSERT, M4	9
1028915	Rear Panel, H4	SC-39147	SCREW, 8-18 X .480, HEX WASHER	17
1028913	Right side panel, H4	SC-37702	SCREW, M4 X 12MM SEMS	4
1028905	Top Panel, Standard	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1028914	Left side panel, H4	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H4 (LH)—page 20

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028915	Rear Panel, H4	NU-26866	NUT, HEX, INSERT, M4	9
1028915	Rear Panel, H4	SC-39147	SCREW, 8-18 X .480, HEX WASHER	17
1028913	Right side panel, H4	SC-37702	SCREW, M4 X 12MM SEMS	4
1028905	Top Panel, Standard	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1028914	Left side panel, H4	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H4H (RH)—page 21

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028915	Rear Panel, H4	NU-26866	NUT, HEX, INSERT, M4	9
1028915	Rear Panel, H4	SC-39147	SCREW, 8-18 X .480, HEX WASHER	17
1029099	Right side panel, H4H	SC-37702	SCREW, M4 X 12MM SEMS	4
1028086	Top Panel, Hotel	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1029100	Left side panel, H4H	SC-37702	SCREW, M4 X 12MM SEMS	4

Panel Assembly, H4H (LH)—page 22

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
1028915	Rear Panel, H4	NU-26866	NUT, HEX, INSERT, M4	9
1028915	Rear Panel, H4	SC-39147	SCREW, 8-18 X .480, HEX WASHER	17
1029099	Right side panel, H4H	SC-37702	SCREW, M4 X 12MM SEMS	4
1028086	Top Panel, Hotel	SC-46278	SCREW, M4X0.7MM SHOULDER 5MM THD LENGTH	2
1029100	Left side panel, H4H	SC-37702	SCREW, M4 X 12MM SEMS	4

Door Assembly, Right, H2/H2H—page 23

5028680	LED Light Assembly	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2 per light
5028179R	Kit, Service Handle Replacement	SC-46575	SCREW, M4 X 8MM, PHH W/ BLUE NYLON PATCH	3

Door Assembly, Left, H2/H2H—page 24

5028680	LED Light Assembly	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2 per light
5028179R	Kit, Service Handle Replacement	SC-46575	SCREW, M4 X 8MM, PHH W/ BLUE NYLON PATCH	3

Door Assembly, Right, H3/H3H—page 25

5028680	LED Light Assembly	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2 per light
5028179R	Kit, Service Handle Replacement	SC-46575	SCREW, M4 X 8MM, PHH W/ BLUE NYLON PATCH	3

Door Assembly, Left, H3/H3H—page 26

5028680	LED Light Assembly	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2 per light
5028179R	Kit, Service Handle Replacement	SC-46575	SCREW, M4 X 8MM, PHH W/ BLUE NYLON PATCH	3

Door Assembly, Right, H4/H4H—page 27

5028680	LED Light Assembly	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2 per light
5028179R	Kit, Service Handle Replacement	SC-46575	SCREW, M4 X 8MM, PHH W/ BLUE NYLON PATCH	3

Door Assembly, Left, H4/H4H—page 28

5028680	LED Light Assembly	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2 per light
5028179R	Kit, Service Handle Replacement	SC-46575	SCREW, M4 X 8MM, PHH W/ BLUE NYLON PATCH	3

Control Panel, All Models—page 29

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
5027029	Control Panel	SC-37702	SCREW, M4 X 12MM SEMS	3
5027029	Control Panel	NU-26866	NUT, HEX, INSERT, M4	3
BA-39847	USB Receptacle	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
CC-46005	Interface Board	NU-39735	NUT,HEX,6-32,NYLON	4

Core Components, H2—page 38

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
LT-3738	Door, Interlock Switch	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
PR-37668	Thermocouple	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
5026194	Catalyst Assembly	SC-39147	SCREW,8-18 X .480,HEX WASHER	3 per catalyst
TT-46376	Thermal Cutoff Switch	SC-37701	SCREW, M4 X 8MM SEMS	2
FA-36957	Cooling Fan	SC-38887	SCREW,M5X0.8X16MM PAN PHH SST A2 MS	4 per fan
1029217	Motor Support Bracket, H2	NU-39180	NUT,M4-0.7 HEX FLG-SERR CL8 SS	4 per motor
1029217	Motor Support Bracket, H2	SC-37702	SCREW, M4 X 12MM SEMS	1
EL-37664	Heating Element, H2/H2H	SC-39147	SCREW,8-18 X .480,HEX WASHER	12 per element

Core Components, H2H—page 40

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
LT-3738	Door, Interlock Switch	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
PR-37668	Thermocouple	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
5026194	Catalyst Assembly	SC-39147	SCREW,8-18 X .480,HEX WASHER	3 per catalyst
TT-46376	Thermal Cutoff Switch	SC-37701	SCREW, M4 X 8MM SEMS	2
FA-36957	Cooling Fan	SC-38887	SCREW,M5X0.8X16MM PAN PHH SST A2 MS	4 per fan
1029217	Motor Support Bracket, H2	NU-39180	NUT,M4-0.7 HEX FLG-SERR CL8 SS	4 per motor
1029217	Motor Support Bracket, H2	SC-37702	SCREW, M4 X 12MM SEMS	1
EL-37664	Heating Element, H2/H2H	SC-39147	SCREW,8-18 X .480,HEX WASHER	12 per element

Core Components, H3—page 41

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
LT-3738	Door, Interlock Switch	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
PR-37668	Thermocouple	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
5026194	Catalyst Assembly	SC-39147	SCREW,8-18 X .480,HEX WASHER	3 per catalyst
TT-46376	Thermal Cutoff Switch	SC-37701	SCREW, M4 X 8MM SEMS	2
FA-36957	Cooling Fan	SC-38887	SCREW,M5X0.8X16MM PAN PHH SST A2 MS	4 per fan
1028793	Motor Support Bracket, H3	NU-39180	NUT,M4-0.7 HEX FLG-SERR CL8 SS	4 per motor
1028793	Motor Support Bracket, H3	SC-37702	SCREW, M4 X 12MM SEMS	1
EL-37664	Heating Element, H3/H3H	SC-39147	SCREW,8-18 X .480,HEX WASHER	12 per element

Core Components, H3H—page 42

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
LT-3738	Door, Interlock Switch	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
PR-37668	Thermocouple	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
5026194	Catalyst Assembly	SC-39147	SCREW,8-18 X .480,HEX WASHER	3 per catalyst
TT-46376	Thermal Cutoff Switch	SC-37701	SCREW, M4 X 8MM SEMS	2
FA-36957	Cooling Fan	SC-38887	SCREW,M5X0.8X16MM PAN PHH SST A2 MS	4 per fan
1028793	Motor Support Bracket, H3	NU-39180	NUT,M4-0.7 HEX FLG-SERR CL8 SS	4 per motor
1028793	Motor Support Bracket, H3	SC-37702	SCREW, M4 X 12MM SEMS	1
EL-37664	Heating Element, H3/H3H	SC-39147	SCREW,8-18 X .480,HEX WASHER	12 per element

Core Components, H4—page 43

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
LT-3738	Door, Interlock Switch	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
PR-37668	Thermocouple	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
5026194	Catalyst Assembly	SC-39147	SCREW,8-18 X .480,HEX WASHER	3 per catalyst
TT-46376	Thermal Cutoff Switch	SC-37701	SCREW, M4 X 8MM SEMS	2
FA-36957	Cooling Fan	SC-38887	SCREW,M5X0.8X16MM PAN PHH SST A2 MS	4 per fan
1028987	Motor Support Bracket, H4	NU-39180	NUT,M4-0.7 HEX FLG-SERR CL8 SS	4 per motor
1028987	Motor Support Bracket, H4	SC-37702	SCREW, M4 X 12MM SEMS	1
EL-37664	Heating Element, H4/H4H	SC-39147	SCREW,8-18 X .480,HEX WASHER	12 per element


Core Components, H4H—page 44

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
LT-3738	Door, Interlock Switch	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
PR-37668	Thermocouple	SC-22268	SCREW,M3x0.5X8MM PAN PHH SST A2 MS	2
5026194	Catalyst Assembly	SC-39147	SCREW,8-18 X .480,HEX WASHER	3 per catalyst
TT-46376	Thermal Cutoff Switch	SC-37701	SCREW, M4 X 8MM SEMS	2
FA-36957	Cooling Fan	SC-38887	SCREW,M5X0.8X16MM PAN PHH SST A2 MS	4 per fan
1028987	Motor Support Bracket, H4	NU-39180	NUT,M4-0.7 HEX FLG-SERR CL8 SS	4 per motor
1028987	Motor Support Bracket, H4	SC-37702	SCREW, M4 X 12MM SEMS	1
EL-37664	Heating Element, H4/H4H	SC-39147	SCREW,8-18 X .480,HEX WASHER	12 per element

Accessories: Stacking Kits, Legs, and Casters—page 49

Part No.	Part Description	Fastener Part No.	Fastener Description	Qty
BT-26884	Tether Bracket	SC-23868	SCREW,M5x0.8X20MM FLAT CROSS HEAD S/S	4
5027948	Foot Plate Assembly,			
PA-46237	Foot Plate	NU-37699	NUT, CAGE, M12X1.75	1 per plate
PA-46237	Foot Plate	SC-22279	SCREW,M8x1.25X30MM HEX SST A2 MS	4 per plate
PA-46237	Foot Plate	WS-24396	WASHER,*CT,ML,S/S,M8 SERRATED SAFETY CONE, DIN 1.4301	4 per plate
PA-46237	Foot Plate	WS-22298	WASHER,*CT,M8 FLAT WASHER, 18-8, DIN #125A	4 per plate


Panel Assembly, H2 (RH)

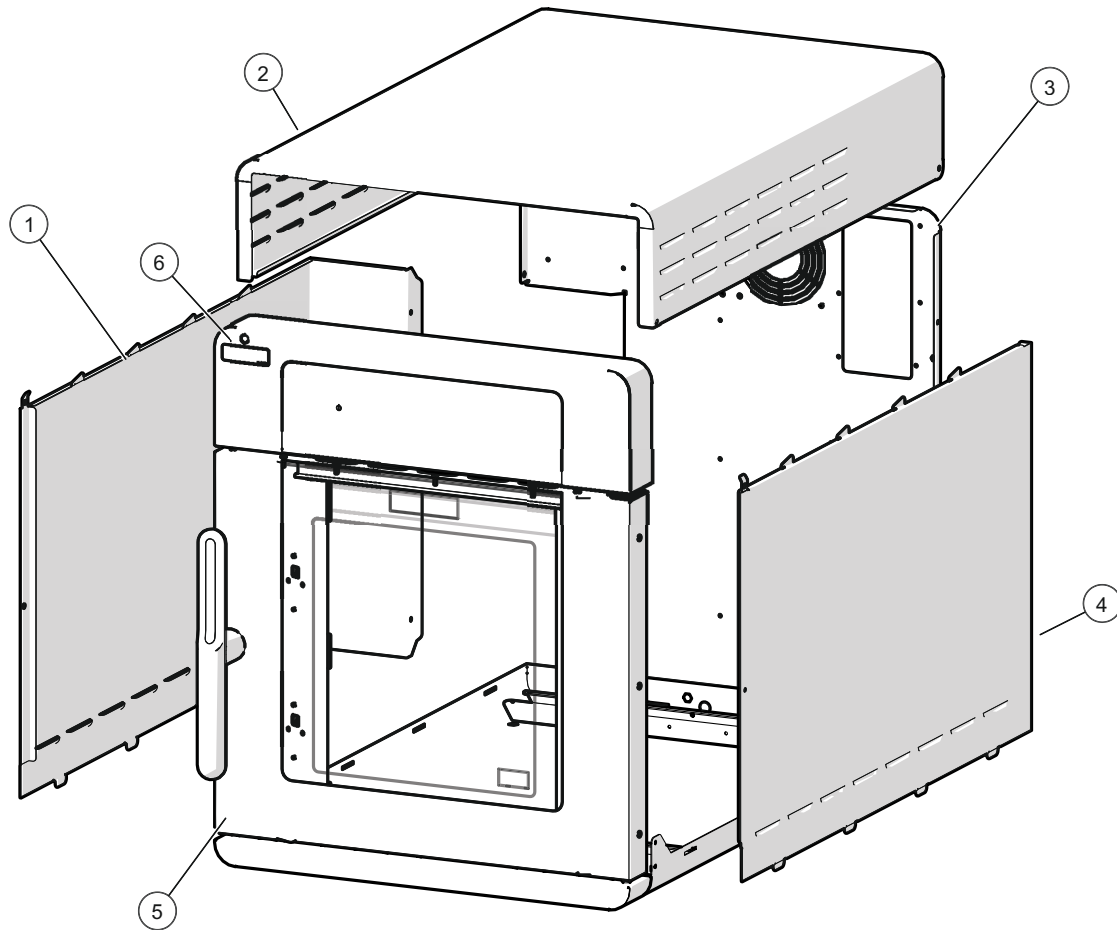

ID	Part No.	Description
1	1029173	SKIN, LEFT SIDE, VOLPI H2
2	1028905	SKIN, TOP, VOLPI H
3	1029161	SKIN, BACK, VOLPI H2
4	1029172	SKIN, RIGHT SIDE, VOLPI H2
5	5028748	DOOR ASSEMBLY VH2R
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H2 (LH)

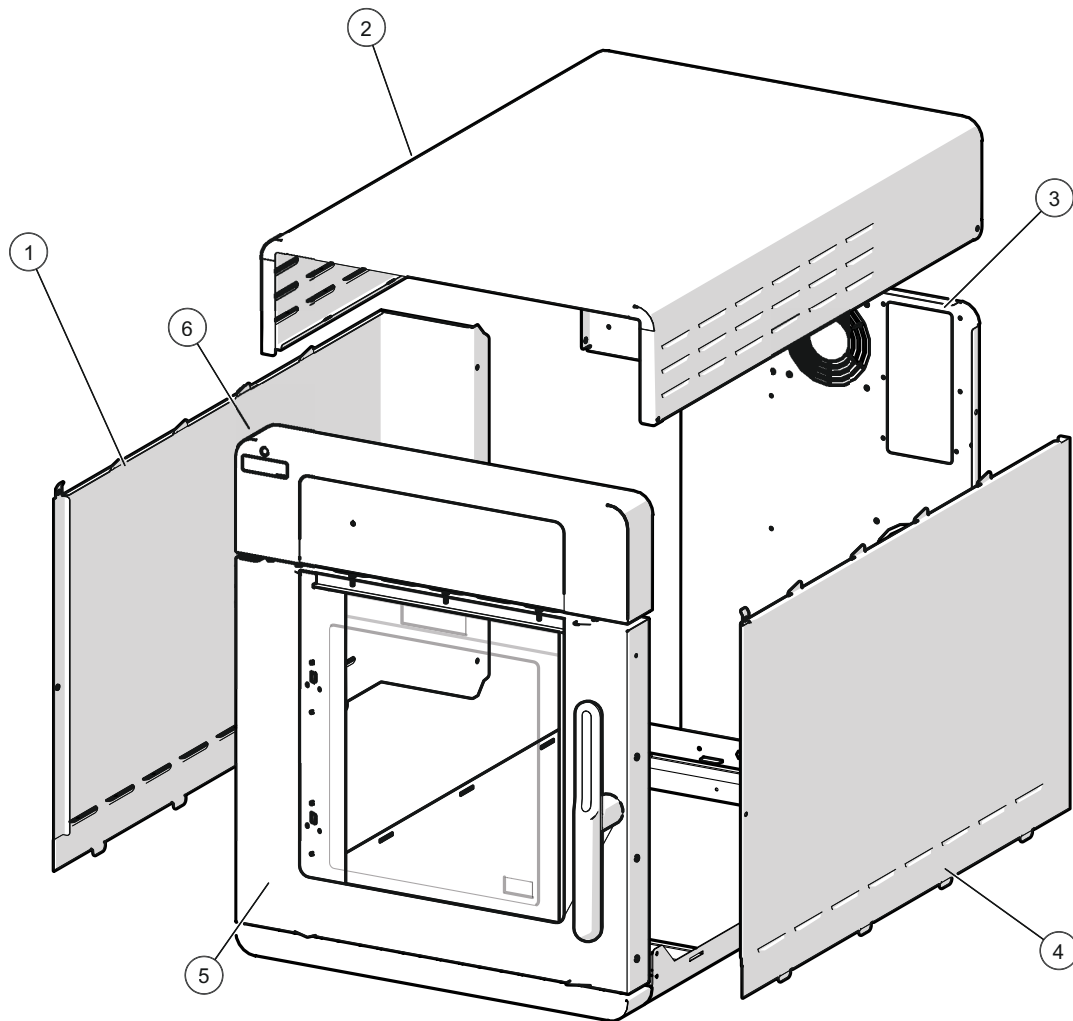

ID	Part No.	Description
1	1029173	SKIN, LEFT SIDE, VOLPI H2
2	1028905	SKIN, TOP, VOLPI H
3	1029161	SKIN, BACK, VOLPI H2
4	1029172	SKIN, RIGHT SIDE, VOLPI H2
5	5028787	DOOR ASSEMBLY VH2L
6	5027029	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H2H (RH)

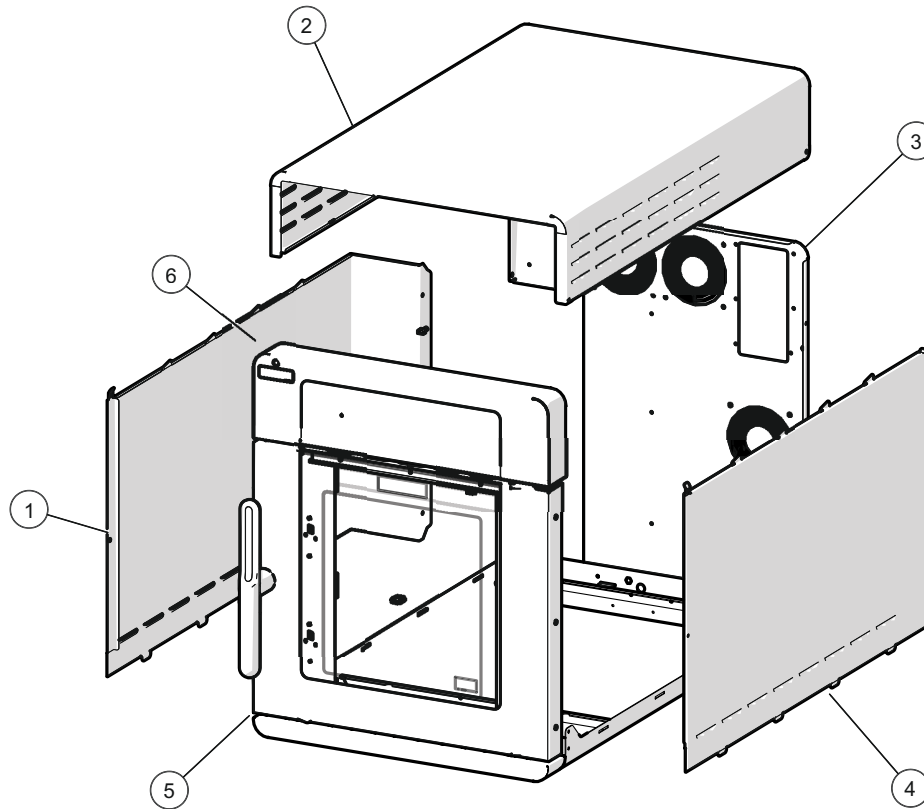

ID	Part No.	Description
1	1029219	SKIN, LEFT SIDE, VOLPI H2
2	1028086	SKIN, TOP, VOLPI H
3	1029161	SKIN, BACK, VOLPI H2
4	1029218	SKIN, RIGHT SIDE, VOLPI H2
5	5028748	DOOR ASSEMBLY VH2R
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H2H (LH)

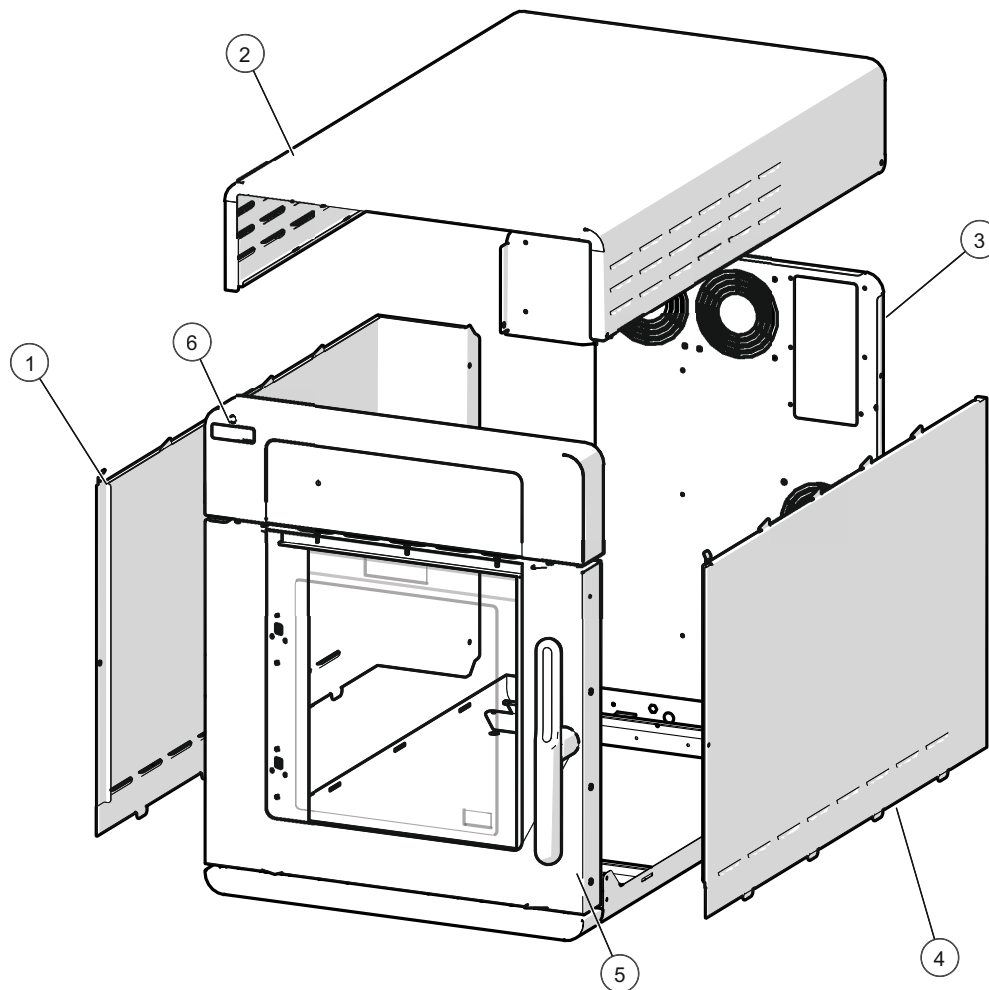

ID	Part No.	Description
1	5028494	SKIN, LEFT SIDE, VOLPI H2
2	5028787	SKIN, TOP, VOLPI H
3	1029219	SKIN, BACK, VOLPI H2
4	1028086	SKIN, RIGHT SIDE, VOLPI H2
5	5028787	DOOR ASSEMBLY VH2L
6	5028494	CONTROL PKG H SERIES DELUXE


Refer to "Fasteners" section for a list of fasteners for these parts.

Panel Assembly, H3 (RH)

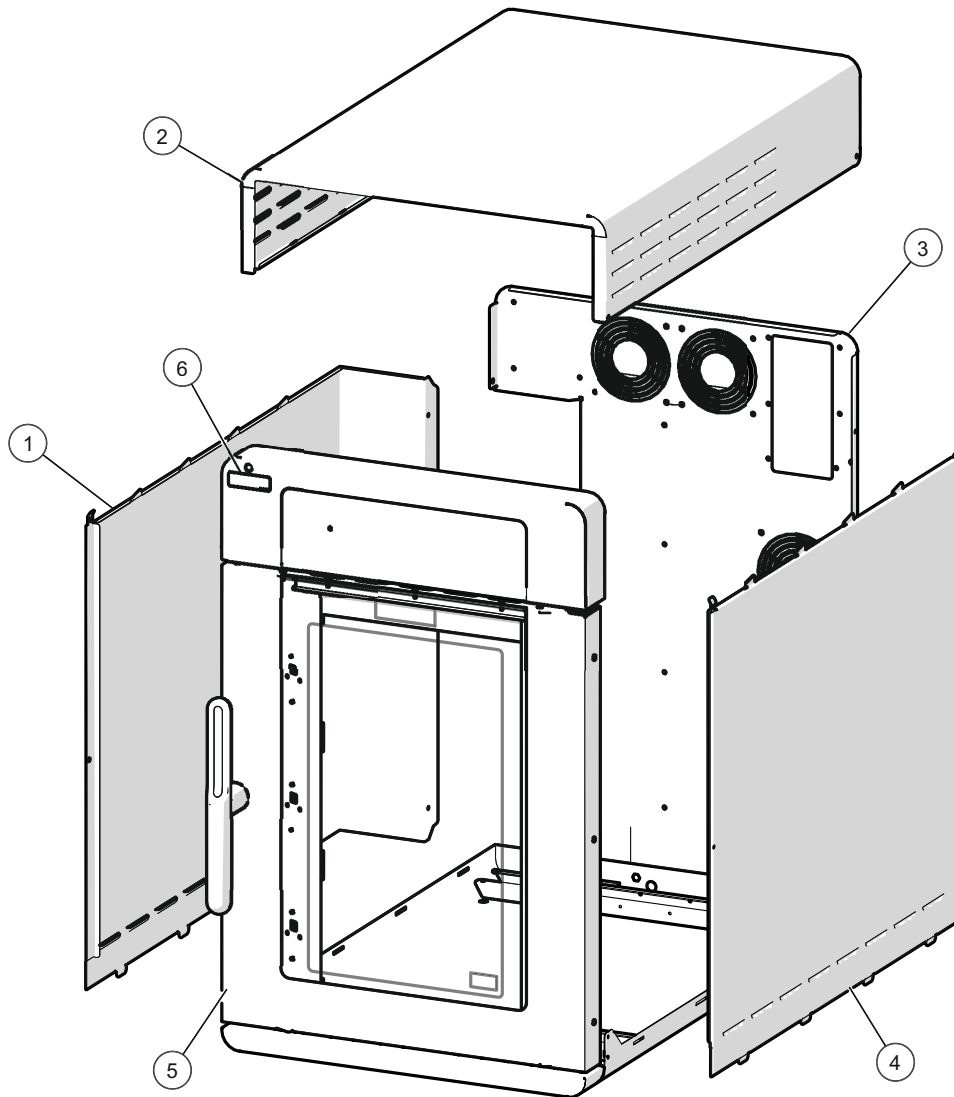

ID	Part No.	Description
1	5028736	SKIN, LEFT SIDE, VOLPI H3
2	1028905	SKIN, TOP, VOLPI H
3	1028091	SKIN, BACK, VOLPI H3
4	1028904	SKIN, RIGHT SIDE, VOLPI H3
5	5028736	DOOR ASSEMBLY VH3R
6	5028494	CONTROL PKG H SERIES DELUXE


Panel Assembly, H3 (LH)

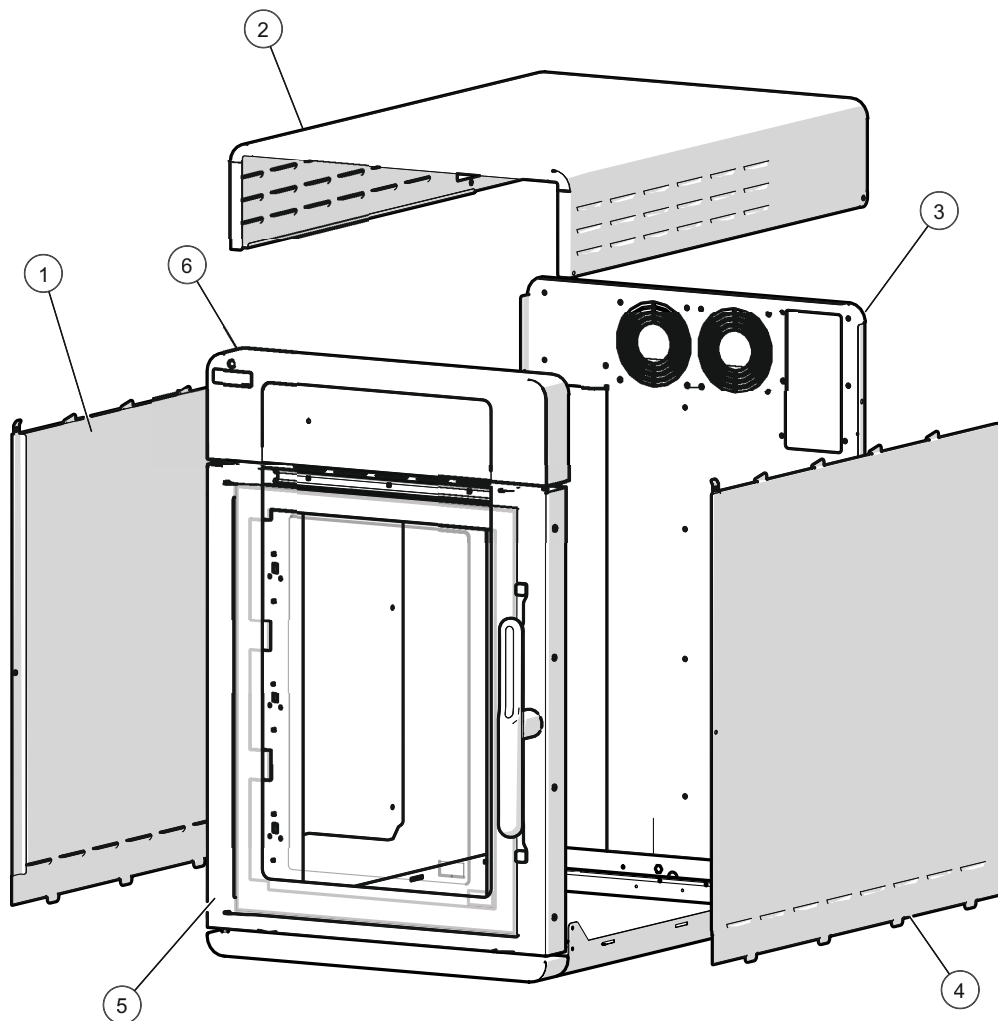

ID	Part No.	Description
1	1028903	SKIN, LEFT SIDE, VOLPI H3
2	1028905	SKIN, TOP, VOLPI H
3	1028091	SKIN, BACK, VOLPI H3
4	1028904	SKIN, RIGHT SIDE, VOLPI H3
5	5028782	DOOR ASSEMBLY VH3L
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H3H (RH)

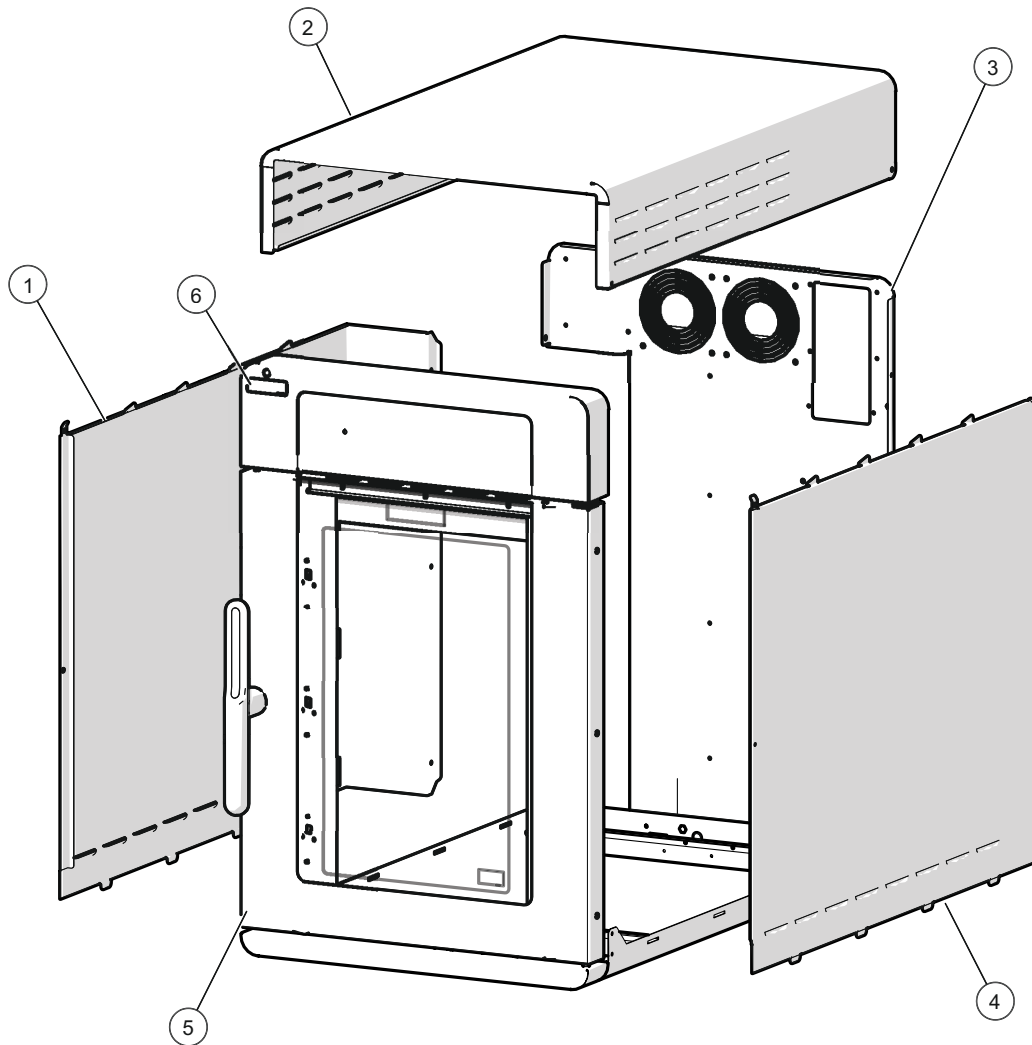

ID	Part No.	Description
1	1028093	SKIN, LEFT SIDE, VOLPI H3
2	1028086	SKIN, TOP, VOLPI H
3	1028091	SKIN, BACK, VOLPI H3
4	1028092	SKIN, RIGHT SIDE, VOLPI H3
5	5028736	DOOR ASSEMBLY VH3R
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H3H (LH)

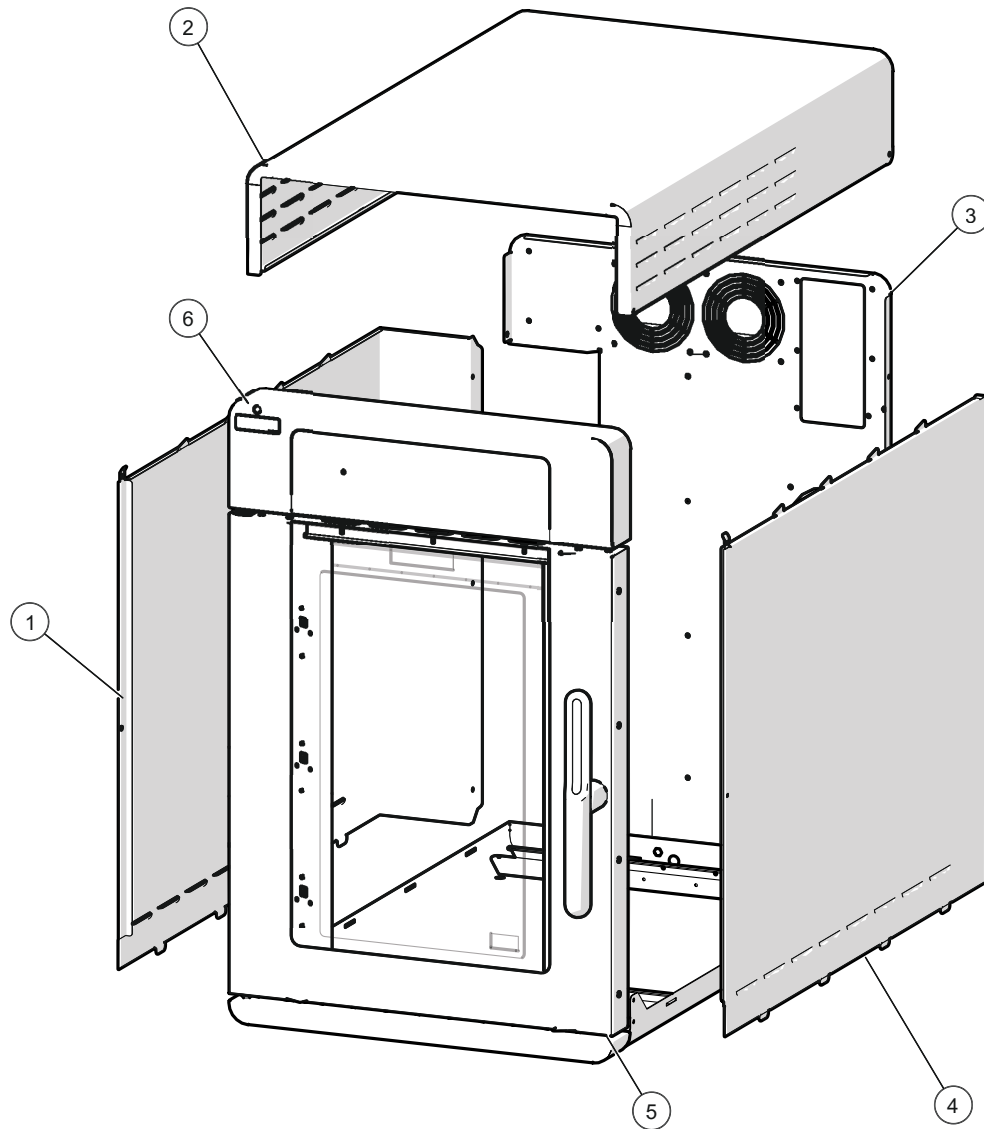

ID	Part No.	Description
1	1028093	SKIN, LEFT SIDE, VOLPI H3
2	1028086	SKIN, TOP, VOLPI H
3	1028091	SKIN, BACK, VOLPI H3
4	1028092	SKIN, RIGHT SIDE, VOLPI H3
5	5028782	DOOR ASSEMBLY VH3L
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H4 (RH)

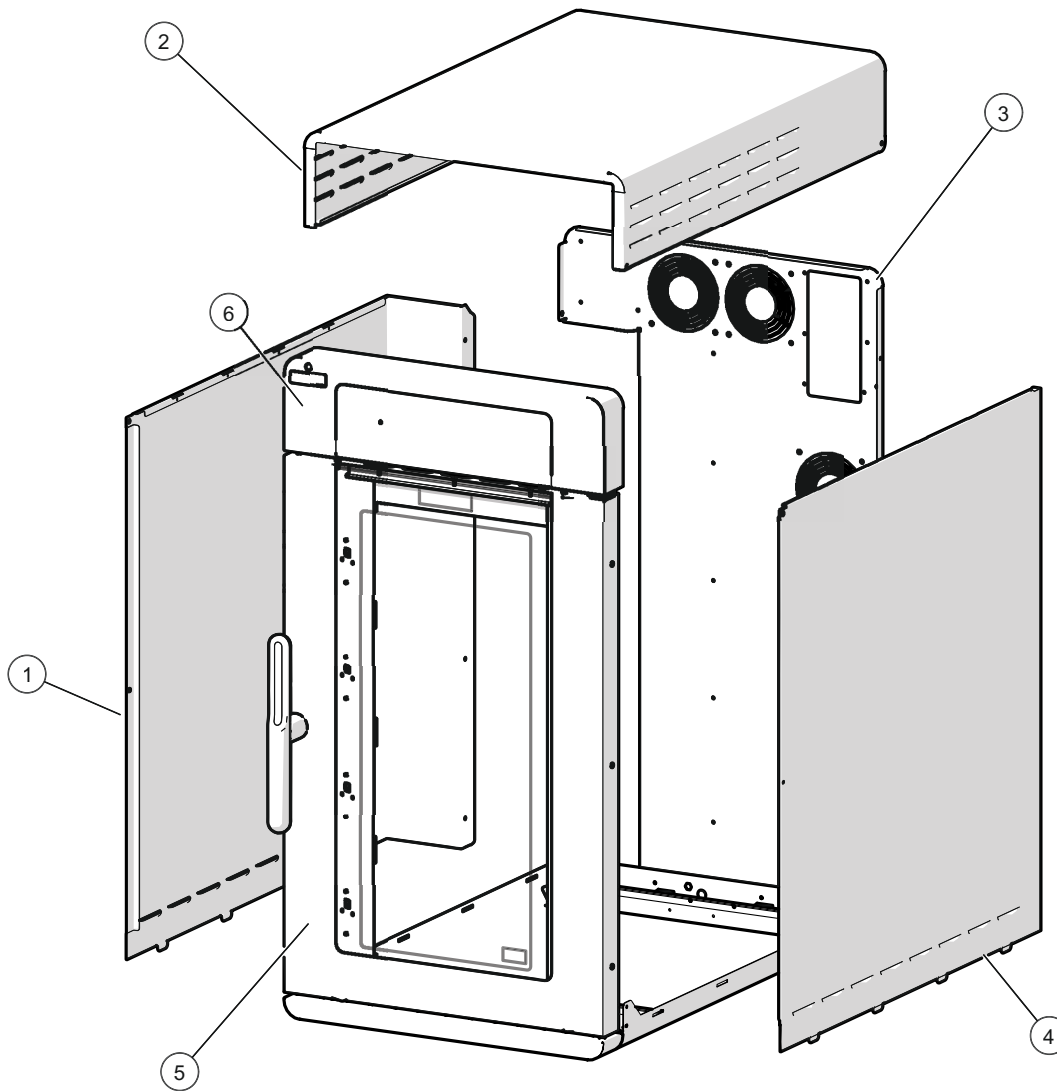

ID	Part No.	Description
1	1028914	SKIN, LEFT SIDE, VOLPI H4
2	1028905	SKIN, TOP, VOLPI H
3	1028915	SKIN, BACK, VOLPI H4
4	1028913	SKIN, RIGHT SIDE, VOLPI H4
5	5028534	DOOR ASSEMBLY VH4R
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H4 (LH)

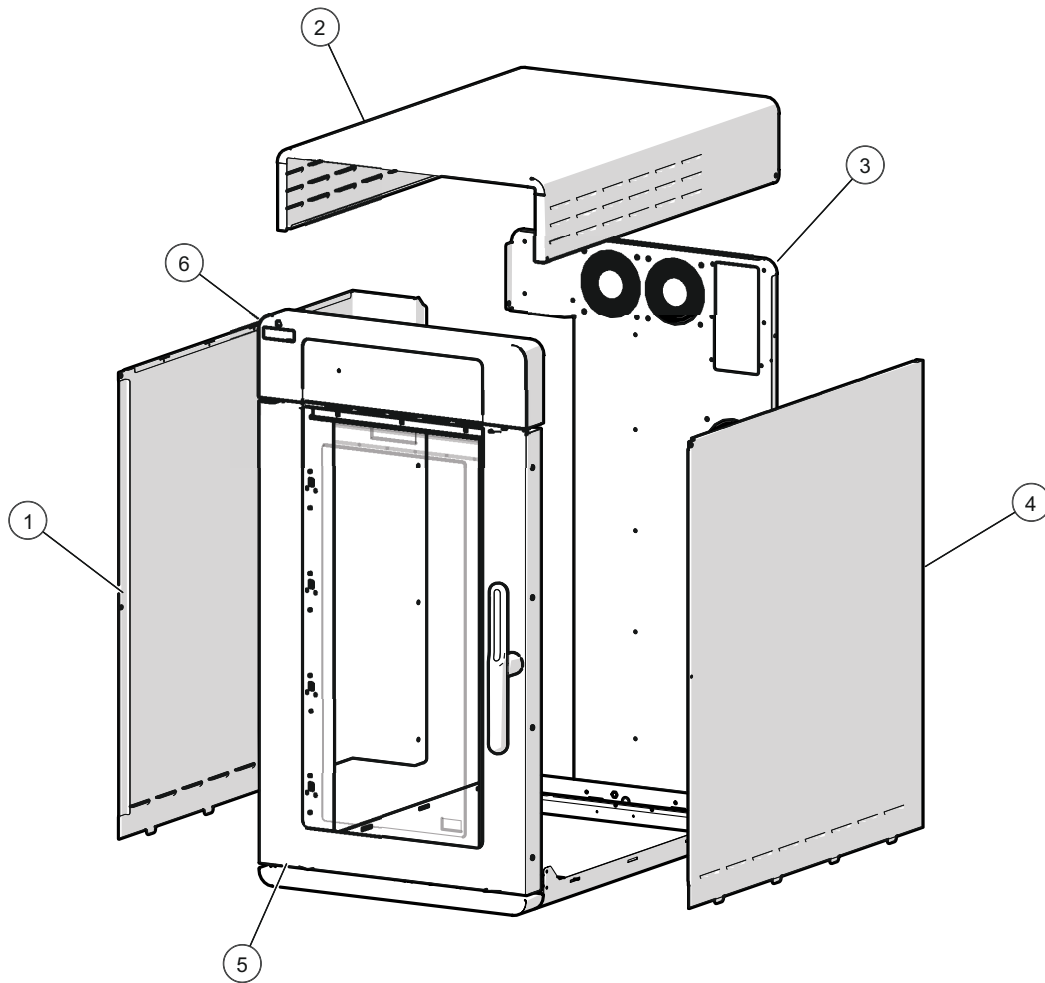

ID	Part No.	Description
1	1028915	SKIN, LEFT SIDE, VOLPI H4
2	1028913	SKIN, TOP, VOLPI H
3	1028905	SKIN, BACK, VOLPI H4
4	1028914	SKIN, RIGHT SIDE, VOLPI H4
5	5028613	DOOR ASSEMBLY VH4L
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H4H (RH)

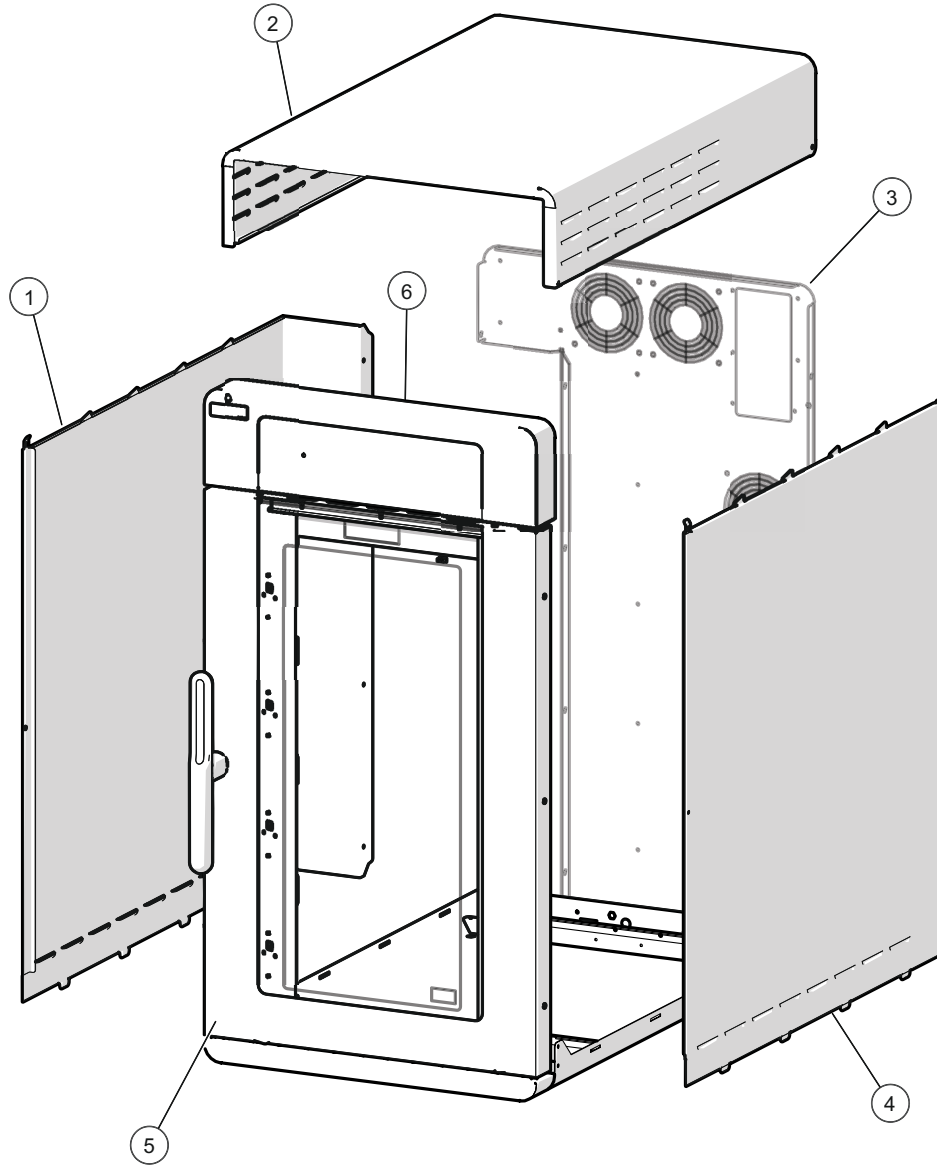

ID	Part No.	Description
1	1029100	SKIN, LEFT SIDE, H4H
2	1028086	SKIN, TOP, VOLPI H
3	1028915	SKIN, BACK, VOLPI H4
4	1029099	SKIN, RIGHT SIDE, H4H
5	5028534	DOOR ASSEMBLY VH4R
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Panel Assembly, H4H (LH)

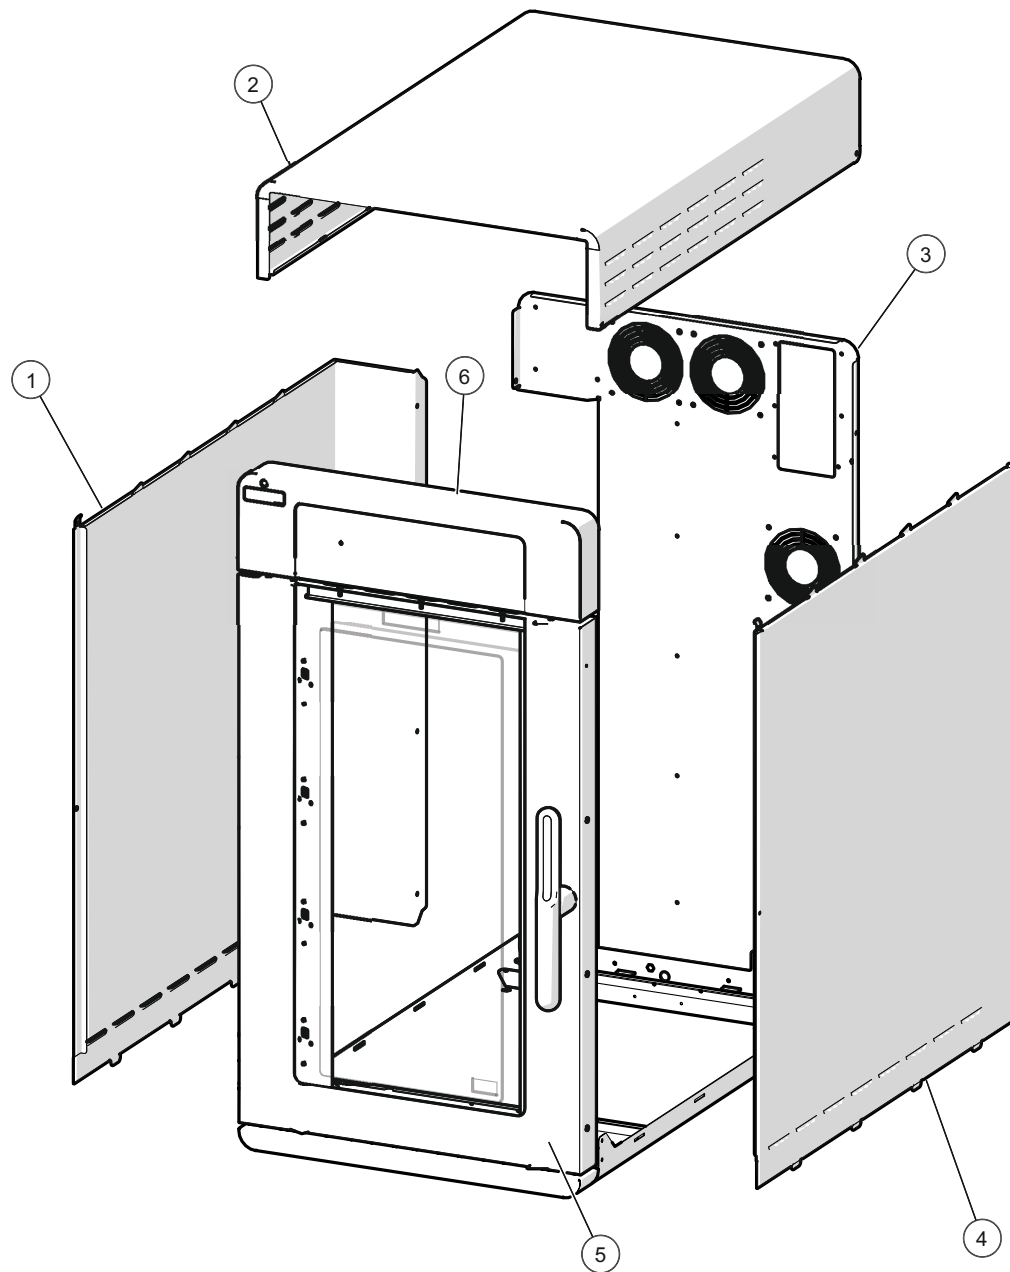

ID	Part No.	Description
1	1029100	SKIN, LEFT SIDE, H4H
2	1028086	SKIN, TOP, VOLPI H
3	1028915	SKIN, BACK, VOLPI H4
4	1029099	SKIN, RIGHT SIDE, H4H
5	5028613	DOOR ASSEMBLY VH4L
6	5028494	CONTROL PKG H SERIES DELUXE

Refer to "Fasteners" section for a list of fasteners for these parts.


Door Assembly, Right, H2/H2H

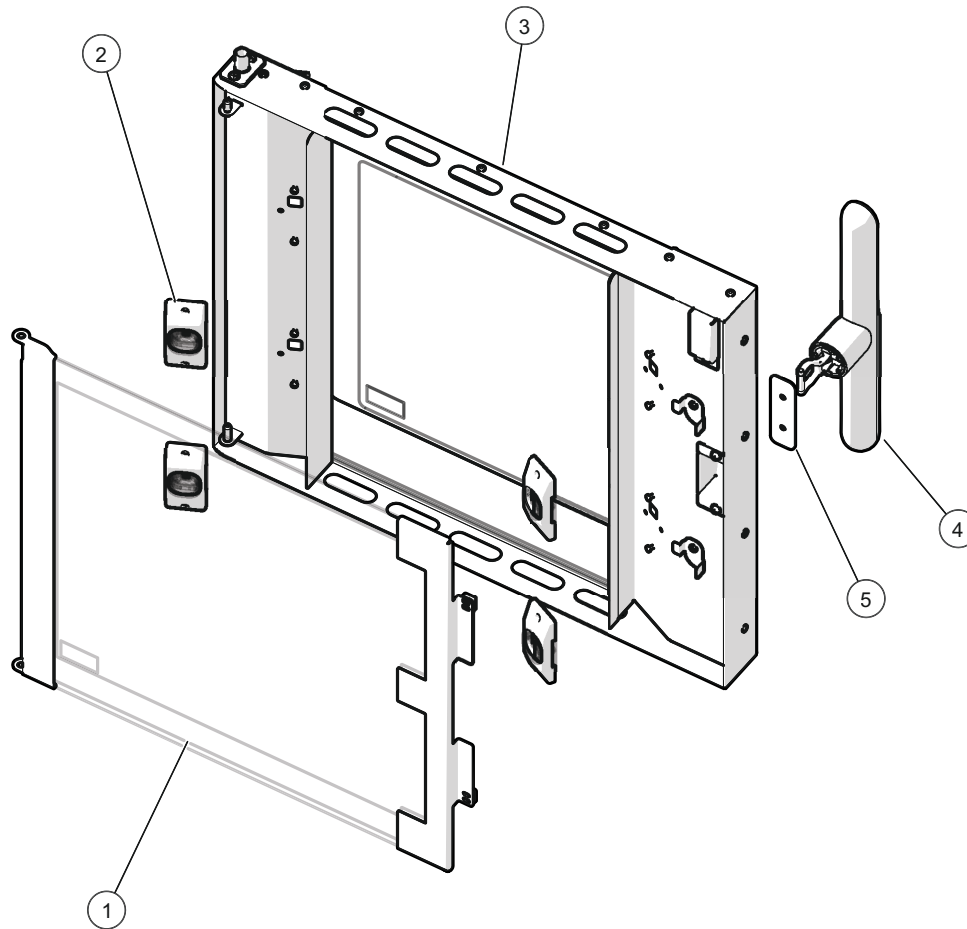

ID	Part No.	Description
1	5028749	DOOR, INNER VH2R
2	5028680	ASSEMBLY, LED IN-DOOR
3	5028909	DOOR ASSY, OUTER, VH2R
4	5028179R	KIT, SERVICE HANDLE REPLACEMENT
5	1031060	LATCH SPACER

Refer to "Fasteners" section for a list of fasteners for these parts.


Door Assembly, Left, H2/H2H

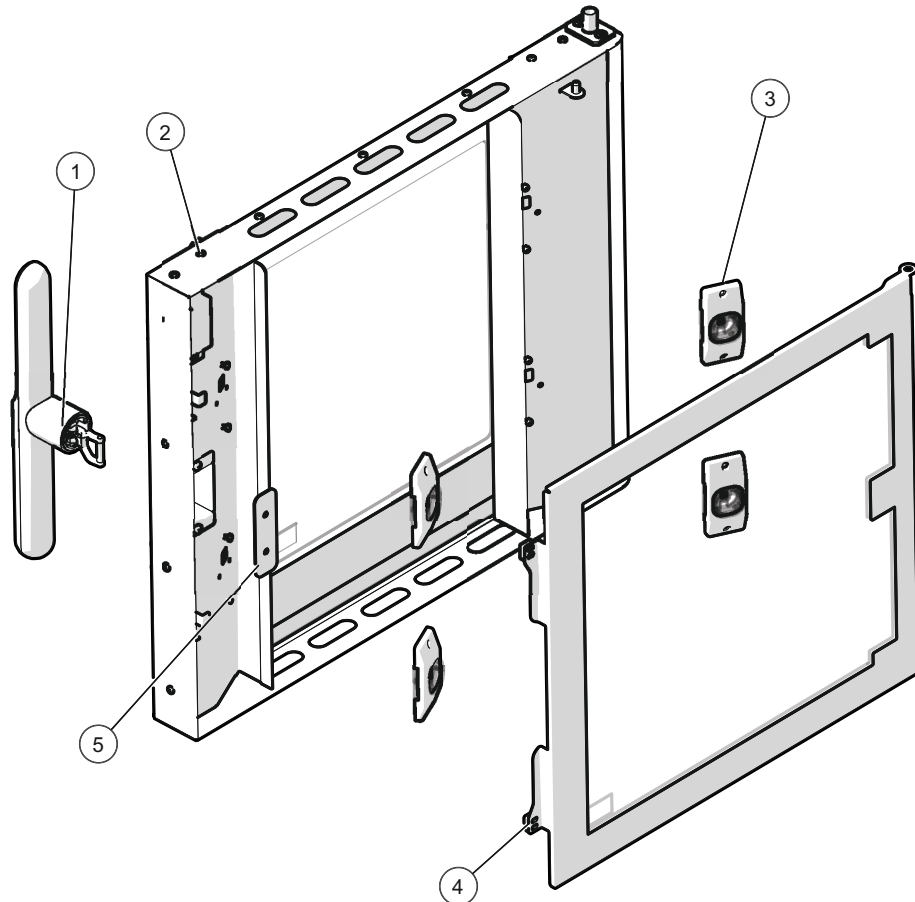

ID	Part No.	Description
1	5028179R	KIT, SERVICE HANDLE REPLACEMENT
2	5028910	DOOR ASSY, OUTER, VH2L
3	5028680	ASSEMBLY, LED IN-DOOR
4	5028791	DOOR, INNER GLASS, VH2L
5	1031060	LATCH SPACER

Refer to "Fasteners" section for a list of fasteners for these parts.


Door Assembly, Right, H3/H3H

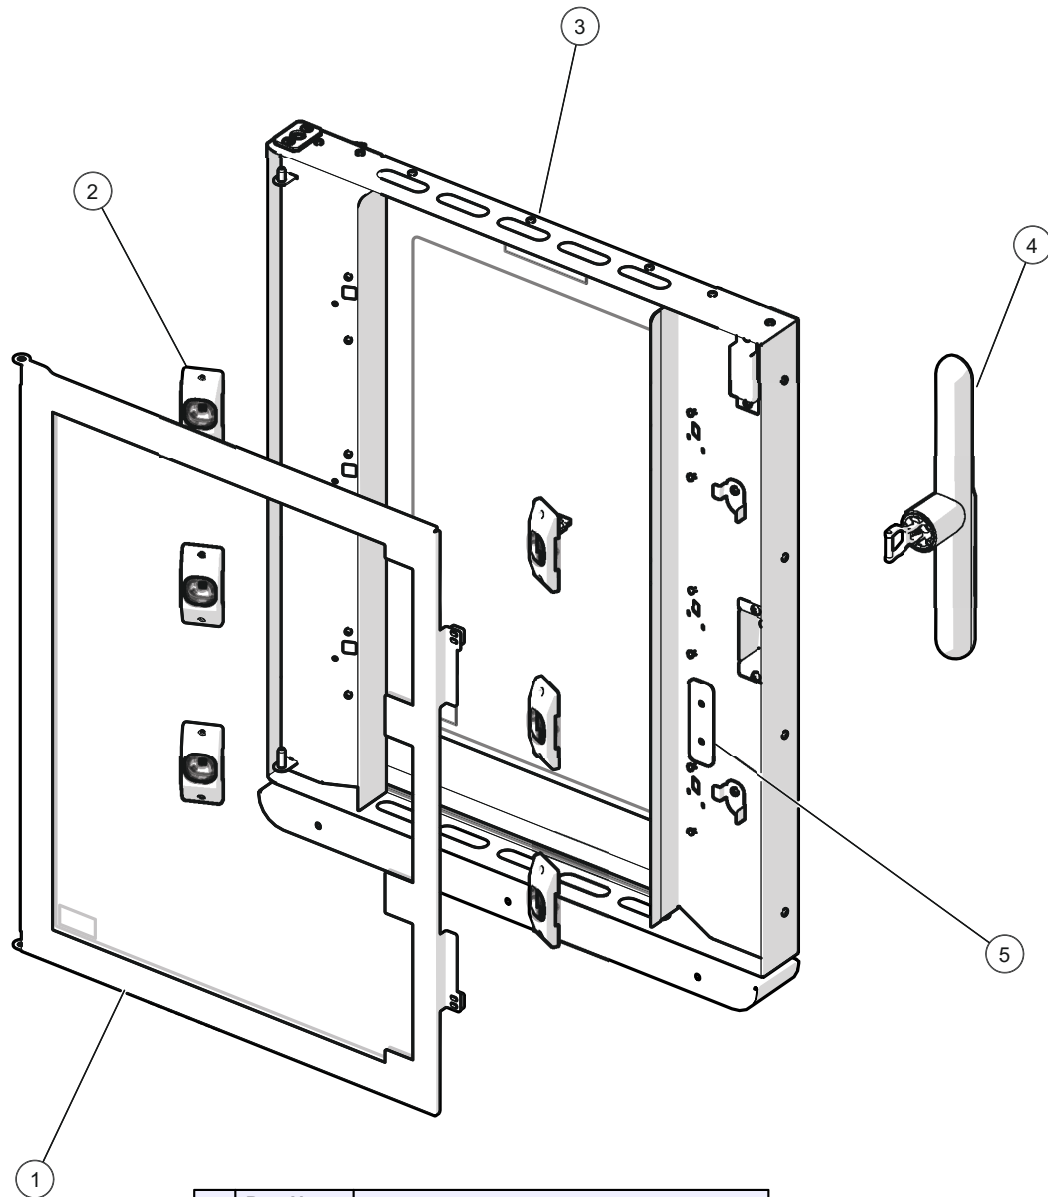

ID	Part No.	Description
5	1031060	LATCH SPACER
4	5028179R	KIT, SERVICE HANDLE REPLACEMENT
2	5028680	ASSEMBLY, LED IN-DOOR
1	5028737	DOOR, INNER VH3R
3	5028907	DOOR ASSY, OUTER, VH3R

Refer to "Fasteners" section for a list of fasteners for these parts.


Door Assembly, Left, H3/H3H

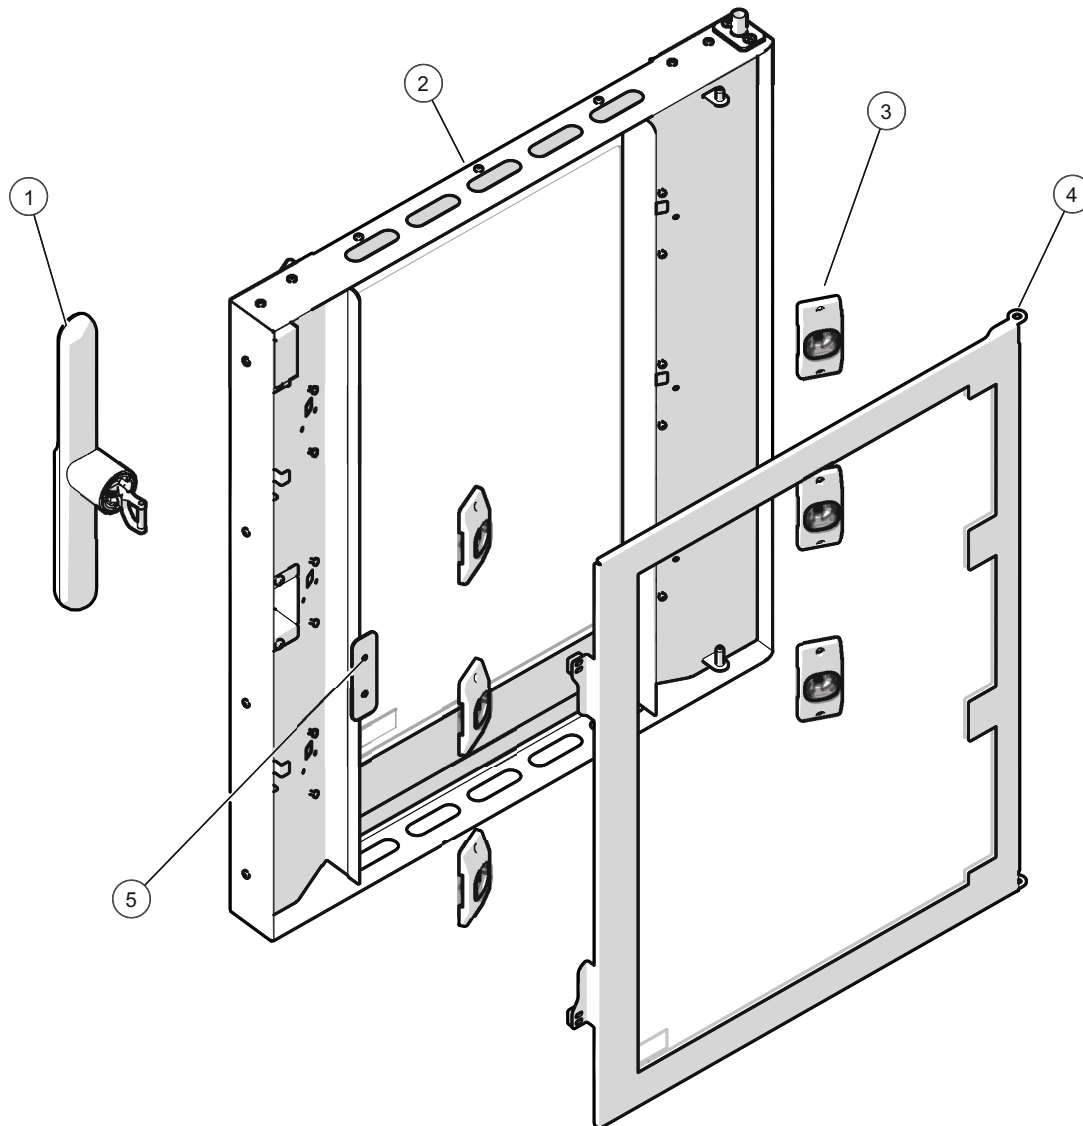

ID	Part No.	Description
1	5028179R	KIT, SERVICE HANDLE ASSEMBLY
2	5028908	DOOR ASSY, OUTER, VH3L
3	5028680	ASSEMBLY, LED IN-DOOR
4	5028786	DOOR, INNER GLASS, VH3L
5	1031060	LATCH SPACER

Refer to "Fasteners" section for a list of fasteners for these parts.


Door Assembly, Right, H4/H4H

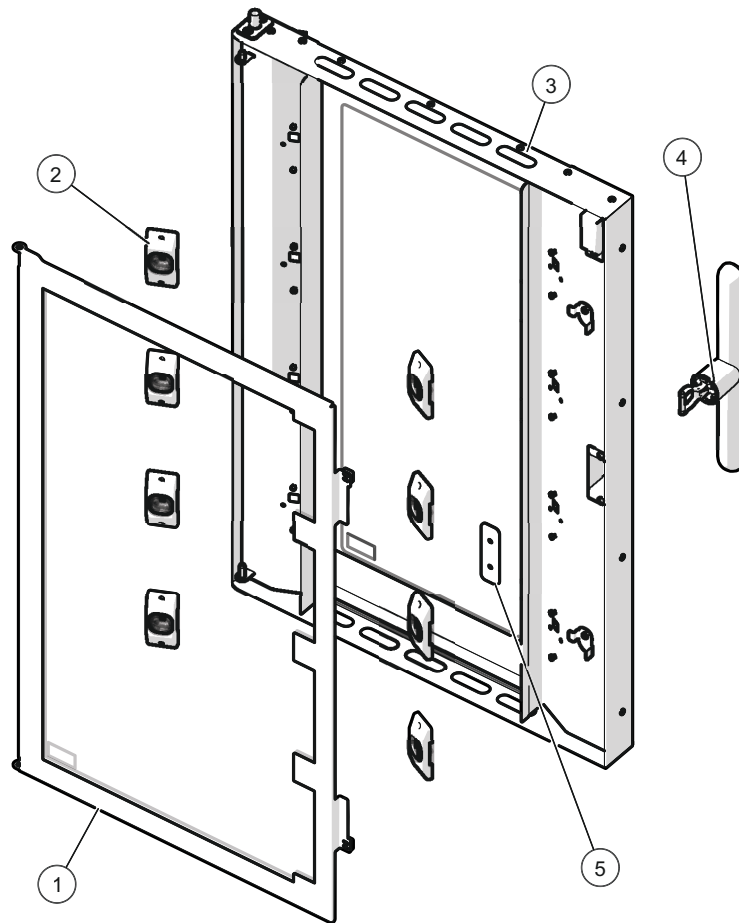

ID	Part No.	Description
1	5028681	DOOR, INNER VH4R
2	5028680	ASSEMBLY, LED IN-DOOR
3	5028905	DOOR ASSY, OUTER, VH4R
4	5028179R	KIT, SERVICE HANDLE ASSEMBLY
5	1031060	LATCH SPACER

Refer to "Fasteners" section for a list of fasteners for these parts.


Door Assembly, Left, H4/H4H

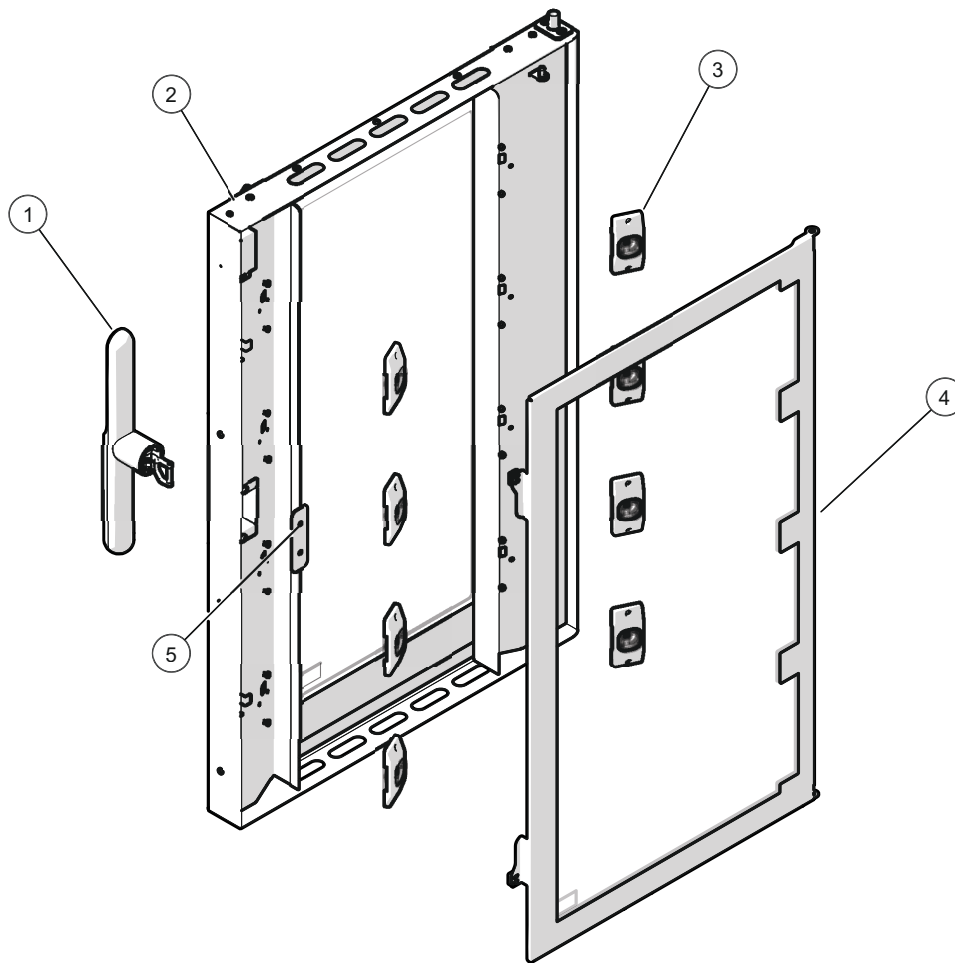

ID	Part No.	Description
1	5028179R	KIT, SERVICE HANDLE ASSEMBLY
2	5028906	DOOR ASSY, OUTER, VH4L
3	5028680	ASSEMBLY, LED IN-DOOR
4	5028776	DOOR, INNER GLASS, VH4L
5	1031060	LATCH SPACER

Refer to "Fasteners" section for a list of fasteners for these parts.


Control Panel, All Models

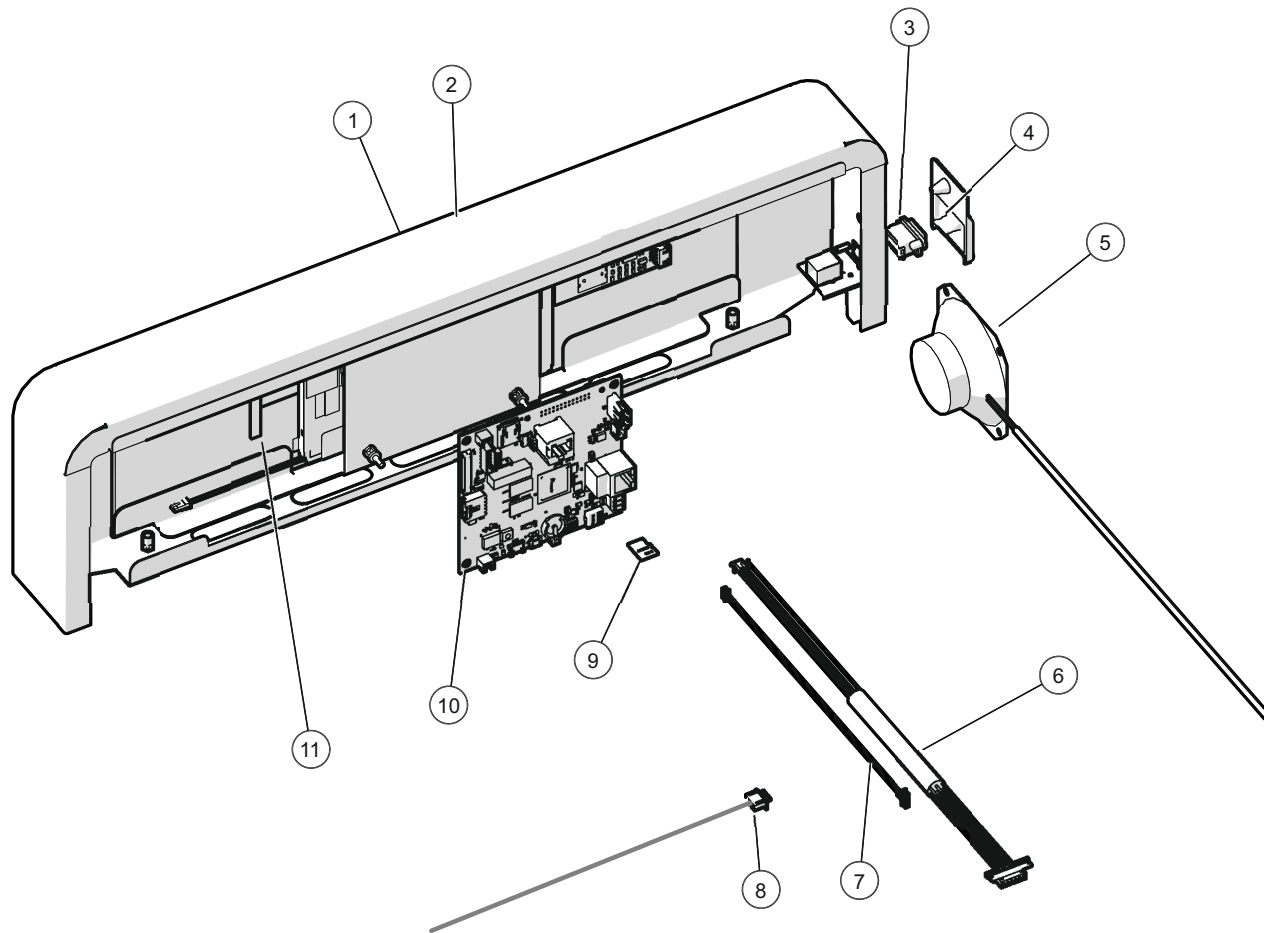

ID	Part No.	Description
1	5027029	PANEL, CONTROL ASSEM, VOLPI H
2	5028218	TOUCH GLASS ASSEMBLY
3	BA-39847	BOARD,USB RECEPTACLE
4	CP-39848	CAP,USB
5	BZ-39711	BUZZER, SPEAKER, W/24" CABLE
6	CB-46030	CABLE, LVDS & BL, AMPIRE
7	CB-39912	CABLE,PCAP
8	CB-34917	CABLE,ON-OFF/BOARD,TOUCH
9	CC-46028	MICRO SD CARD
10	CC-46005	BOARD, INTERFACE
11	5028178	ANTENNA, WIFI CONTROL


Refer to "Fasteners" section for a list of fasteners for these parts.

Electrical Chassis, H2/H2H, 208-240V, 60HZ, 1PH

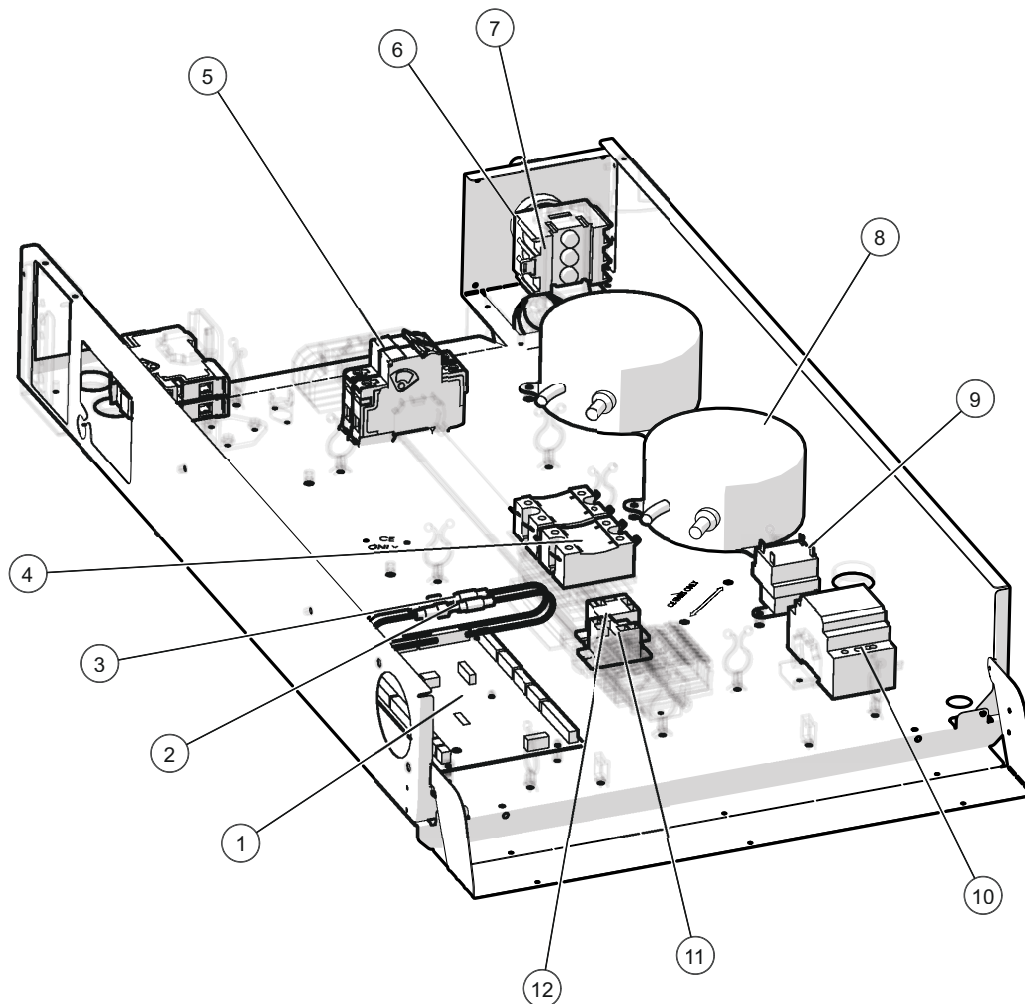


ID	Part No.	Description
1	CC-46459	BOARD, CONTROL, FOR VMC
2	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V, FAST ACTING,
4	RL-33829	RELAY, SOLID STATE, 230V, 25A
5	FU-39058	CIRCUIT BREAKER, 20A
6	KN-37667	KNOB, POWER, INCLUDED W/SWITCH
7	SW-37630	POWER SWITCH, DISCONNECT 60A
8	BA-39023	CONTROLLER, BOARD, TELCO
9	TN-37722	TRANSFORMER, 12V OUT, 240V IN,
10	BA-37724	POWER SUPPLY, 12VDC
11	RE-37704	RELAY, 12VDC
12	RE-37725	RELAY, 240V AC

Electrical Chassis, H2/H2H, 220-240V, 50/60HZ, 1PH CE

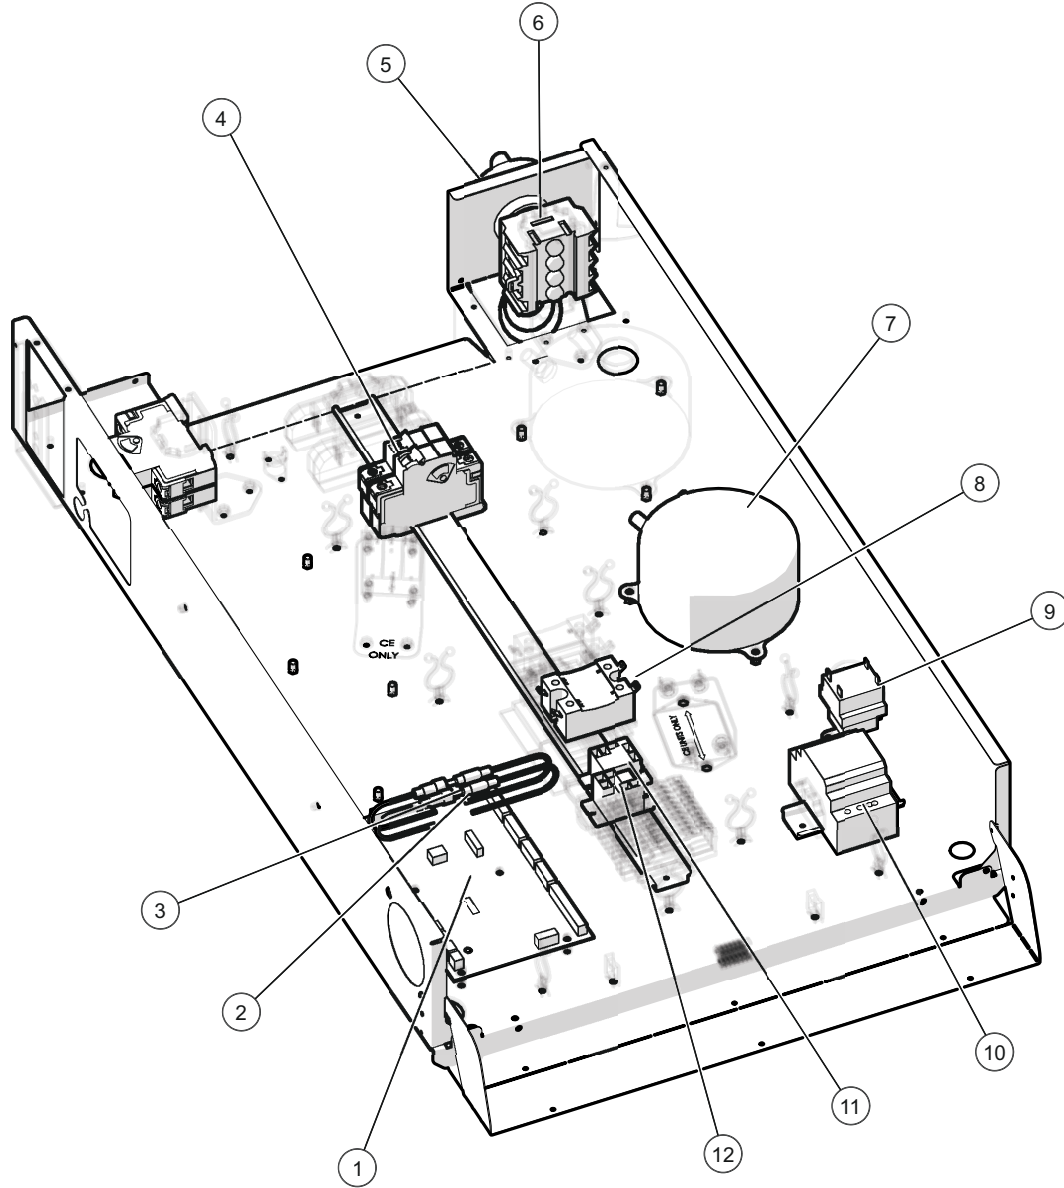


ID	Part No.	Description
1	RE-37725	BOARD,CONTROL, FOR VMC
2	RE-37704	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
4	KN-39058	CIRCUIT BREAKER, 20A
5	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
6	SW-39228	POWER SWITCH,DISCONNECT 60A
7	BA-39023	CONTROLLER,BOARD,TELCO
8	RL-33829	RELAY, SOLID STATE, 230V, 25A
9	TN-37722	TRANSFORMER,12V OUT,240V IN,
10	BA-37724	POWER SUPPLY, 12VDC
11	RE-37725	RELAY, 240V AC
12	RE-37704	RELAY,12VDC

Electrical Chassis, H2/H2H, 380-415V, 50/60HZ, 3PH CE

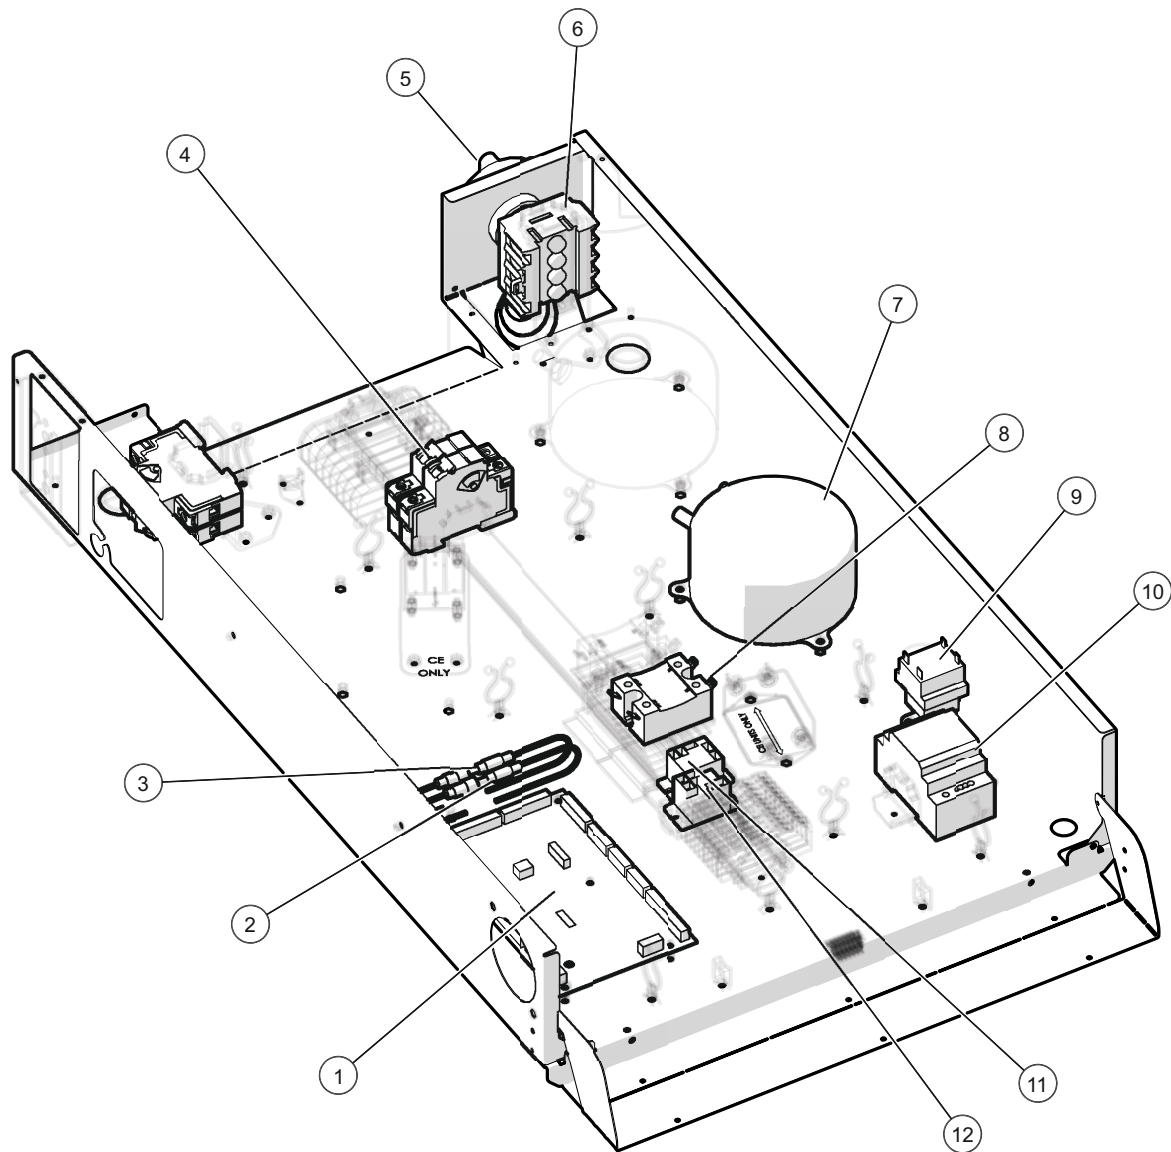


ID	Part No.	Description
1	CC-46459	BOARD,CONTROL, FOR VMC
2	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
4	FU-39058	CIRCUIT BREAKER, 20A
5	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
6	SW-39228	POWER SWITCH,DISCONNECT 60A
7	BA-39023	CONTROLLER,BOARD,TELCO
8	RL-33829	RELAY, SOLID STATE, 230V, 25A
9	TN-37722	TRANSFORMER,12V OUT,240V IN,
10	BA-37724	POWER SUPPLY, 12VDC
11	RE-37725	RELAY, 240V AC
12	RE-37704	RELAY,12VDC

Electrical Chassis, H3/H3H, 208-240V, 60HZ, 1PH

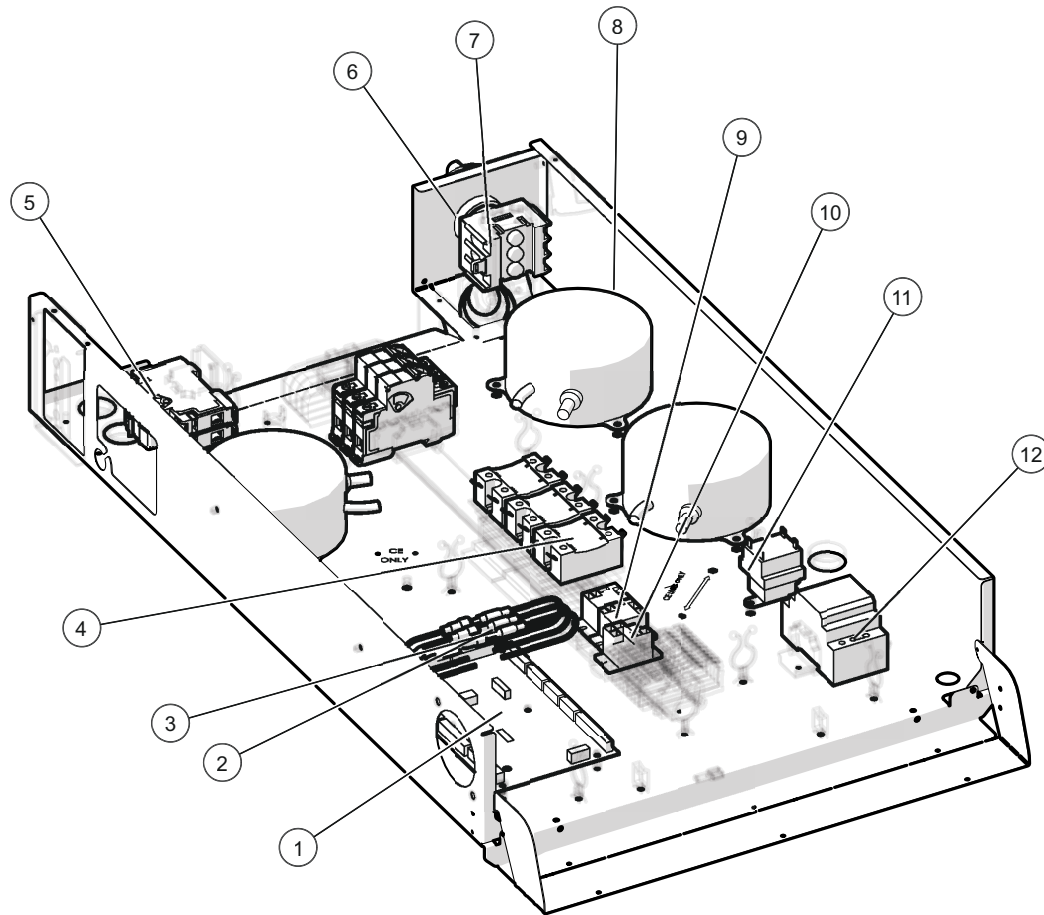


ID	Part No.	Description
1	CC-46459	BOARD,CONTROL, FOR VMC
2	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
4	RL-33829	RELAY, SOLID STATE, 230V, 25A
5	FU-39058	CIRCUIT BREAKER, 20A
6	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
7	SW-37630	POWER SWITCH,DISCONNECT 60A
8	BA-39023	CONTROLLER,BOARD,TELCO
9	RE-37725	RELAY, 240V AC
10	RE-37704	RELAY,12VDC
11	TN-37722	TRANSFORMER,12V OUT,240V IN,
12	BA-37724	POWER SUPPLY, 12VDC

Electrical Chassis, H3/H3H, 208-240V, 60HZ, 3PH

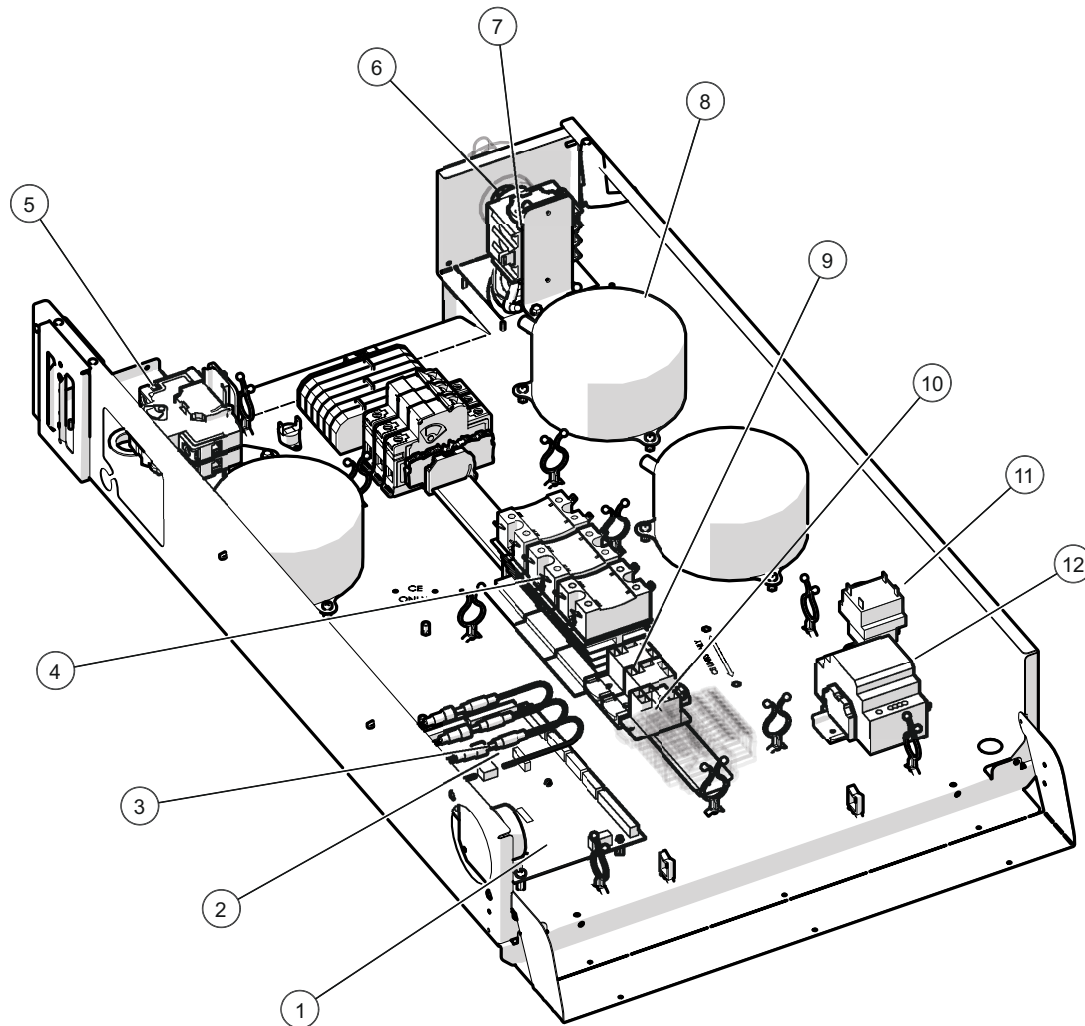


ID	Part No.	Description
1	CC-39528	BOARD,CONTROL, FOR VMC
2	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
4	RL-33829	RELAY, SOLID STATE, 230V, 25A
5	FU-39058	CIRCUIT BREAKER, 20A
6	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
7	SW-37630	POWER SWITCH,DISCONNECT 60A
8	BA-39023	CONTROLLER,BOARD,TELCO
9	RE-37725	RELAY, 240V AC
10	RE-37704	RELAY,12VDC
11	TN-37722	TRANSFORMER,12V OUT,240V IN,
12	BA-37724	POWER SUPPLY, 12VDC

Electrical Chassis, H3/H3H, 220-240V, 50/60HZ, 1PH CE

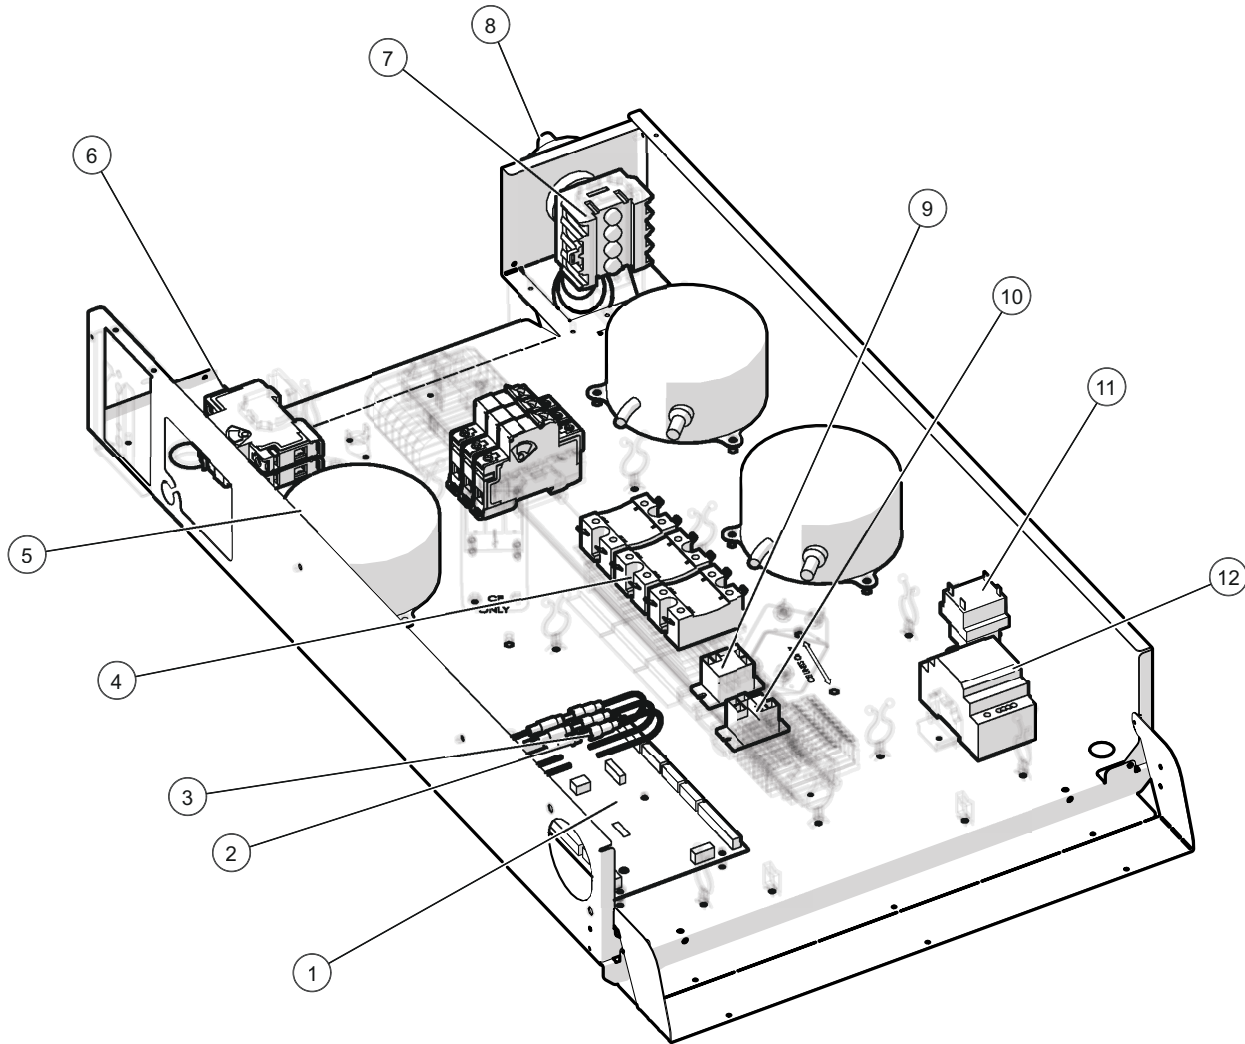


ID	Part No.	Description
1	CC-46459	BOARD,CONTROL, FOR VMC
2	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
4	RL-33829	RELAY, SOLID STATE, 230V, 25A
5	BA-39023	CONTROLLER,BOARD,TELCO
6	FU-39058	CIRCUIT BREAKER, 20A
7	SW-39228	POWER SWITCH,DISCONNECT 60A
8	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
9	RE-37725	RELAY, 240V AC
10	RE-37704	RELAY,12VDC
11	TN-37722	TRANSFORMER,12V OUT,240V IN,
12	BA-37724	POWER SUPPLY, 12VDC

Electrical Chassis, H3/H3H, 380-415V, 50/60HZ, 3PH CE

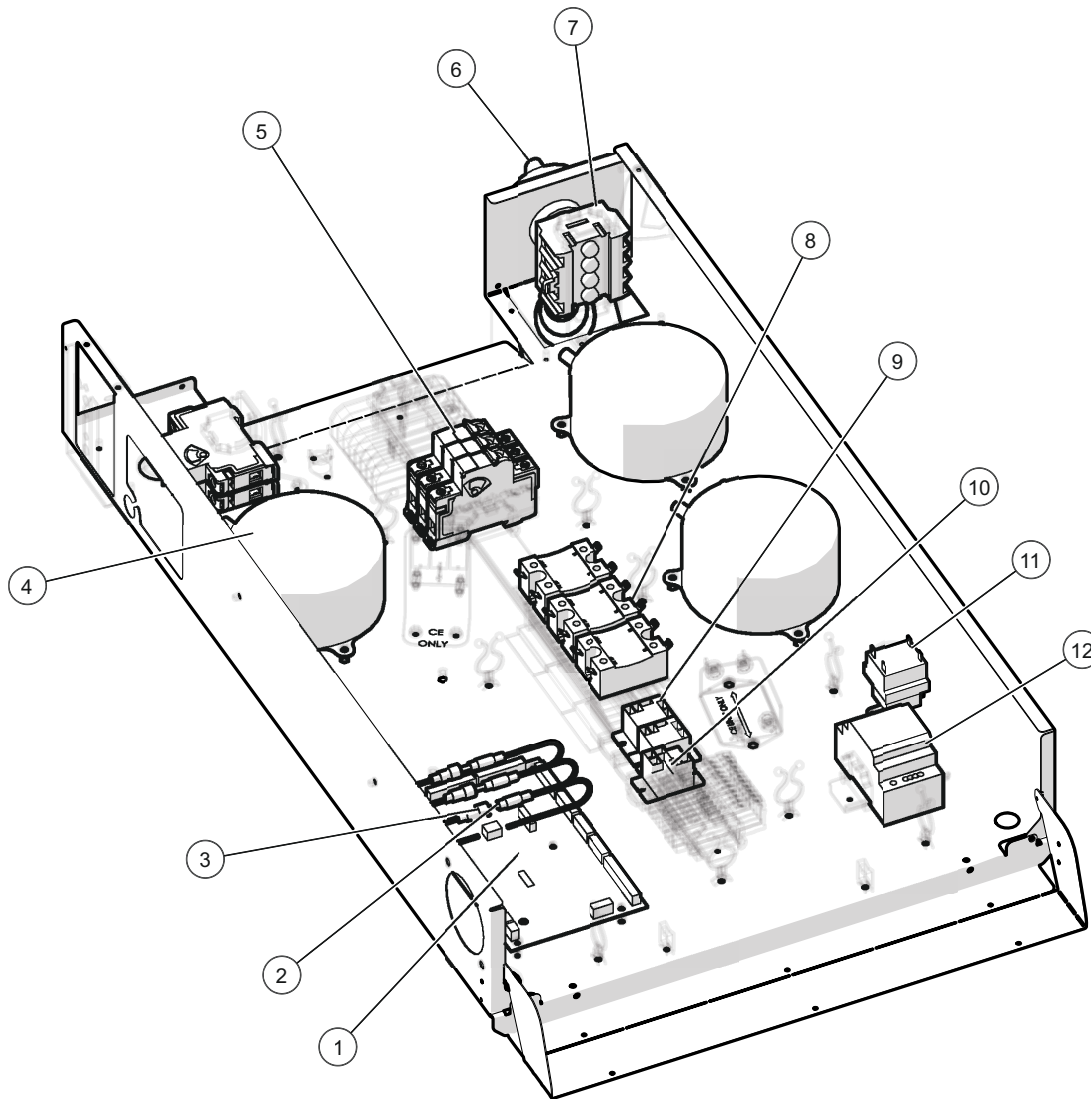


ID	Part No.	Description
1	CC-46459	BOARD,CONTROL, FOR VMC
2	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
3	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
4	BA-39023	CONTROLLER,BOARD,TELCO
5	FU-39058	CIRCUIT BREAKER, 20A
6	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
7	SW-39228	POWER SWITCH,DISCONNECT 60A
8	RL-33829	RELAY, SOLID STATE, 230V, 25A
9	RE-37725	RELAY, 240V AC
10	RE-37704	RELAY,12VDC
11	TN-37722	TRANSFORMER,12V OUT,240V IN,
12	BA-37724	POWER SUPPLY, 12VDC

Electrical Chassis, H4/H4H, 208-240V, 60HZ, 3PH

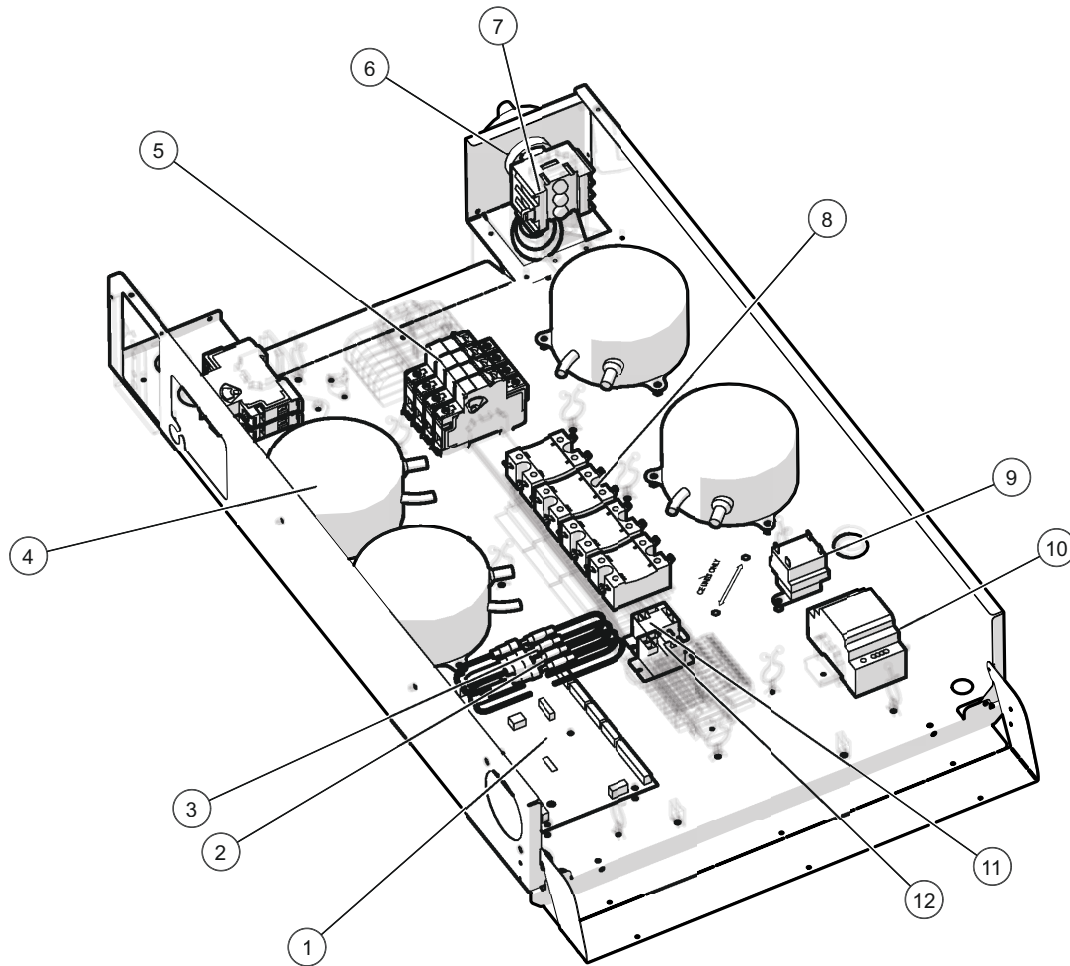


ID	Part No.	Description
1	CC-46459	BOARD,CONTROL, FOR VMC
2	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
4	BA-39023	CONTROLLER,BOARD,TELCO
5	FU-39058	CIRCUIT BREAKER, 20A
6	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
7	SW-37630	POWER SWITCH,DISCONNECT 60A
8	RL-33829	RELAY, SOLID STATE, 230V, 25A
9	TN-37722	TRANSFORMER,12V OUT,240V IN,
10	BA-37724	POWER SUPPLY, 12VDC
11	RE-37725	RELAY, 240V AC
12	RE-37704	RELAY,12VDC

Electrical Chassis, H4/H4H, 380-415V, 50/60HZ, 3PH CE

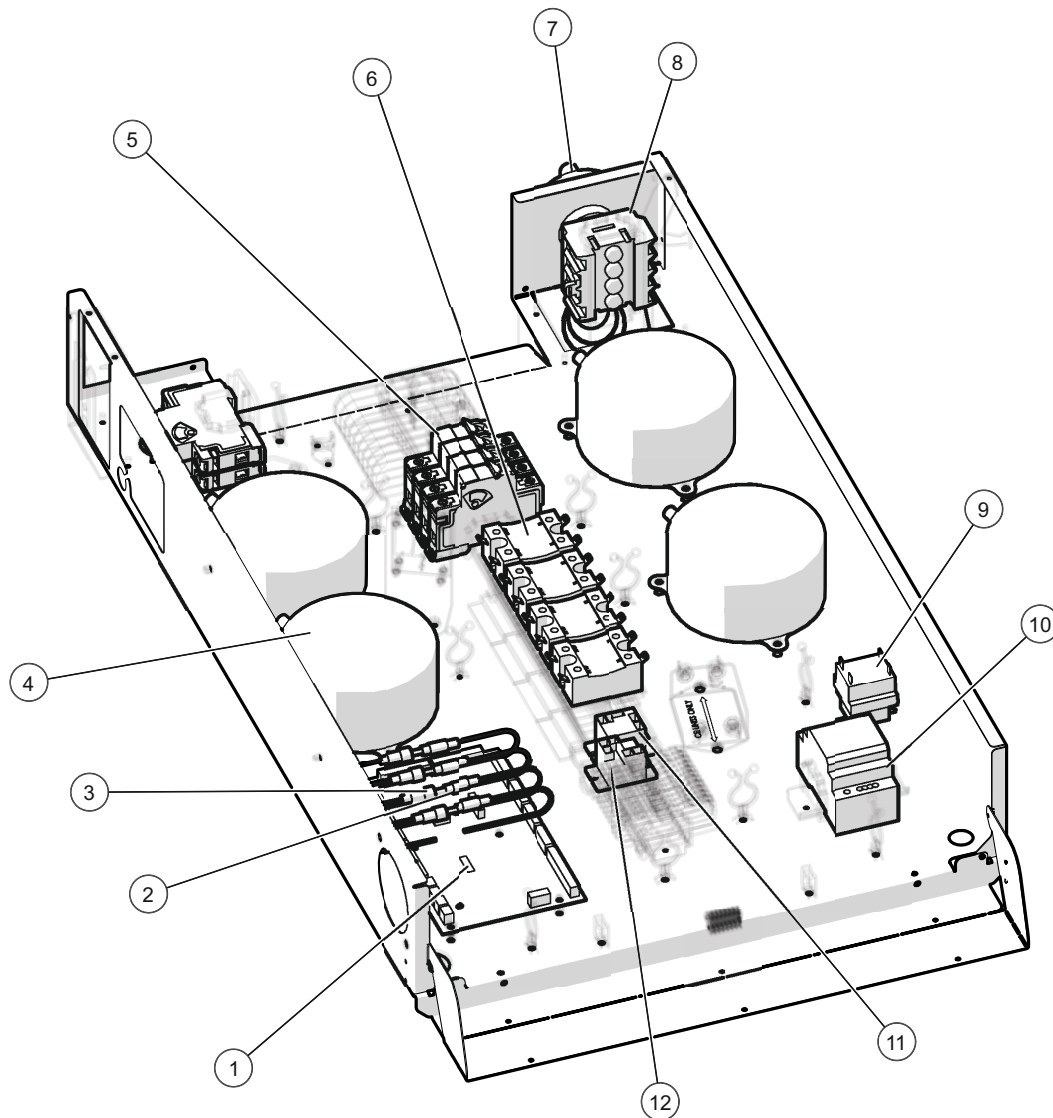

ID	Part No.	Description
1	CC-46459	BOARD,CONTROL, FOR VMC
2	FU-36762	IN-LINE FUSE HOLDER, 5X20MM 150 SERIES
3	FU-46554	FUSE, 630mA, 250V,FAST ACTING,
4	BA-39023	CONTROLLER,BOARD,TELCO
5	FU-39058	CIRCUIT BREAKER, 20A
6	RL-33829	RELAY, SOLID STATE, 230V, 25A
7	KN-37667	KNOB,POWER,INCLUDED W/SWITCH
8	SW-39228	POWER SWITCH,DISCONNECT 60A
9	TN-37722	TRANSFORMER,12V OUT,240V IN,
10	BA-37724	POWER SUPPLY, 12VDC
11	RE-37725	RELAY, 240V AC
12	RE-37704	RELAY,12VDC


Core Components, H2

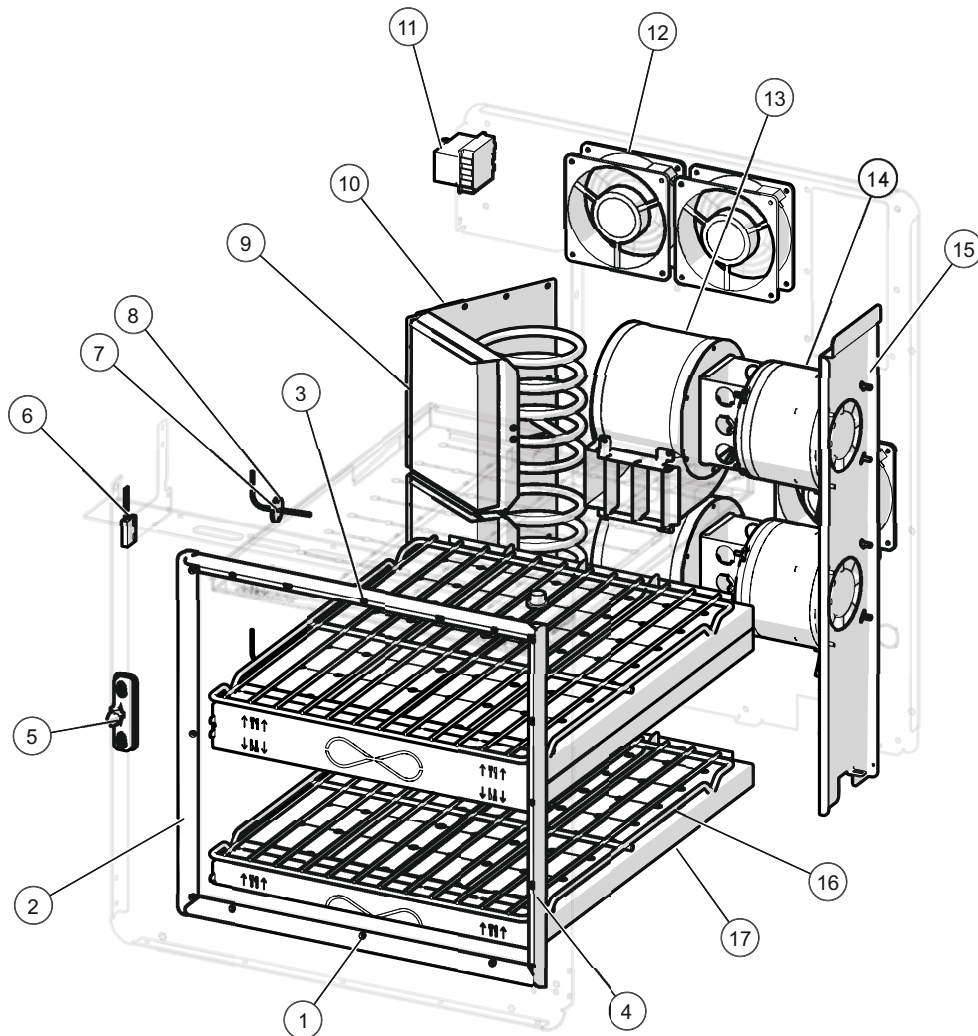

ID	Part No.	Description
1	1028106	SPRING FLANGE, BOTTOM DOOR
2	1029220	SPRING FLANGE, LEFT DOOR
3	1028109	SPRING FLANGE, TOP DOOR
4	1029269	SPRING FLANGE, RIGHT DOOR
5	LT-39674	LATCH, STRIKE, DOOR, ADJUSTABLE
6	LT-3738	DOOR, INTERLOCK SWITCH
7	GS-39145	GASKET, THERMOCOUPLE SEAL
8	PR-37668	THERMOCOUPLE
9	5026194	CATALYST, ASSEMBLY
10	EL-37664	HEATER, COIL
11	TT-46376	THERMAL CUTOFF, MECHANICAL,
12	FA-36957	FAN, 230V, MECHATRONICS, HI-TEMP
13	5025094	BLOWER HOUSING, 350 MODEL X4.5"
14	5023985R	MOTOR, FAN, ASSEMBLY
15	1029217	BRACKET, MOTOR SUPPORT VH2
16	SH-37662	SHELF, WIRE, COOK, RACKS
17	5025235	JET PLATE ASSEMBLY, HALF

Refer to "Fasteners" section for a list of fasteners for these parts.


Core Components, H2H

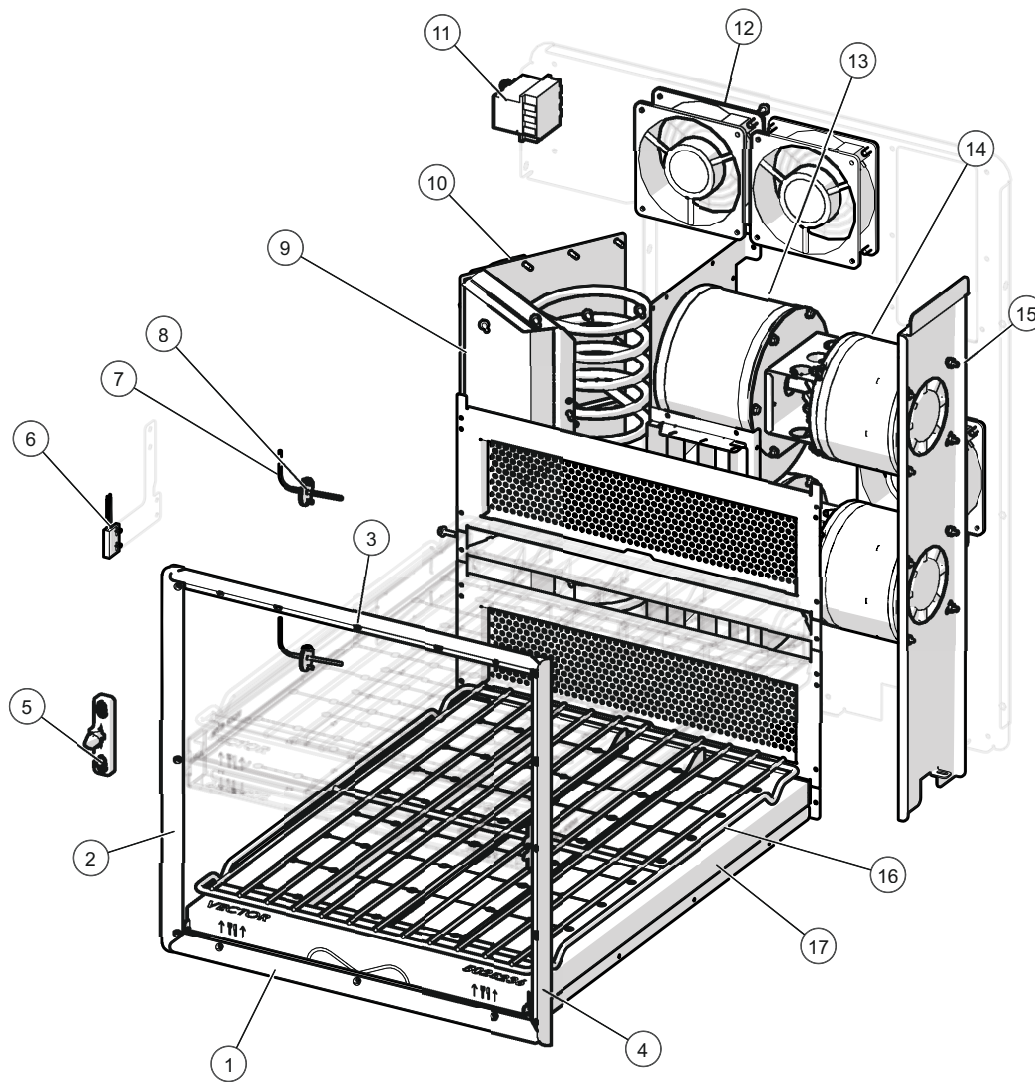

ID	Part No.	Description
1	1028106	GASKET, BOTTOM DOOR,VOLPI H3HR
2	1029220	GASKET, LEFT DOOR, VOLPI H2
3	1028109	GASKET, TOP DOOR, VOLPI H3HR
4	1029269	GASKET, RIGHT DOOR, VOLPI H3R
5	LT-39674	LATCH,STRIKE,DOOR,ADJUSTABLE
6	LT-3738	DOOR, INTERLOCK SWITCH
7	PR-37668	THERMOCOUPLE
8	GS-39145	GASKET, THERMOCOUPLE SEAL
9	5026194	CATALYST, ASSEMBLY
10	EL-37664	HEATER, COIL
11	TT-46376	THERMAL CUTOFF, MECHANICAL,
12	FA-36957	FAN,230V,MECHATRONICS,HI-TEMP
13	5025094	BLOWER HOUSING,350 MODEL X4.5"
14	5023985R	MOTOR,FAN,ASSEMBLY
15	1029217	BRACKET, MOTOR SUPPORT VH2
16	SH-39077	SHELF, WIRE COOK, RACK
17	5025236	JET PLATE ASSEMBLY, HOTEL

Refer to "Fasteners" section for a list of fasteners for these parts.


Core Components, H3

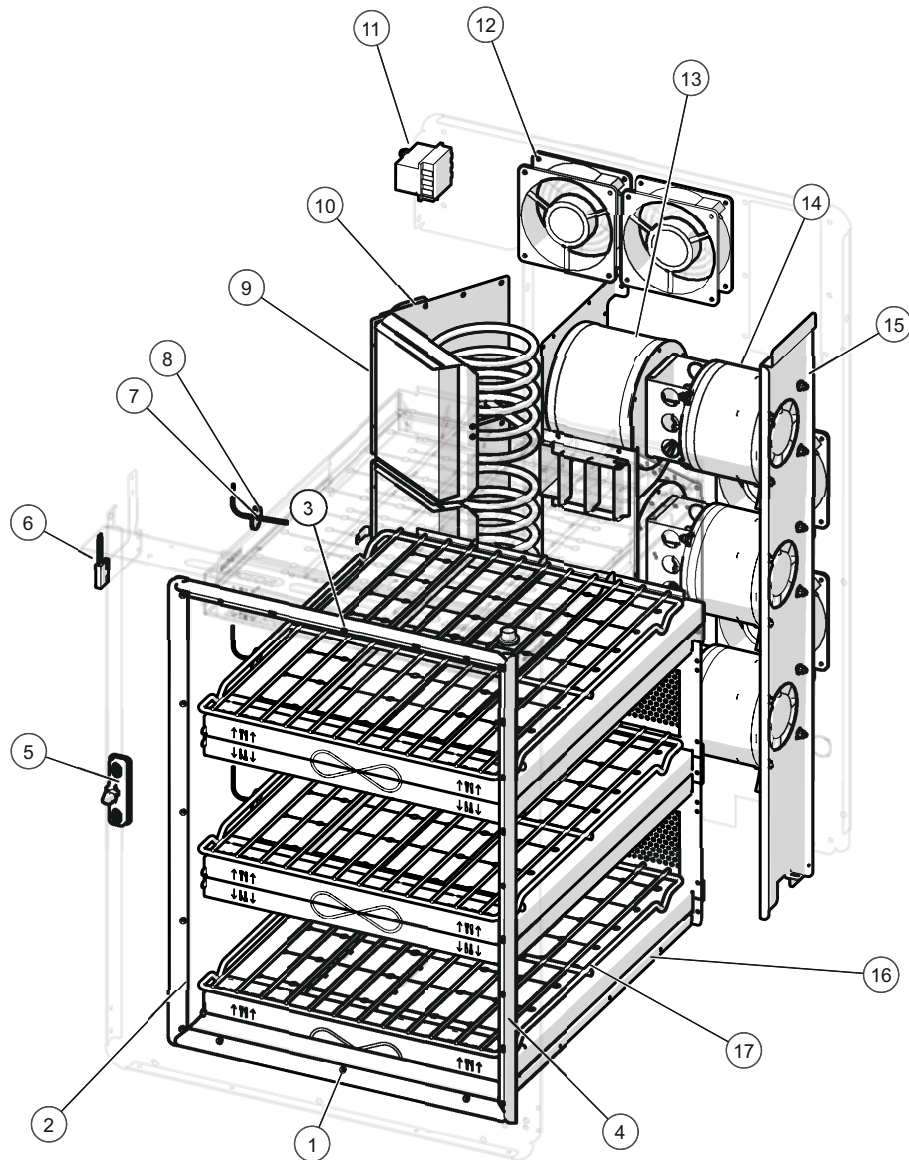

ID	Part No.	Description
1	1028106	SPRING FLANGE, BOTTOM DOOR
2	1028107	SPRING FLANGE, LEFT DOOR
3	1028109	SPRING FLANGE, TOP DOOR
4	1028108	SPRING FLANGE, RIGHT DOOR
5	LT-39674	LATCH, STRIKE, DOOR, ADJUSTABLE
6	LT-3738	DOOR, INTERLOCK SWITCH
7	GS-39145	GASKET, THERMOCOUPLE SEAL
8	PR-37668	THERMOCOUPLE
9	5026194	CATALYST, ASSEMBLY
10	EL-37664	HEATER, COIL
11	TT-46376	THERMAL CUTOFF, MECHANICAL
12	FA-36957	FAN, 230V, MECHATRONICS, HI-TEMP
13	5025094	BLOWER HOUSING, 350 MODEL X4.5"
14	5023985R	MOTOR, FAN, ASSEMBLY
15	1028793	BRACKET, MOTOR SUPPORT H3
16	5025235	JET PLATE ASSEMBLY, HALF
17	SH-37662	SHELF, WIRE, COOK, RACKS

Refer to "Fasteners" section for a list of fasteners for these parts.


Core Components, H3H

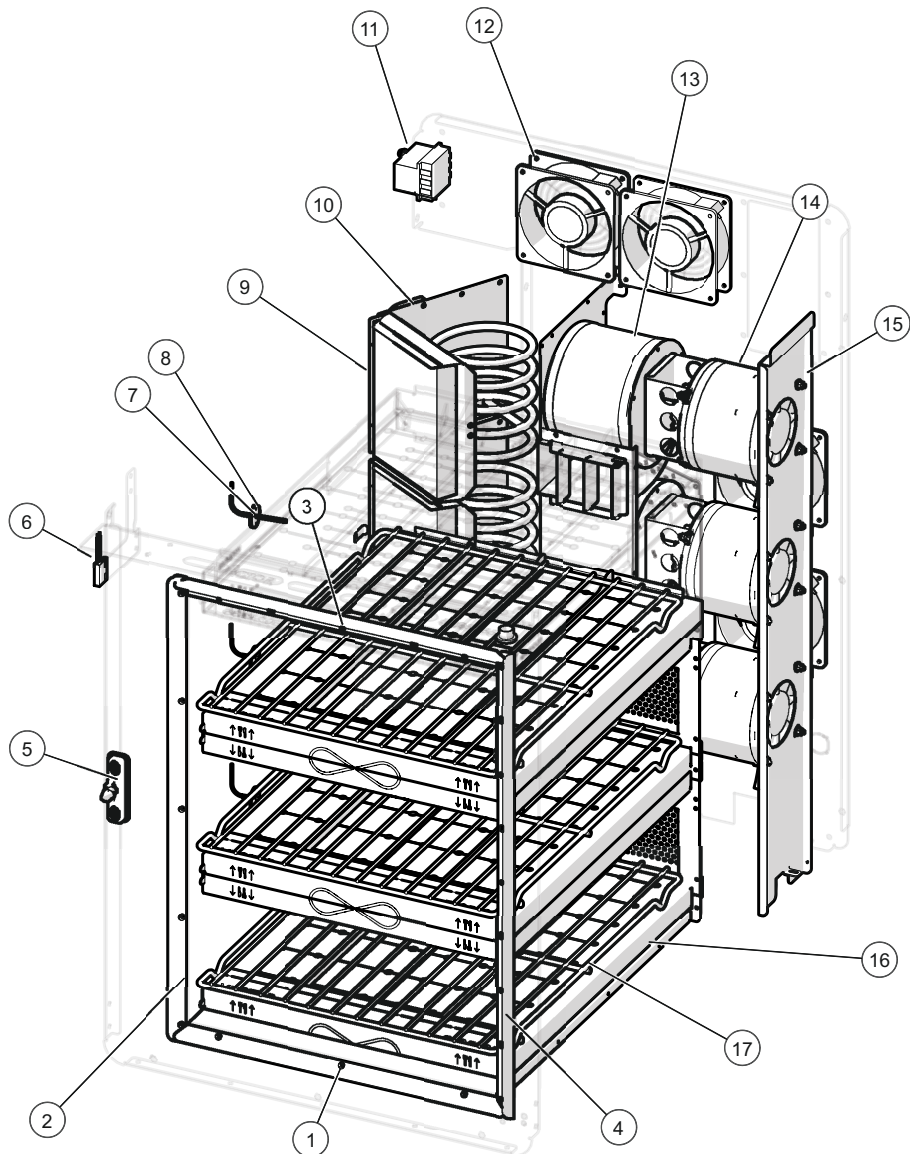

ID	Part No.	Description
1	1028106	SPRING FLANGE, BOTTOM DOOR
2	1028107	SPRING FLANGE, LEFT DOOR
3	1028109	SPRING FLANGE, TOP DOOR
4	1028108	SPRING FLANGE, RIGHT DOOR
5	LT-39674	LATCH, STRIKE, DOOR, ADJUSTABLE
6	LT-3738	DOOR, INTERLOCK SWITCH
7	GS-39145	GASKET, THERMOCOUPLE SEAL
8	PR-37668	THERMOCOUPLE
9	5026194	CATALYST, ASSEMBLY
10	EL-37664	HEATER, COIL
11	TT-46376	THERMAL CUTOFF, MECHANICAL,
12	FA-36957	FAN, 230V, MECHATRONICS, HI-TEMP
13	5025094	BLOWER HOUSING, 350 MODEL X4.5"
14	5023985R	MOTOR, FAN, ASSEMBLY
15	1028793	BRACKET, MOTOR SUPPORT H3
16	5025236	JET PLATE ASSEMBLY, HALF
17	SH-39077	SHELF, WIRE, COOK, RACKS

Refer to "Fasteners" section for a list of fasteners for these parts.


Core Components, H4

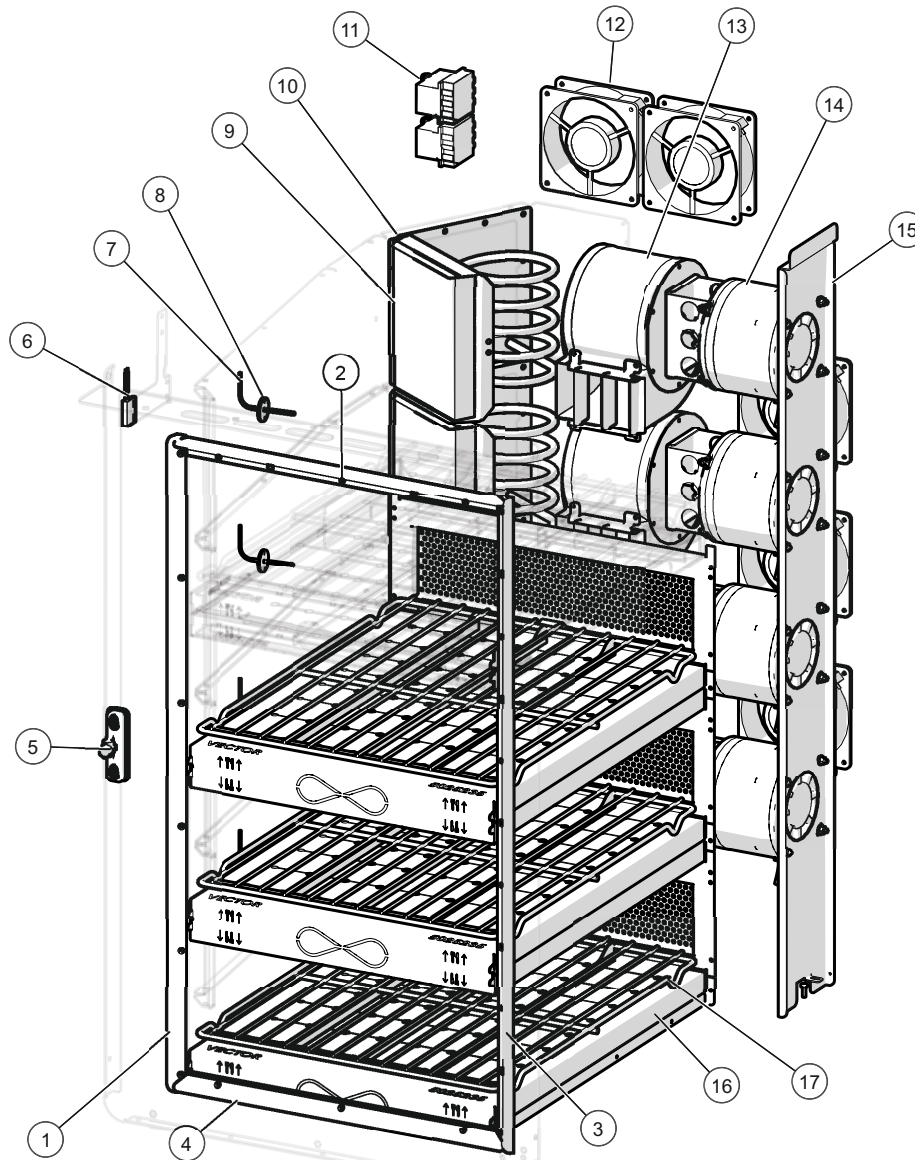

ID	Part No.	Description
1	1028917	SPRING FLANGE, LEFT DOOR
2	1028109	SPRING FLANGE, TOP DOOR
3	1028918	SPRING FLANGE, RIGHT DOOR
4	1028106	SPRING FLANGE, BOTTOM DOOR
5	LT-39674	LATCH, STRIKE, DOOR, ADJUSTABLE
6	LT-3738	DOOR, INTERLOCK SWITCH
7	PR-37668	THERMOCOUPLE
8	GS-39145	GASKET, THERMOCOUPLE SEAL
9	5026194	CATALYST, ASSEMBLY
10	EL-37664	HEATER, COIL
11	TT-46376	THERMAL CUTOFF, MECHANICAL,
12	FA-36957	FAN, 230V, MECHATRONICS, HI-TEMP
13	5025094	BLOWER HOUSING, 350 MODEL X4.5"
14	5023985R	MOTOR, FAN, ASSEMBLY
15	1028987	BRACKET, MOTOR SUPPORT H4
16	5025235	JET PLATE ASSEMBLY, HALF
17	SH-37662	SHELF, WIRE, COOK, RACKS

Refer to "Fasteners" section for a list of fasteners for these parts.


Core Components, H4H

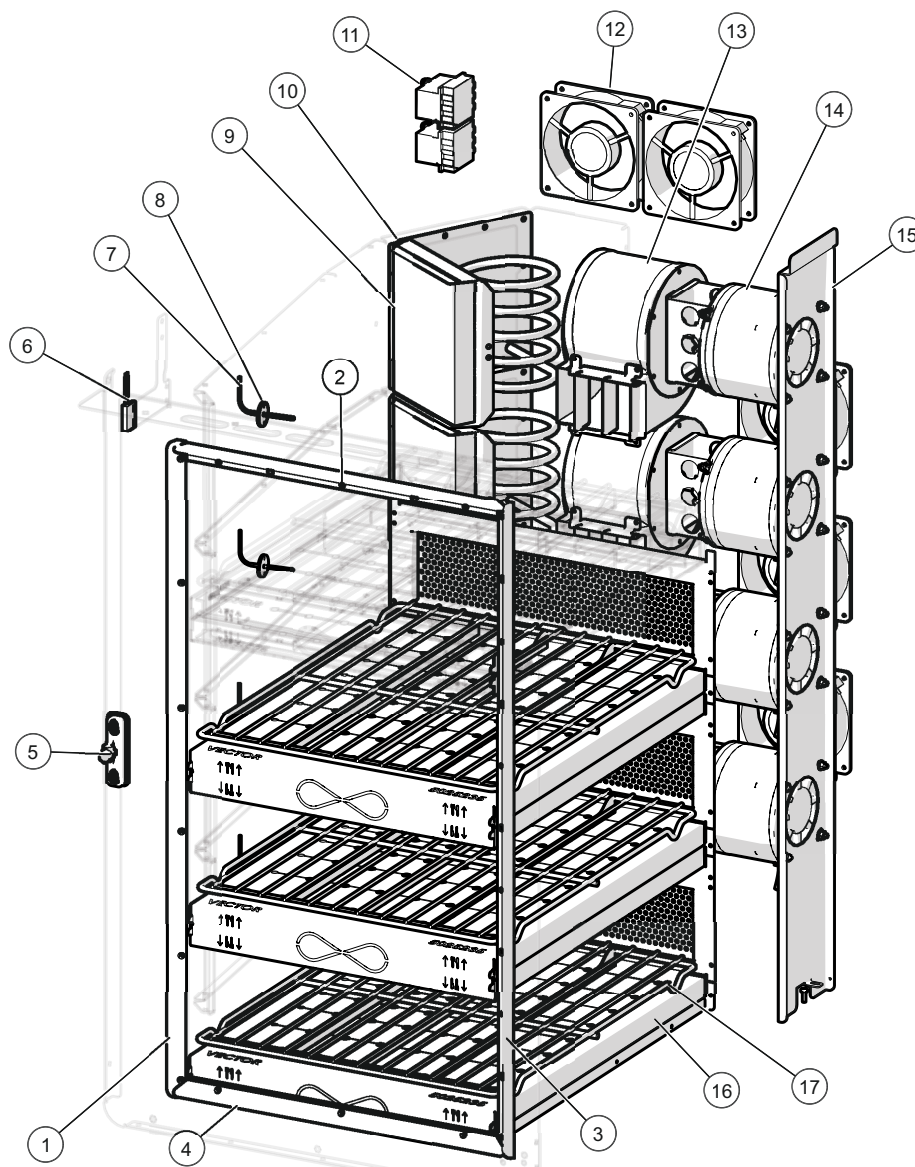

ID	Part No.	Description
1	1028917	SPRING FLANGE, LEFT DOOR
2	1028109	SPRING FLANGE, TOP DOOR
3	1028918	SPRING FLANGE, RIGHT DOOR
4	1028106	SPRING FLANGE, BOTTOM DOOR
5	LT-39674	LATCH, STRIKE, DOOR, ADJUSTABLE
6	LT-3738	DOOR, INTERLOCK SWITCH
7	PR-37668	THERMOCOUPLE
8	GS-39145	GASKET, THERMOCOUPLE SEAL
9	5026194	CATALYST, ASSEMBLY
10	EL-37664	HEATER, COIL
11	TT-46376	THERMAL CUTOFF, MECHANICAL
12	FA-36957	FAN, 230V, MECHATRONICS, HI-TEMP
13	5025094	BLOWER HOUSING, 350 MODEL X4.5"
14	5023985R	MOTOR, FAN, ASSEMBLY
15	1028987	BRACKET, MOTOR SUPPORT H4
16	5025236	JET PLATE ASSEMBLY, HOTEL
17	SH-39077	SHELF, WIRE, COOK, RACKS


Refer to "Fasteners" section for a list of fasteners for these parts.

Rear Filters (All Models)

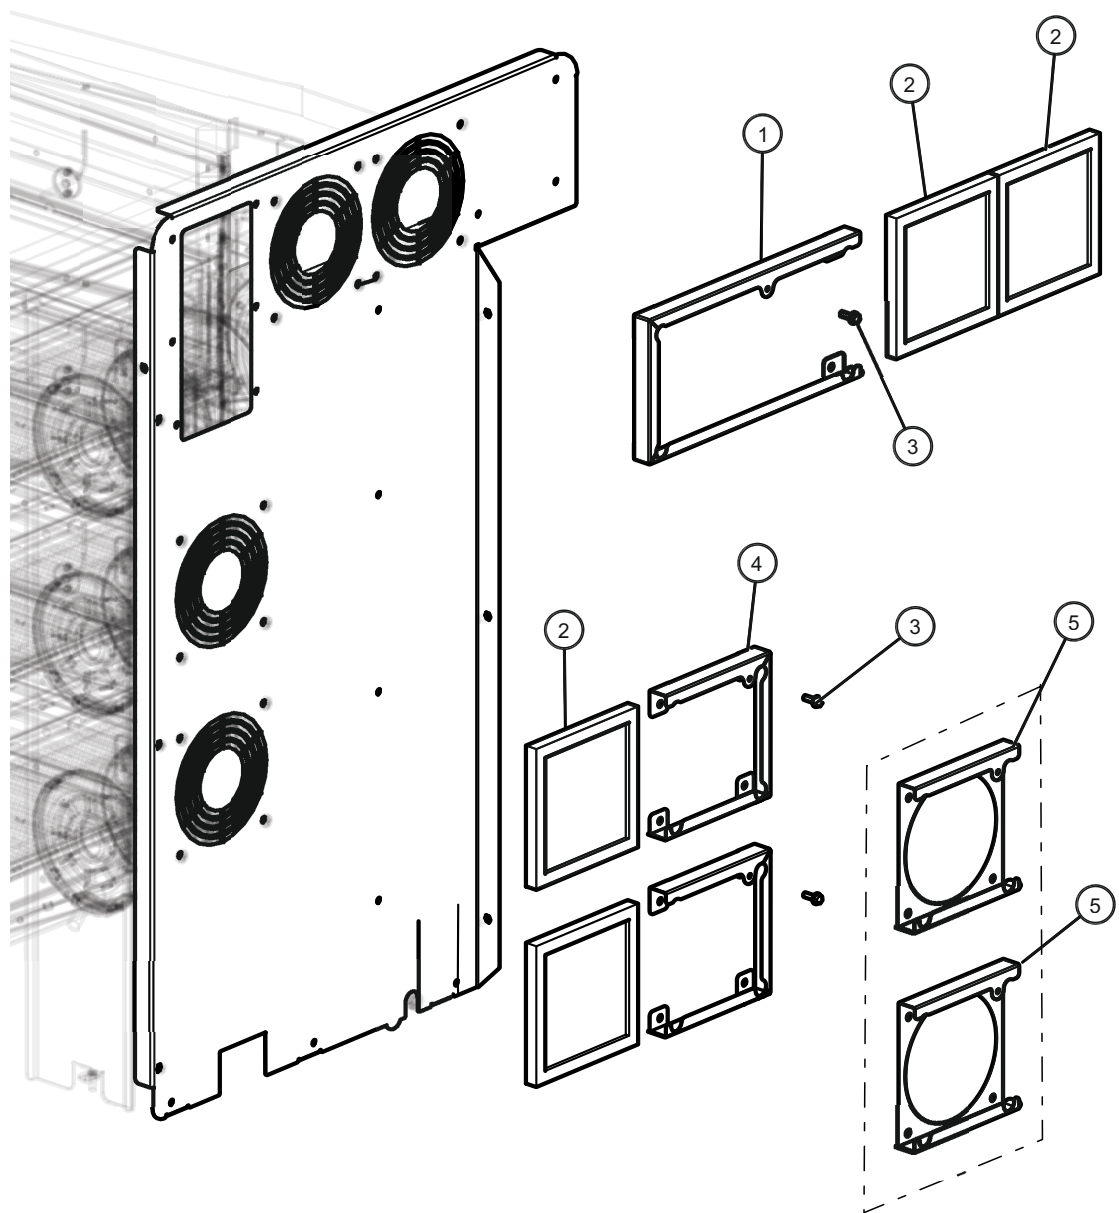


ID	Part No.	Description
1	1023498	HOLDER, FILTER, DOUBLE
2	FI-37700	FILTER, 5IN X 5IN
3	SC-39147	SCREW, 8-18 X .480 HEX WASHER
4	1023497	FILTER HOLDER, SINGLE
5	1032252	FILTER HOLDER, SINGLE (UNIVERSAL)

Motor/Fan Assembly (All Models)

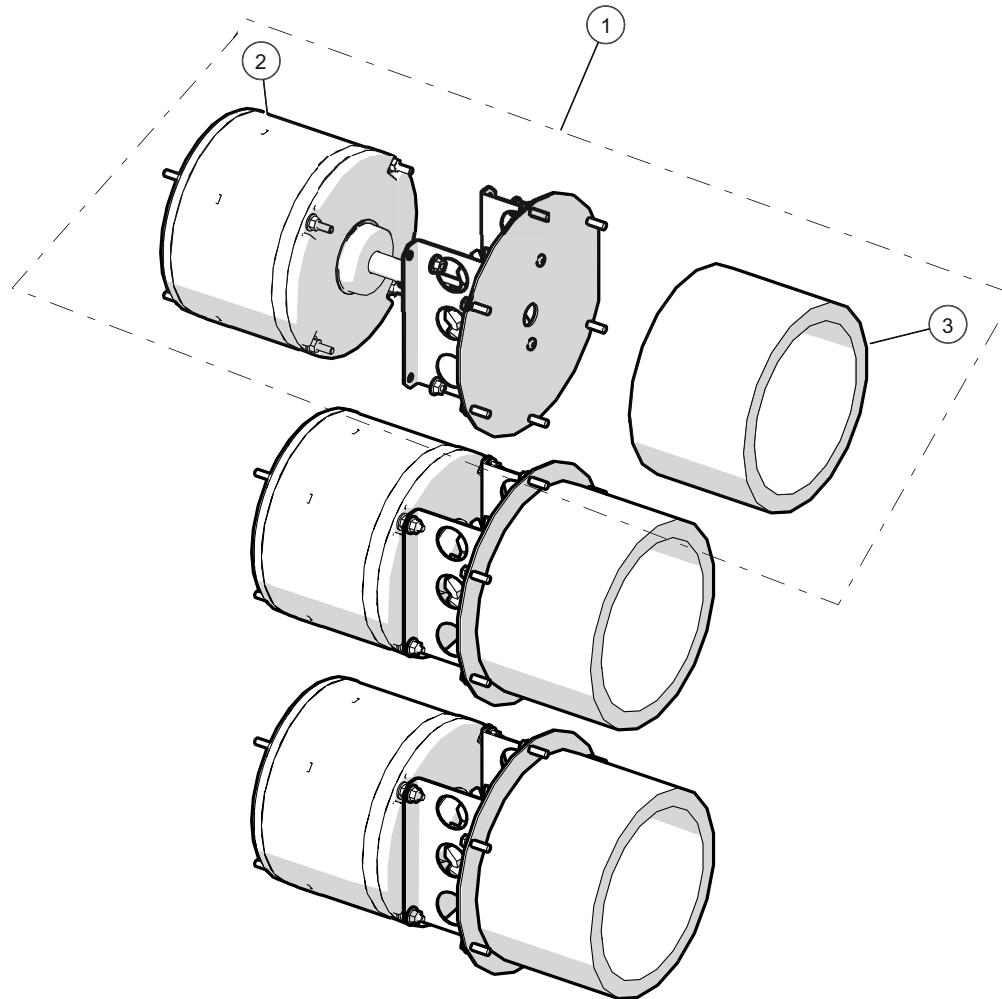


ID	Part No.	Description
1	5023985R	MOTOR,FAN,ASSEMBLY
2	MO-39010	MOTOR,TELCO_SINGLE_SHAFT
3	WH-37643	WHEEL,BLOWER,FERGAS, 126MM X 7

Accessories: Stands

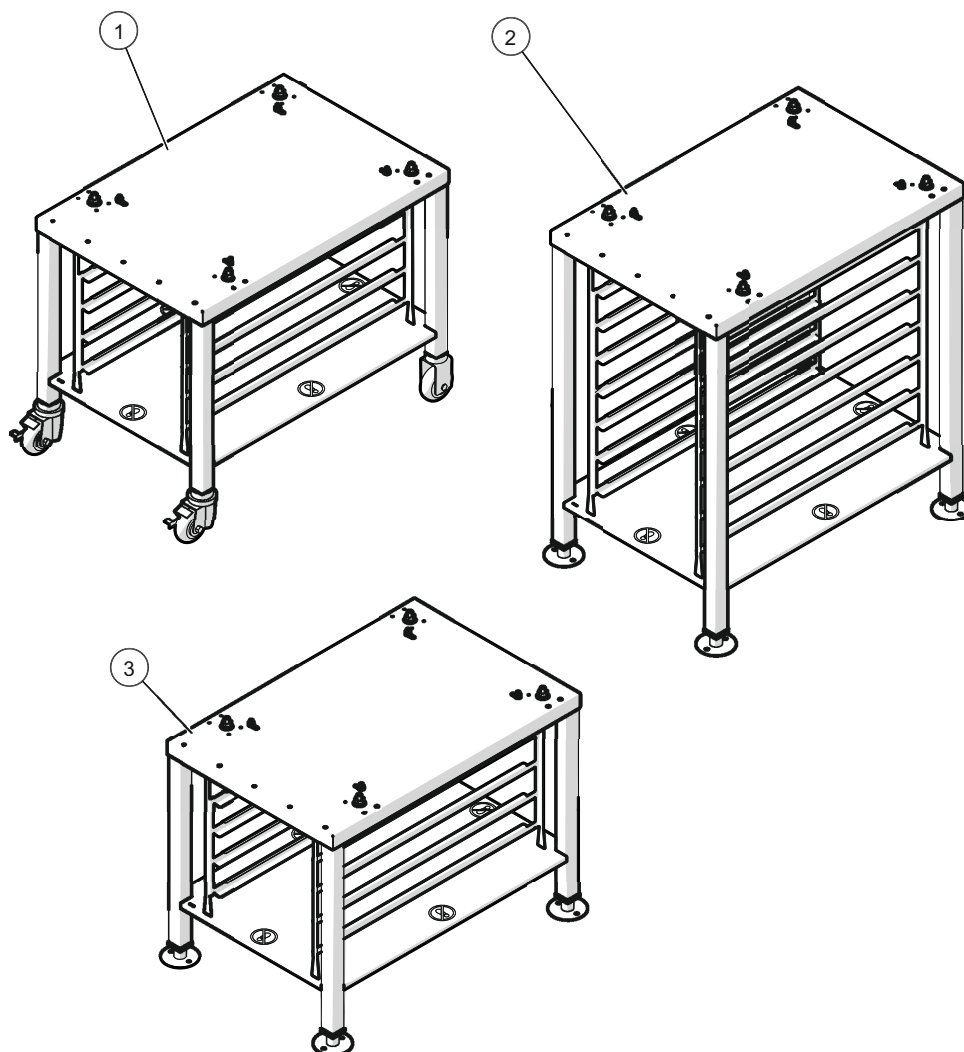


ID	Part No.	Description
1	5028173	STAND, 24" VECTOR HX/HXH W CASTERS
2	5027644	STAND, 36",H2,H2H,H3,H3H,H4,H4H
3	5028223	STAND, 24" VECTOR HX/HXH W FEET

Accessories: Stacking Stands

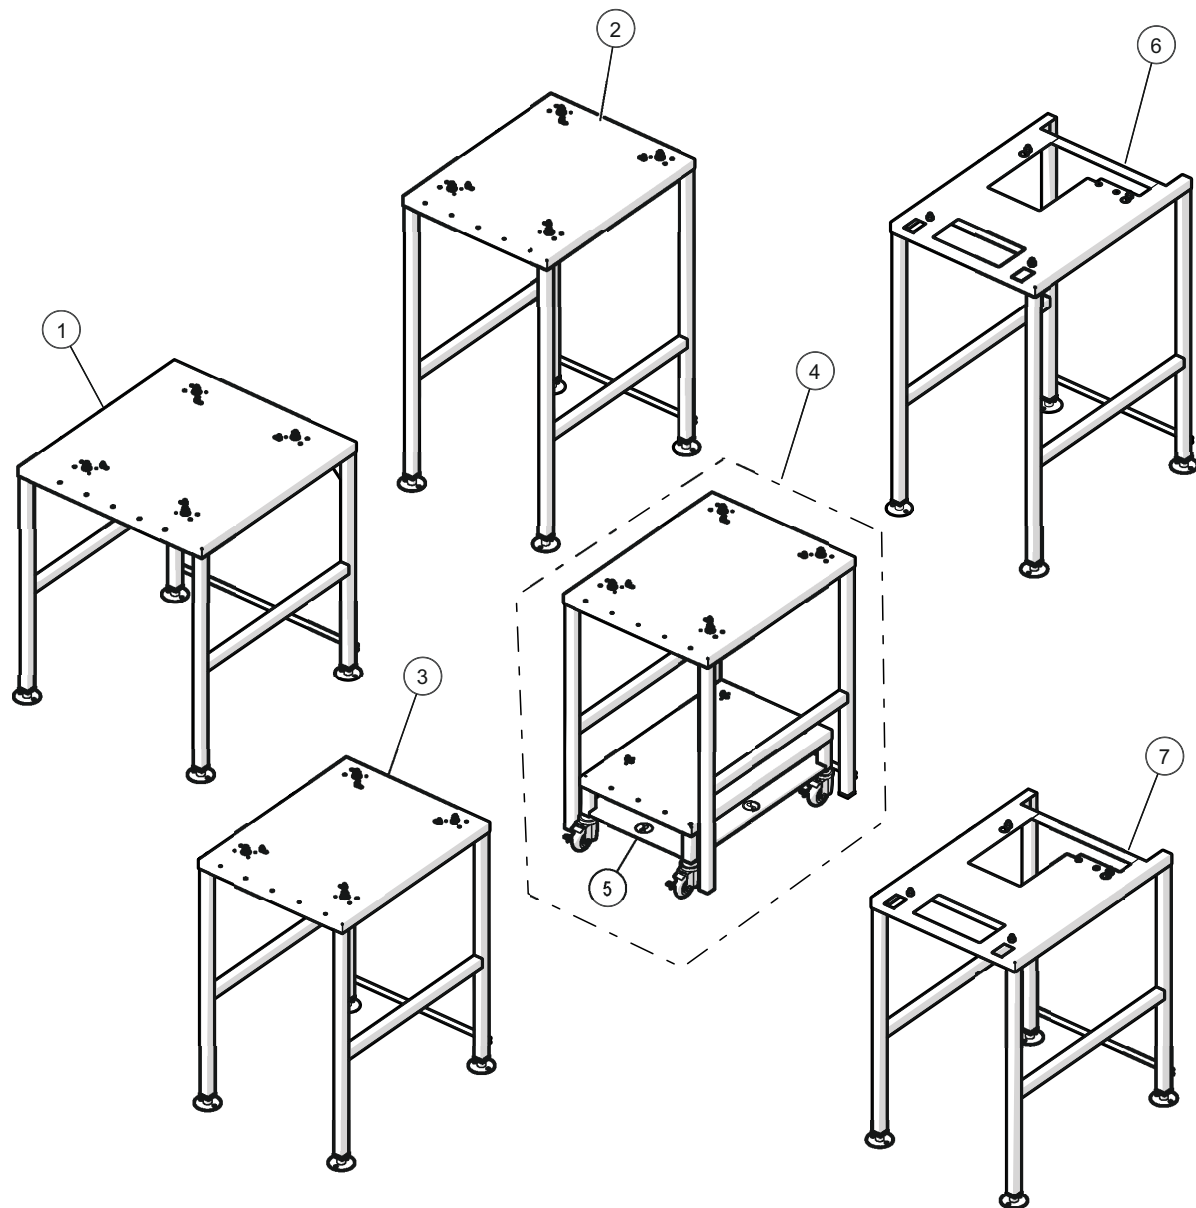

ID	Part No.	Description
1	5027762	STAND, VECTOR HX/HXH OVER 750 SERIES
2	5027835	STAND, STACKING, OVER H4/H4H
3	5028312	STAND, STACKING, OVER H3/H3H
4	5027834	KIT, STANDS, H2/H OVER H2/H
5	5030180	STAND, 11" VECTOR H2/H2H W/CASTERS
6	5028516	STAND, STACKING, CTX OVER H4/H4H
7	5028306	STAND, STACKING, CTX OVER H3/H3H


Accessories: Stacking Kits, Legs, and Casters

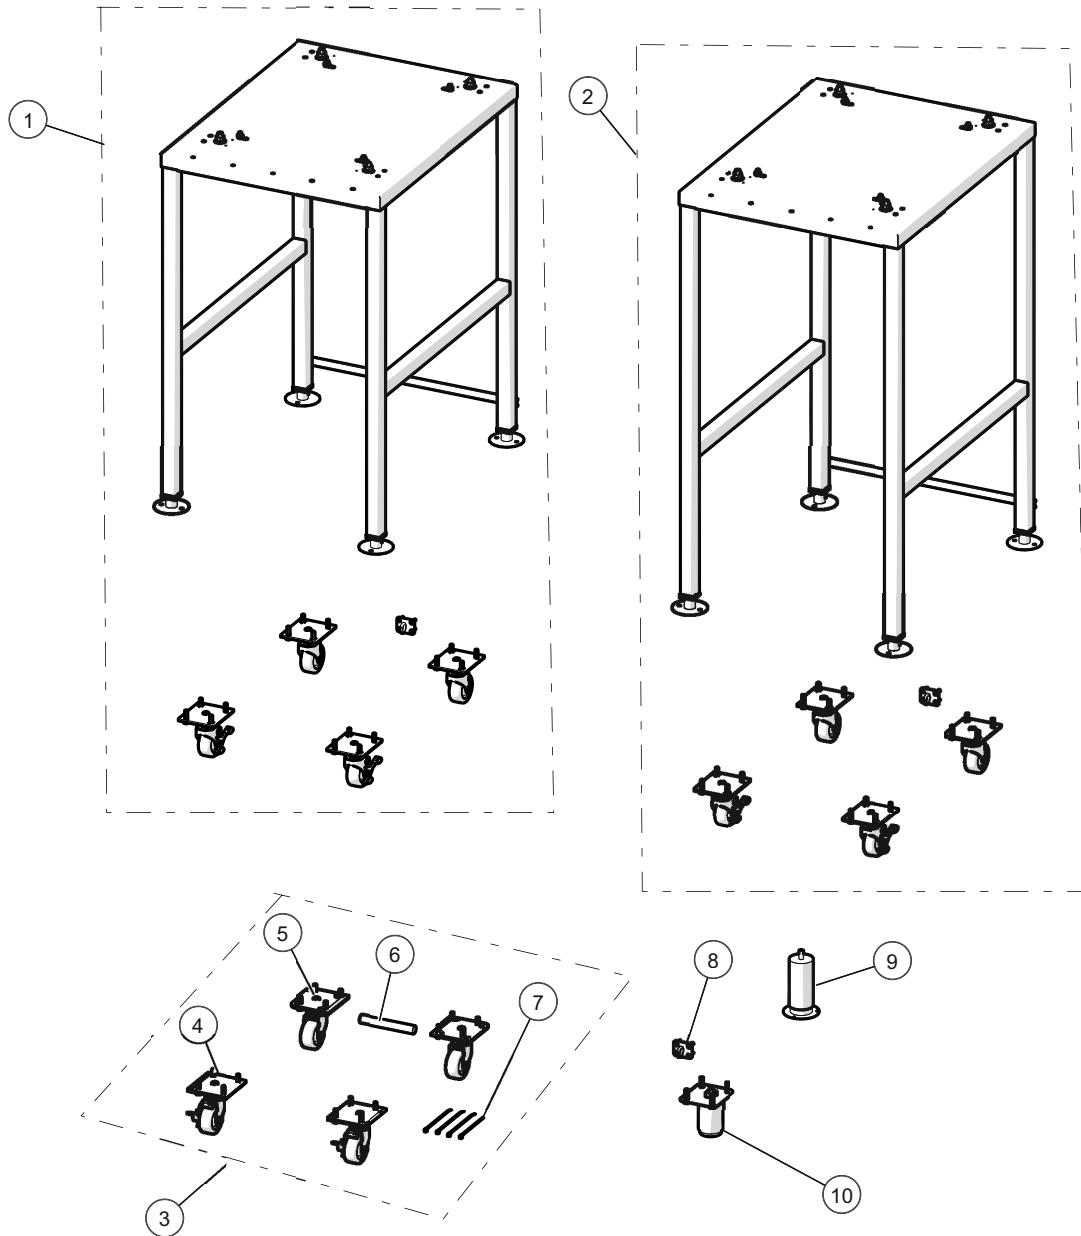

ID	Part No.	Description
1	5030178	STAND, STACKING, OVER H3/H3H
2	5030179	KIT, STAND, STACKING OVER H4
3	5027946	CASTER PLATE ASSEMBLY
4	CS-46618	CASTER, LOCKING PLATE ASSEMBLY
5	CS-46617	CASTER, NON-LOCKING PLATE ASM
6	SL-46233	SLEEVE, THREAD M16, 6" LG.
7	TI-46253	TIE CABLE, NYLON, 6.00 LG.
8	BT-26884	BRACKET, TETHER.
9	FT-29080	FEET, SEISMIC FLANGE, TABLE TOP
10	5027948	FOOT PLATE ASSEMBLY


Refer to "Fasteners" section for a list of fasteners for these parts.

Accessories: Cooking

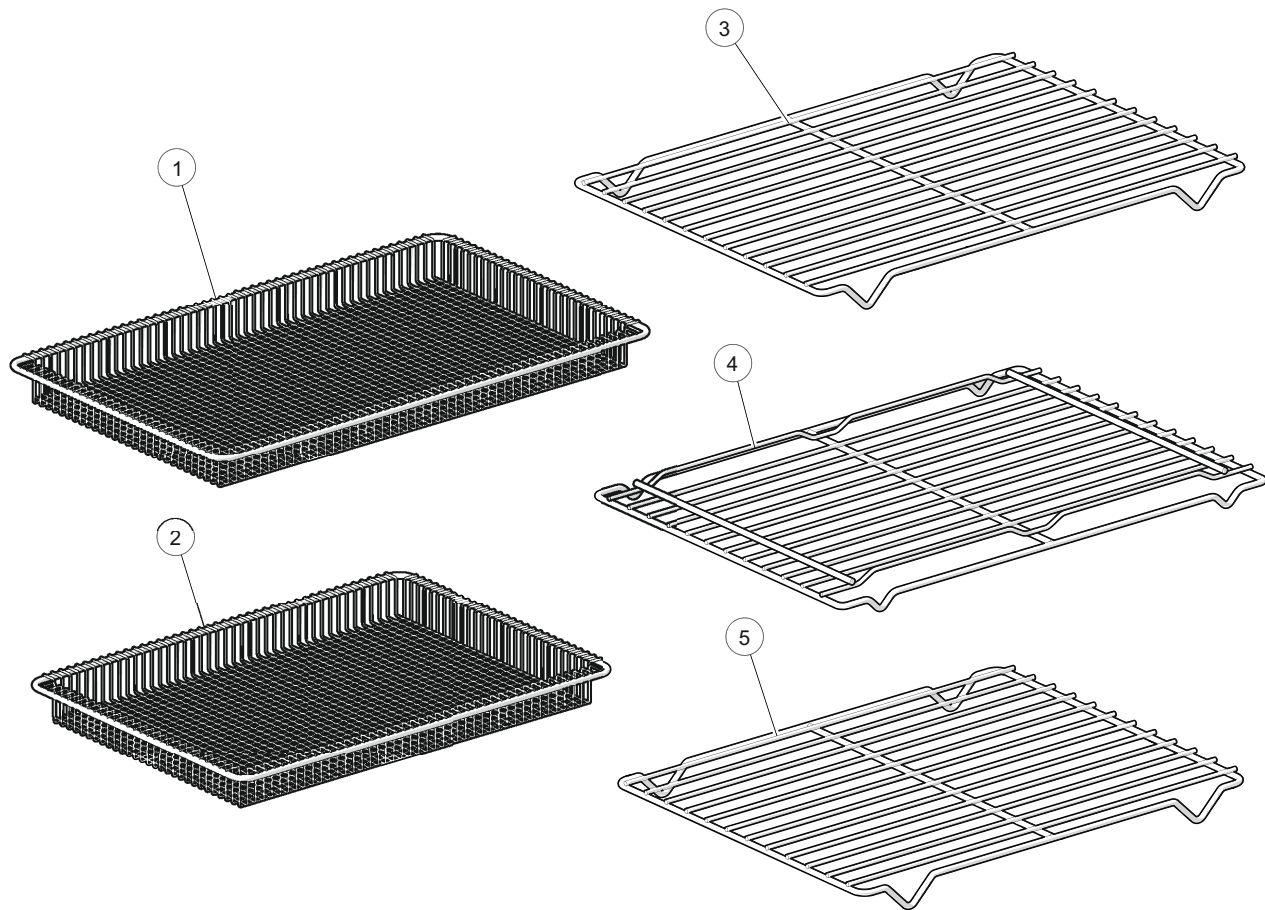

ID	Part No.	Description
1	BS-26730	BASKET, FRENCH FRY, 12 X 20
2	BS-46316	BASKET, FRY
3	SH-39078	COOKING GRATE HOTEL 1"
4	SH-39543	PAN, COOKING, GRATE HOTEL
5	SH-39087	COOKING GRATE HALF 1"

Accessories: Cleaning

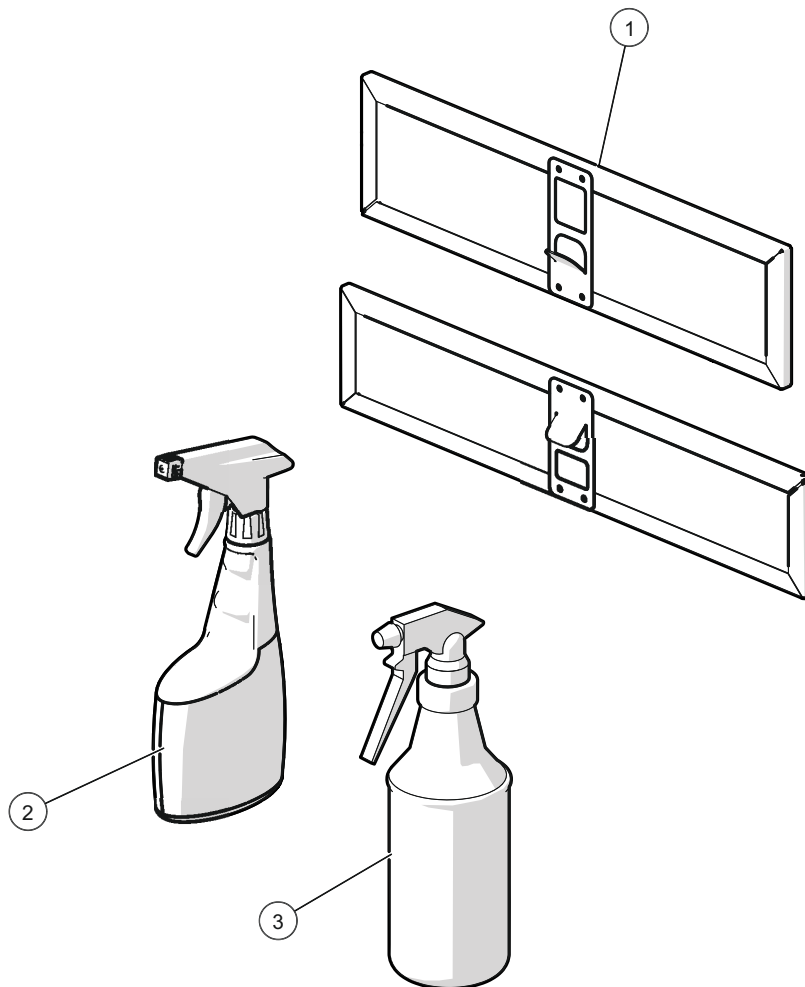

ID	Part No.	Description
1	5024004	FILTER ASSY, INTERNAL (1 SET PER CAVITY)
2	CE-39136	ECOLAB GREASELIFT CLEANER
3	CE-39137	CHEMCO DIRTBUSTER 3 CLEANER



ALTO-SHAAM USA
Menomonee Falls, Wisconsin, USA

ALTO-SHAAM CANADA
Concord, Ontario, Canada

ALTO-SHAAM MEXICO

**ALTO-SHAAM CENTRAL
& SOUTH AMERICA**
Miami, Florida, USA

ALTO-SHAAM GMBH
Bochum, Germany

ALTO-SHAAM FRANCE
Aix en Provence France

ALTO-SHAAM RUSSIA
Moscow, Russia

**ALTO-SHAAM MIDDLE EAST
& AFRICA**
Dubai, UAE

ALTO-SHAAM ASIA
Shanghai, China

ALTO-SHAAM ASIA
Shanghai, China
Phone +86-21-6173 0336

ALTO-SHAAM CANADA
Concord, Ontario Canada
Toll Free Phone 866-577-4484
Phone +1-905-660-6781

**ALTO-SHAAM CENTRAL
& SOUTH AMERICA**
Miami, FL USA
Phone +1-954-655-5727

**ALTO-SHAAM MIDDLE EAST
& AFRICA**
Dubai, UAE
Phone +971 4 321 9712

ALTO-SHAAM MEXICO
Phone +52 1 477-717-3108

ALTO-SHAAM FRANCE, L.L.C.
Aix en Provence, France
Phone +33(0)4-88-78-21-73

ALTO-SHAAM GMBH
Bochum, Germany
Phone +49(0)234-298798-0

ALTO-SHAAM RUSSIA
Moscow, Russia
Phone +7-903-793-2331



Menomonee Falls, WI 53052-0450, U.S.A.
Telephone 800-558-8744 | +1-262-251-3800 | alto-shaam.com