



**Safety Technology
International**

UB-1 Universal Button

UB-1/LTUL Universal Button with Latching Timer



ADA
Compliant

For UB-1/LTUL the enclosed timer is to be used and installed per the enclosed LT-1UL installation sheet. For access control installations, power for the LT-1UL Timer must be supplied by a power source listed to UL294. When used for access control, this device shall be used as part of an access controlled egress door system. It is up to the local AHJ to allow use of this device in place of an automatic sensor. For higher security installations, lower time limits should be used.

Pour les modèles UB-1/LTUL, la minuterie intégrée doit être installée et utilisée suivant la fiche d'installation LT-1UL fournie. Pour les installations de contrôle d'accès, l'alimentation de la minuterie LT-1 doit être fournie par une source homologuée UL294. Lorsque cet appareil est utilisé aux fins de contrôle d'accès, il doit faire partie d'un système de porte de sortie à accès contrôlé. Il incombe donc à l'AHJ local d'autoriser l'utilisation de cet appareil au lieu d'un capteur automatique. Pour les installations de sécurité plus renforcée, des délais inférieurs doivent être utilisés.

We protect the things that protect you.®

NOTES

It is important to read, understand and follow all instructions provided with this product. It is the installer's responsibility to comply with NFPA 70 & 101, NEC, mounting specifications according to ADA and other applicable electrical codes. For Type SM (Self Monitored) rating, the term Emergency message may be installed on Model UB-1 when used in a system with a Listed, compatible Releasing Device. All other applications are rated Type NM (Non-Monitored) for non-emergency signaling. To avoid electrical shock, DO NOT attempt to install this product when power is on. ADA mounting compliance requires the operable part of the initiating device shall not be less than 3 1/2 ft. (1.1m) or greater than 4 1/2 ft. (1.37m) above finished floor surface. After installation and testing are complete, provide a copy of this manual to all personnel responsible for testing and maintenance of this product.

REMARQUES

Il est important de lire, de comprendre et de suivre toutes les instructions fournies avec ce produit. Il incombe à l'installateur de se conformer aux normes NFPA 70 et 101, NEC, aux spécifications de montage selon l'ADA et aux autres codes de l'électricité en vigueur. Pour les cotes de type SM (auto surveillée), le message d'Urgence peut être apposé sur le modèle UB-1 lorsqu'il est utilisé dans un système intégrant un dispositif de déclenchement compatible et homologué. Toutes les autres applications sont cotées de Type NM (non surveillée) pour la signalisation non urgente. Pour éviter un choc électrique, NE tentez PAS d'installer ce produit lorsqu'il est sous tension. La conformité aux règles d'installation de l'ADA exige que la partie utilisable du dispositif de déclenchement soit installée à une hauteur située entre 3 1/2 pi (1,1 m) et 4 1/2 pi (1,37 m) au-dessus du plancher fini. Une fois l'installation et les essais terminés, vous devez fournir une copie de ce manuel à l'ensemble du personnel chargé de l'essai et de l'entretien de ce produit.

SWITCH RATING

2 Momentary Independent Form "C" contacts

UB-1/rated at: 10A, 125/250 VAC

6A, 30 VDC

100,000 Operations

Temperature: -40° to 185°F (-40° to 85°C)

Model UB-1/LTUL

Form C contacts on

Timer rated:

30 VDC 3A, 1.0 pf

UL294 Performance Levels:


Line Security: I

Attack: I


Endurance: IV

Standby Power: I

1. TO CHANGE BUTTON COLOR AND ROUND MESSAGE

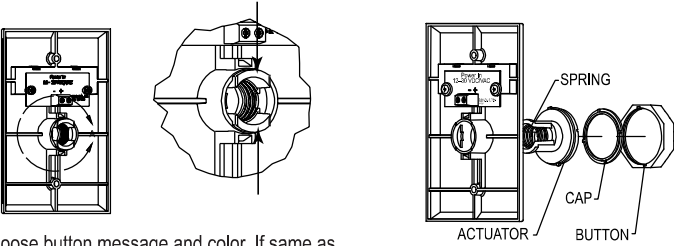


1. Choose button message and color. If same as existing, proceed to **2**.
2. To remove push button actuator assembly, pinch together actuator tabs in direction of arrows shown above and push through plate.
3. Push actuator through plate.
4. Align actuator cap to push button actuator. Align button slots to tabs on push button actuator.
5. Snap button onto push button actuator and rotate right to lock.
6. Insert spring into push button actuator.
7. Pinch legs of push button actuator and align into die cast plate.

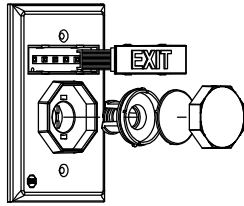

2. CHANGE TOP MESSAGE

Refer to notes on pg. 2 for "EMERGENCY" message use.


1. Remove LED circuit board.
2. Remove current message by pushing in and down on tabs 1 and 2 with a small screwdriver. If necessary, also push in and down on tabs 3 and 4. Once message is loose, remove from the front of the plate.
3. Select new message and snap into place. Blank plates are included to create your own custom message.

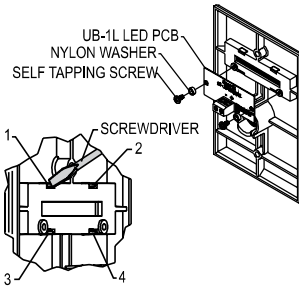

3. INSTALL OR REMOVE CONTACT BLOCK

INSTALL

To attach, align tabs (as shown) and gently snap **top**, then **bottom**. Be sure to hear BOTH tabs snap into place. (Can be reversed if wiring comes from the top of the box.)

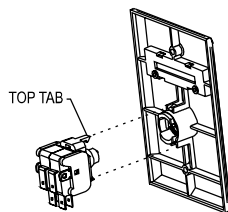

REMOVE


Repeat **STEP A** for the top and bottom tab before removing contact block.

Step A: Position small flat screwdriver blade under tab and gently rotate until tab disengages.


The contact block will rotate a little. Do NOT pull yet.

Step B: Repeat for opposite tab.

Step C: When both tabs are disengaged, pull the contact block straight off.


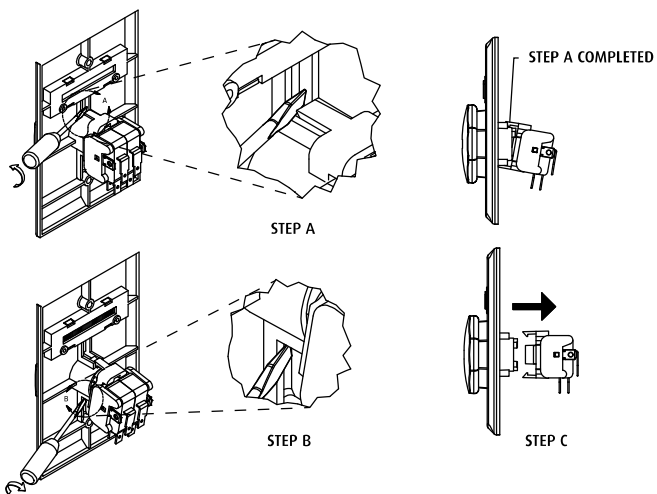


4. ATTACH POWER FOR MESSAGE LED (if desired)
 (See drawing)

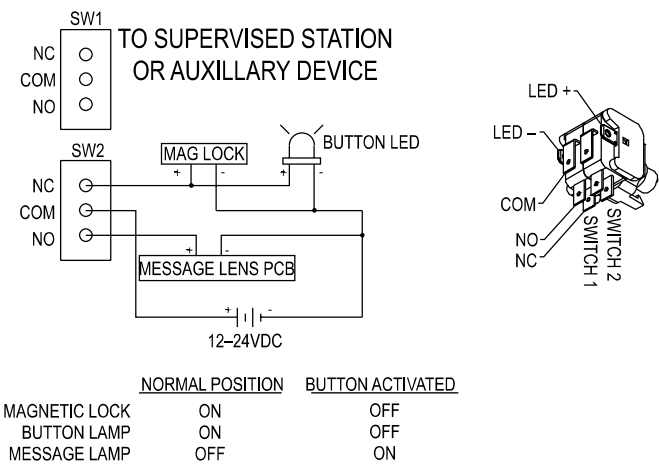


NOTE
LED connection: The polarity shown is factory installed. LED is polarity sensitive. If LED does not light, switch positive and negative wiring or remove LED and rotate 180°. 24 volt is included and will operate on 12 volts; however not as bright.

5. SURFACE MOUNT OPTION

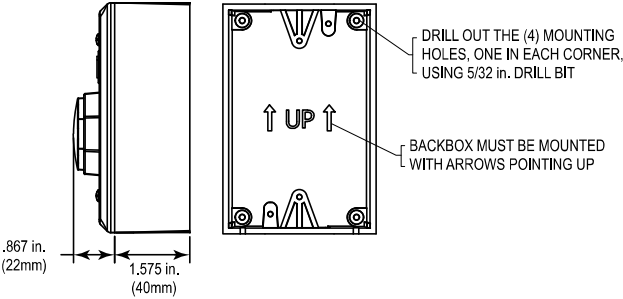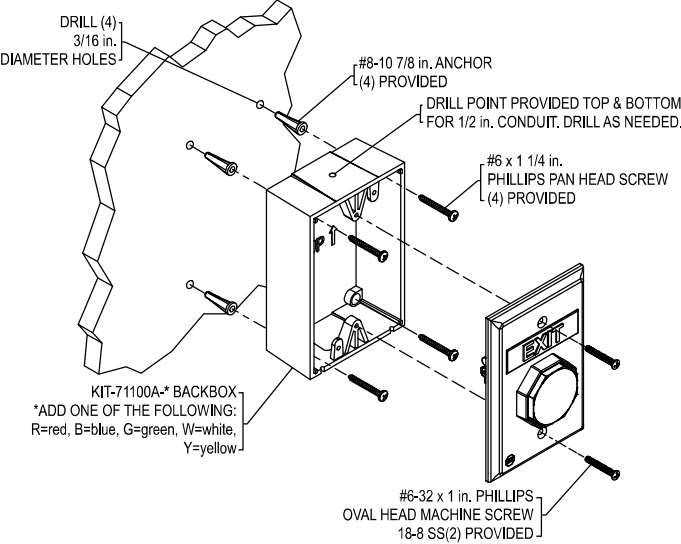


6. MOUNT BUTTON ONTO ELECTRICAL BOX OPTION

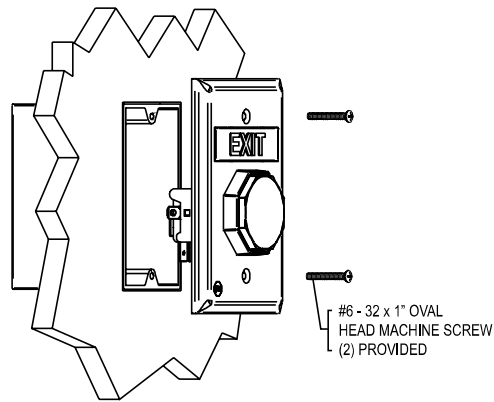

7. CUSTOM LABELS

To create your own custom label, size to fit in .48h x 2.23w as shown below.
Also available online at: www.sti-usa.com/ublabel

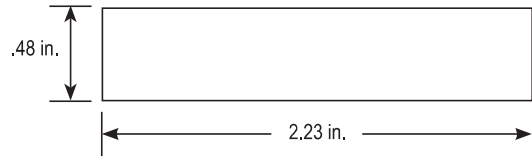

WARRANTY

Three year guarantee against breakage of polycarbonate in normal use (one year on electro mechanical and electronic components).
Electronic warranty form at www.sti-usa.com/wc14.


⚠ WARNING: This product can expose you to chemicals including Dichloromethane, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

ACCESSORIES

PART #	DESCRIPTION
KIT-71100A-*	COLOR MATCH BACK BOX KIT
* (R=Red, B=Blue, G=Green, W=White Or Y=Yellow)	
UB-1CL-*	CUSTOM LABEL APPLIED TO BLANK MESSAGE PLATES
* (B=Blue, G=Green, W=White Or Y=Yellow)	
UB-1LENS	BUTTON REPLACEMENT LENSES: (red, green & blue)
UB-2LENS	2" LENS KIT FOR UNIVERSAL BUTTON
KIT-UB-1C	CONTACT ASSEMBLY FOR UB-1

KIT-E10147	24 VOLT LED WHITE (STANDARD)
KIT-E10145	RED
KIT-E10141	BLUE

STI-6518	COVERS BOPPER STOPPER
STI-13000 Series	UNIVERSAL STOPPER
STI-1100 Series	STOPPER II®

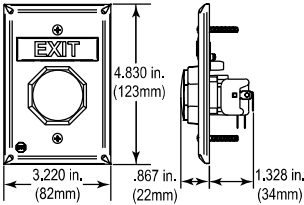

USA

– See website for complete cover details –



**Safety Technology
International**

2306 Airport Rd • Waterford, MI 48327, USA

Phone: 248-673-9898 • info@sti-usa.com • www.sti-usa.com

Taylor House • 34 Sherwood Road • Bromsgrove, Worcestershire • B60 3DR • England
Tel: +44 (0)1527 520 999 • info@sti-emea.com • www.sti-emea.com

Unit 7A • Lockhead Avenue • Airport Business Park • Waterford • X91 HWF2 • Ireland
info@sti-emea.com • www.sti-emea.com

Printed in USA

Inst. Sht. UB-1 Button AUG2022



EMEA