



SETTING UP YOUR PRODUCT

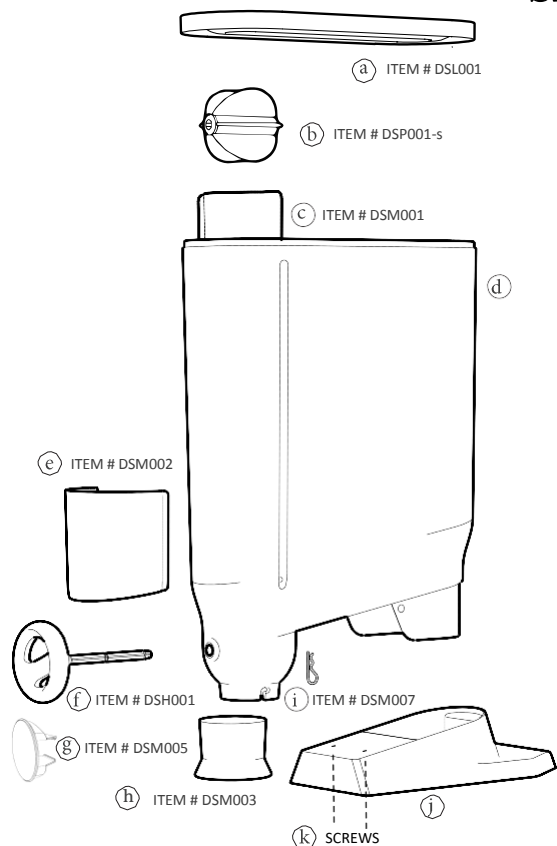

* TOOL AND RETENTION BRACKET NOT INCLUDED

RETENTION BRACKETS AVAILABLE:

- DSM265: HOLDS 2 DS101 DISPENSERS
- DSM400: HOLDS 3 DS101 DISPENSERS
- DSM900: HOLDS 6 DS101 DISPENSERS
- DSM1209: HOLDS 9 DS101 DISPENSERS

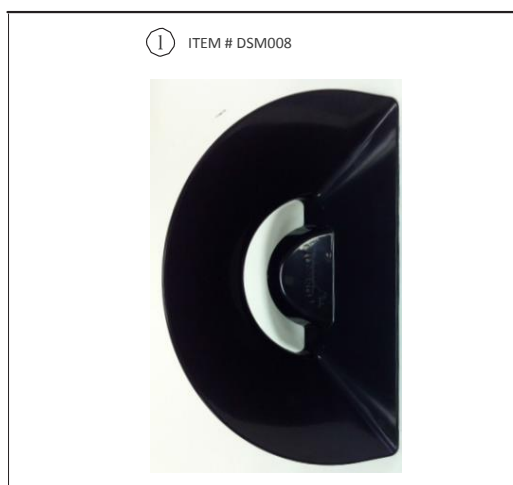

- Before setting up, consult your contractor on what to use based on your shelf material. Also, make sure that the total weight of all dispensers and products contained is within the shelf's capacity.
- Carefully remove all parts from packaging and poly bags. Before assembling, make sure you have all the parts listed below. If any piece is missing, please call +1 (847) 763 1215.
 - Lid
 - 1.5 oz. Portion Wheel
 - False Chamber
 - Container
 - Label Holder
 - Handle
 - Knob
 - Funnel
 - R Clip
 - Shelf Base Shelf
 - Container Screws
 - Filler Funnel
- If the false chamber (c) is installed in the container, gently pull it out and set aside.
- Refer to **Figure A**. Drop the portion wheel (b) into the allotted space at the front of the container (d). Align all the holes (on container and wheel).
- Push the handle (f) through the front, all the way to the back hole.
- At the tip of the handle is a hole for the R clip. Insert the straight side of the R clip (i) through this hole. See **Figure B**. A portion of the metal handle will rest under the middle ridge.

Figure A

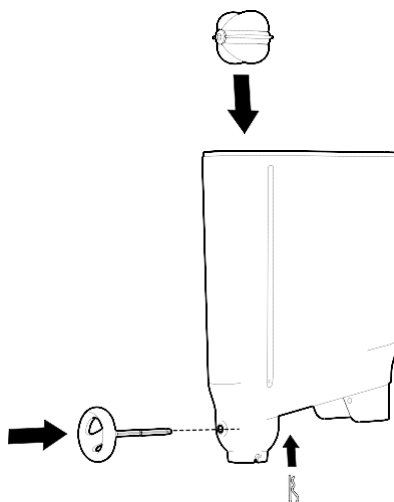


Figure B


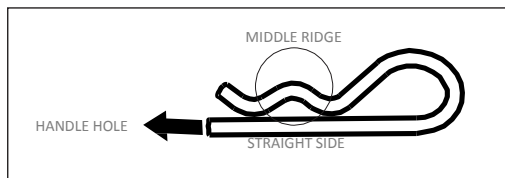


Figure C

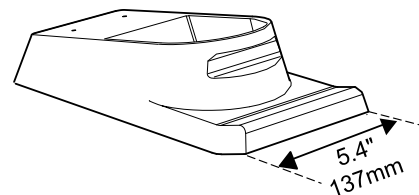


NEED ASSISTANCE?

Please contact customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3714 Jarvis Avenue, Skokie, IL 60076

Visit our website at: www.rosseto.com

7. Refer to **Figure D**. Match the bottom of the container to the allotted slot on the shelf base. Push down to snap in place.
8. Once the container is latched firmly onto the base, turn the whole thing over so you see the underside of the shelf base. Here, you will see 2 slots for screws. Install the screws (k) provided, then turn the container right side up.
9. On the bottom side of the false chamber (c) is a lip that folds outward. Slide the false chamber smoothly into the container, lip-side first. Make sure that the lip touches the inner side of the container's front panel.
10. If you wish, you may pour in the contents into the container at this time. Fill the false chamber first using the filler funnel (l), then fill the body. Securely place the lid (a) on top.
11. Hook the funnel (h) onto the container by connecting the inner nubs to the notches on the container's spout.

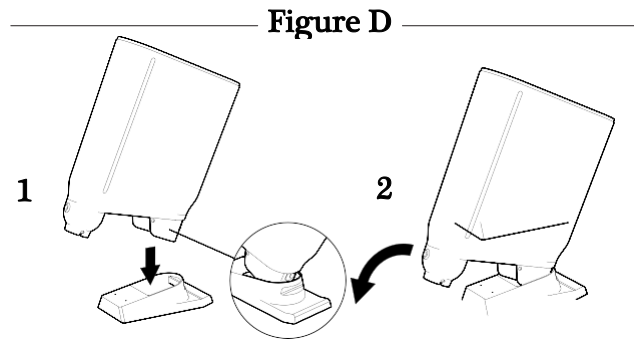

12. You have two options for label placement:


- Print your label on regular paper and cut to size (3.1" x 5.25" / 78.75mm x 133.35mm).

Place it under the curved label holder (e), with the printed side directly on the plastic piece.

Snap the label holder onto the assembled unit using the allotted ridges. The side edges should latch snugly onto the front of the container, right above the handle.

- Print your label on sticker paper and cut to size (2" Diameter / 50.8mm Diameter).

Peel and stick it onto the flat side of the plastic knob (g) and install the prepared piece onto the metal handle by pushing it through the notches in the middle.

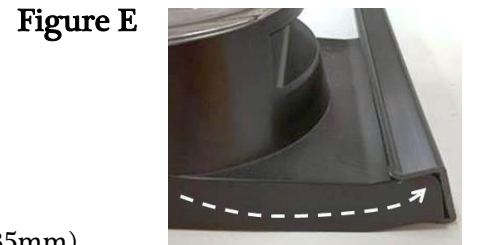


Your dispenser unit is now ready for use! Enjoy!

PRODUCT SPECIFICATIONS

Container Capacity: 3.5 gallons per unit

Assembled Product Weight: 7 lbs

*Also available with table-top leg (DS100) and bamboo shelf base (DS102)

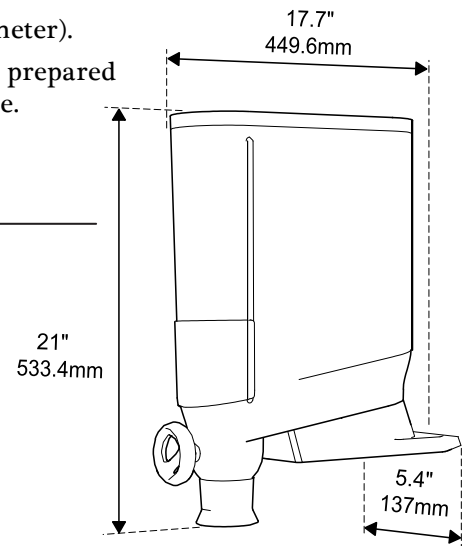

CARE INSTRUCTIONS

1. To maintain the quality of your EZ-SERV® Multi-System dispenser, wash all parts regularly in warm soapy water. Use a non-abrasive sponge.
2. **DO NOT put any part of the unit through any dishwasher or dryer machines.**
3. When disassembling the container, handle all parts gently. Please refrain from using too much force.
4. To keep the handle polished, you may use a commercial metal cleaner - however, remember to only use this on the outer portion and NOT on the shaft.
5. Reassemble the unit only after all parts are completely dry.



Please contact customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3714 Jarvis Avenue, Skokie, IL 60076
Visit our website at: www.rosseto.com